v0 noitenim19T (GREEN/WHITE) Termination 47v (WHITE/GREEN) (ORANGE/WHITE) **D** noitenimteT (AHITE/ORANGE) O noitenimie l (BLUE/WHITE) 8 notisenimme1 (WHITE/BLUE) A noitenimtel Colour Code for connection of 6 wire cable. . L 930N

installation is now complete.

e) The terminal can now be closed and plugged in. The .100J

British Telecommunications plc 1985 Registered Office 81 Newgate Street LONDON EC1A 7AJ Registered in England No. 1800000

Ambassador ESS and Senator Switching Systems

> Installation Instructions for **Bell Adaptor**

British TEL.ECOM

JARENAL

extension bell is plugged into at present. The enclosed bell adaptor takes the place of the existing secondary line jack unit, that the terminal requiring the

The Bell adaptor must be wired to the Central Control Unit (CCU), using 6 wire twisted pair cable.

6 wire twisted pair cable. Note: All wires are used. If an existing extension has been installed using 4 wire cable, then this must be replaced with

The terminal will require a 6 way line cord. If the existing cord is 4 way, this must be changed.

2. DETAIL

- a) Screw the bell adaptor to the wall in the required position.
- b) Using 6 wire twisted pair cable, connect the adaptor to the appropriate extension in the CCU.


termination in the CCU. See Fig. 1 & note 1. Connect A - A, B - B, C - C, D - D and 47v - 47v. Using the remaining wire connect 0v in the adaptor to the C

nordabbe ent **B.** It is important that separate writes are run from the °C termination in the CCU to the VD and °C terminations in

c) Connect the bell of tone caller, using appropriate caple to the 2 remaining terminations in the adaptor, labelled

Bell

to a bell adaptor. In the UN' hook position the tone caller will now ring instead of the buzzer, with the extension bell. On the p.c.b. tabelled SW1 of 'LINK A'. For safety reasons this must be left open (i.e. open circuit) when connected Loudspeaking terminal, also disconnected at the Mains Voltage Supply, open the terminal and locate a pin switch d) Ensuring first that the terminal is disconnected from the Bell Adaptor Line Jack Unit, and in the case of the

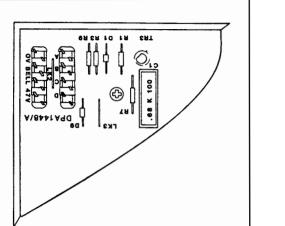

HOI JAUA JJAB . L'EIH

Issue number: 1 (9/85) Publication number: CP/MS 372