
THE LOHAM G.P.O. LAMP Nº 13 MARK II

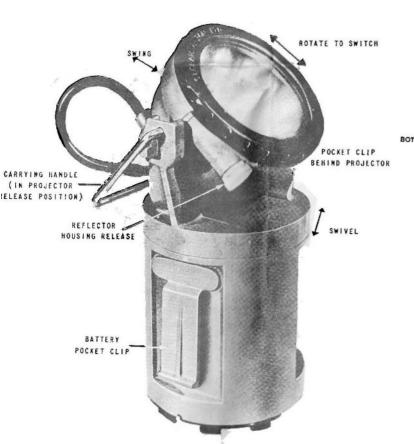

INSTRUCTIONS FOR USE

SWITCHING

Rotate the projector glass housing in either direction.

REPLACEMENT OF BULB

To remove the projector glass and reflector, pull out the white polythene knob on the projector and withdraw fully the attached cable. A spare bulb will be found attached to the interior of the projector housing by a spring clip. Do not replace the used bulb in this clip. To lock the projector glass in position, grip the projector between the pocket clip and glass and apply pressure. The plastic cable can then be fed back into the housing.

REPLACEMENT OF BATTERIES

Swing the bottom carrying handle through 1800 from the stowing position to unlock the base assembly. To release thim base, rotate through 60° in an anti-clockwise direction as indicated on the base.

TMPORTANT

When replacing the batteries ensure that they are inserted as indicated on the interior of the compartment. Replace the base assembly so that the points indicated by the letter A correspond, rotate clockwise through 60° and return clip.

REMOVAL OF PROJECTOR FOR CLIPPING TO POCKET

Rotate the top carrying handle to the release position and remove the projector, carefully feeding the cable from the cable reel section on top of the battery compartment. When rewinding the cable rotate the bottom section only in the direction indicated i.e. anti-clockwise in relation to the top section.

CORRECT

REWINDING

POSITION

