

CONTENTS OF TD1404

- 1 x Tandata TD1404 Base Unit
- 1 x Remote Keyboard
- 1 x Power Pack
- 1 x Television to Tandata connecting cable
- 1 x PP3 battery

SETTING UP THE UNIT

1. Insert the PP3 battery into the hand-held keyboard by sliding, to the left, the cover above the numbers 1-2-3.
2. Plug the power lead into the socket marked 'power' on the back of the base unit, and the plug into the wall socket.
3. Plug the telephone cable into the British Telecom socket.
4. The remaining cable can then be plugged into the 'TV' socket at the rear of the base unit, and plugged into the aerial socket at the rear of the television.
5. Switch on your television and the TD1404.
6. Select a spare channel and tune until the Directory appears. (Note:- you may have to 'store' the channel that you have tuned in the memory of the TV or the tuning will be lost when you select the channel again).

CONNECTION TO PRESTEL

1. Switch on your television and the TD1404 and select your Prestel channel. (If no picture appears, see 'setting up the unit').
2. Select the number from the directory you wish to dial (ie. 1 for Prestel).

The TD1404 will now automatically dial Prestel and enter your customer identity.

3. Enter your 4 digit personal password.

You will now see the Prestel front page. If you key , the main Prestel index will appear.

USEFUL FACILITIES

- | | |
|-------------|--|
| *# | - return to the last page viewed |
| *001 | - re-displays the present page (to refresh corrupted screen) |
| ** | - cancels an entry |
| *(number)# | - calls the page for the number typed |
| *KAYS# | - To access the Kays Teleshop |
| *WHITEAWAY# | - To connect to the Homebanking Database |
| *90# | - To leave Prestel |

IF YOU SHOULD EXPERIENCE ANY PROBLEMS, PLEASE CONTACT IAN WATSON ON 0905 23411 EXT. 4743