2. Local Battery Working

When communication is required between two telephones proceed as follows:—

- Set the three-position slider switch to the LB position; the internal battery is now in circuit.
- b) Connect the telephone to the line.
- c) Push the slider switch to the 'RING' position to call the other station. A tone will be heard in the receiver.
- d) Arrange with the other party which battery is to be in circuit as it is only necessary for one internal battery to be in use, therefore one telephone should have the slider switch in the LB (battery in circuit) position and the other telephone should be switched to the CB (battery out of circuit) position.
- To conserve battery and receive incoming calls always replace handset or remove headset plug from socket.

3. Tone Amplifier

A tone amplifier may be used to identify cable pairs. The tone can be heard in the telephone headset if the output of the amplifier is connected to the sockets in the linesmans telephone.



PYE TMC LIMITED

Commercial Division, Martell Road, West Dulwich, London SE21 8EF Telephone 01–670–2211 Telex 28115 Cables BUBASTIS LONDON.

LINESMAN'S TELEPHONE TYPES 704 & 1705 ISTALLATION AND OPERATING INSTRUCTIONS I.0.97/1



GENERAL

The Linesman's telephone is a portable instrument, suitable for connexion to all types of exchange line and designed for use by maintenance and field engineers. A three-position slider switch enables the internal battery to be switched in and out of circuit and in the non-locking position of this switch, connects ringing current from the transistorised generator to the line terminals. A jack is provided so that a headset (Pye TMC Headset S 508640) Cat.No. A437 can be plugged in and used as an alternative to the handset and two sockets enable the output from a tone amplifier to be connected to this receiver.

A polyurethane-impregnated nylon carrying case (Pye TMC Cat. No. A424) may also be used to give additional protection in use in very rugged conditions.

INSTALLATION

 Batteries. Three dry cells U2, R20 or equivalent (fully sealed types only) should be used. Unscrew the cap on the side of the instrument and insert the batteries ensuring they are correctly in series, outer end positive (+ve). Make periodic checks to make sure that cells are in good condition and not leaking.

- Connection to Line: When the telephone is connected to a pair in a cable that contains working circuits, disturbance to that circuit can be limited as follows:
 - a) Set the three-position slider switch in the C.B. position and connect telephone to line.
 - 704 telephone. Isolate the transmitter before removing handset from its cradle by pressing the button on the handset.
 1705 telephone. It is not necessary to press the handset button to isolate the transmitter as this model has a press to speak action.
 - Check that the line is not in use.

OPERATION

1. Central Battery and Automatic Working

- a) Check as in paragraph above that the line is not in use.
- b) If line is not in use, release or press transmitter button as appropriate.
- Dial the required number or make request to operator if on CB exchange line.
- d) When headset is used, replace the handset in its cradle after the number has been dialled. To clear the line, remove the headset plug from socket.

