


TELEPHONE N° 42. Mk. 2.  
(INCLUDING TELEPHONE N° 34.)

NI42. 3-3-17.  
EC. 540. 4/5

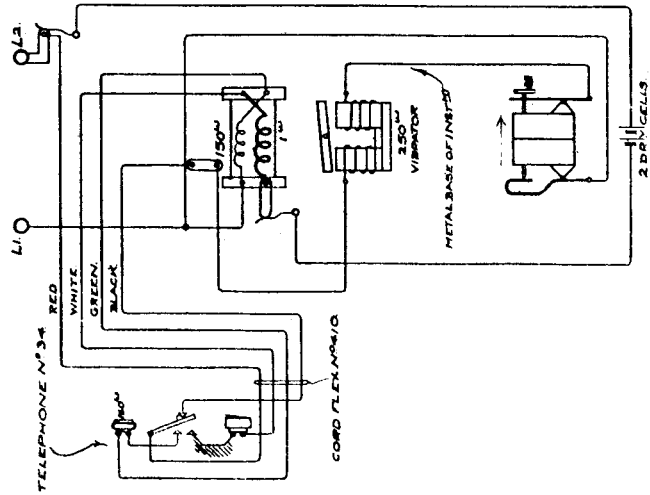

NOTE:—

THE 3 CONTACT KEY ON THE MICRO TELEPHONE MUST BE DEPRESSED FOR BOTH SPEAKING & LISTENING. CALLS ARE RECEIVED ON THE VIBRATOR OR BUZZER, WHICH IS IN CIRCUIT WHEN THE 3 CONTACT KEY IS IN THE 'NORMAL' POSITION.

