




FIG. 2. DIAL CIRCUIT.

PANEL 2.

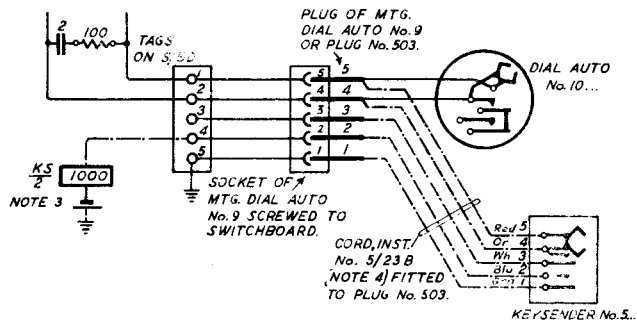

NOTES:-

1. A & B = INDICATORS No. 3300 B. C & S = RELAYS No. 502A. S = RELAY No. 508B. CB = COIL BRIDGING No. 6E.
2. IN MANUAL AREAS PART OF 1/11/55 WILL BE FITTED ON THE KEY No. 293 TO PREVENT MOVEMENT TO THE DIAL POSITION.
3. WHEN A KEYSENDER IS REQUIRED, WIRES MARKED 'X' TO BE CUT AND CONNECTED AS SHOWN. THE KEY No. 68 TO BE FITTED AT REAR OF HAND GENERATOR KEY AND SHOULD BE THROWN WHEN THE KEYSENDER IS REPLACED BY A DIAL. RELAY No. 509A, KS TO BE PROVIDED.
4. ON EARLY ISSUES OF KEYSENDERS THE COLOURS ON THE CORD, INST. No. 5/23 B WERE BLU, SL, BRN, PK, & OR, INSTEAD OF RED, OR, WH, BLU & GRN.
5. FIG. 4 SUPERSEDES FIG. 3 FOR NEW WORK.
6. WIRING SHOWN ——— EXISTING, WIRING SHOWN - - - - - TO BE PROVIDED.
7. WHEN NIGHT SERVICE IS REQUIRED, DISCONNECT WIRING AT POINTS MARKED \*', FIT KEY No. 289 AND WIRE AS SHOWN —○—○—.