




N 1098

2 PANELS I

FIG.2.DIAL CIRCUIT.

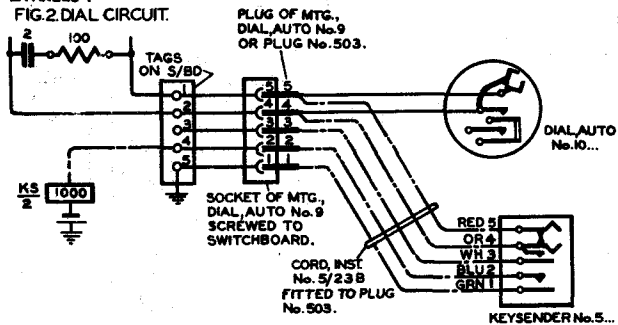

APPARATUS	RATE BOOK DESCRIPTION
A & B	INDICATORS No.3300 B
S&SS	RELAY No.506B
SA&SB	RELAY No.516 A
HR	COIL, BRIDGING No.6 E
KSR	KEY No. 172
YC & YD	RESISTORS, COIL No.12
FR & FS	COILS, RETARDATION No.39A
RB & DIAL KEY	KEY No. 293
AA&BB	RELAY No.506 A
NSK	KEY No.289
T & C	RELAY No.502 B

NOTES:-

1. IN MANUAL AREAS KEY,STOP No.1 WILL BE FITTED ON THE KEY No.293 TO PREVENT MOVEMENT TO THE DIAL POSITION.
2. THE ITEMS SHOWN DOTTED INDICATE THE CONNEXIONS FOR FITTING A KEYSENDER TO THE BOARD, THE WIRES MARKED 'X' TO BE CUT AND CONNECTED AS SHOWN.  
KEY No.68 TO BE FITTED AT THE REAR OF THE HAND GENERATOR KEY AND SHOULD BE THROWN WHEN THE KEYSENDER IS REPLACED BY A DIAL.