

CIRCULATION
CB & AUTO
Suffix

Amend
PAPER
W

CB & AUTO SYSTEMS
SUBSCRIBER'S EXTENSION PLAN I (INTERNAL ONLY)
ON EXCHANGE LINE OF EXTENSION PLAN 7 OR 7A (BELL-SET No. 20).
USING TELEPHONE No. 326... OR No. 1/232..., CAPACITOR, MC. 102 1/1 & BELL No. 56D

N4337
2 PANELS-1
22-7-53

NOTES :-

GENERAL

1. ONLY ONE PLAN I EXTENSION MAY BE FITTED.
2. THE DIAGRAM SHOWS A PLAN I EXTENSION ON THE EXCHANGE LINE OF A PLAN 7. THE EXCHANGE LINE IS TAKEN VIA THE PLAN I EXTENSION TO THE MAIN OF THE PLAN 7.
3. PLAN 7 OR 7A MAIN
FOR PLAN 7 CONNEXIONS REFERENCE SHOULD BE MADE TO DGM. N 4309, WITH THE FOLLOWING EXCEPTIONS :-
WHEN USING TELEPHONE No. 330... REPLACE BLOCK, TERMINAL No. 20/4 BY BLOCK, TERMINAL No. 20/12. REMOVE STRAP T8-T9 & TRANSFER CORD CONNEXION FROM T9 TO T8. CONNECT STRAP T1-T9 DISCONNECT T8 FROM KEY SPRING 2. WHEN USING TELEPHONE No. 1/232... WITH BELL-SET No. 20, CONNECT PRESS BUTTON "G" BETWEEN BT2-BT10.
4. IF AN EXTENSION BELL IS REQUIRED CONNECT BELL No. 64... IN PLACE OF STRAP BT3-BT4. USE CABLE IPR/10 OR 12 1/2 & CONNECT TO BELL TERMINALS 1 & 4 WITH 2 & 3 STRAPPED.

PLAN I EXTENSION

5. WHEN USING TELEPHONE No. 326... FIT CORD, INST. No. 4/57B & BLOCK, TERMINAL No. 20/4 & CONNECT STRAP T9-T12.
6. WHEN A SEPARATE BELL IS REQUIRED FIT TELEPHONE No. 1/232... & BELL No. 56D WITH COILS CONNECTED IN SERIES. CHANGE CORD, INST. No. 3/82B FOR CORD, INST. No. 4/57B. FIT BLOCK, TERMINAL No. 20/8 & CAPACITOR MC No. 102 1/1 & CONNECT LATTER BETWEEN BT5-BT6, CONNECT STRAP BT4-BT5.
7. FOR AUTOMATIC WORKING USE APPROPRIATE TELEPHONE e.g. TELEPHONE No. 1/232 F.
WHEN USING TELEPHONE No. 326 CB THE FOLLOWING ITEMS SHOULD BE FITTED :-
DIAL, AUTOMATIC No. 10... & CORD, INST. 5/28E.

THE FOLLOWING DIAGRAMS SHOW THE INTERNAL CONNEXIONS OF :-
TELEPHONE No. 326... DGM. N 426
TELEPHONE No. 330... DGM. N 430
TELEPHONE No. 1/232... DGM. N 332
BELL-SET No. 20 DGM. N 520

N4337
2 PANEL 9-2

