

HOUSE EXCHANGE SYSTEM.

Plug Point Connections on Instruments & Units.

Q(L)152. 3. 4.35

 
Title of Apparatus

Plug Point Numbering. Plug, No. 4001.


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40




Telephone, Intcm No.2.




Telephone, Intcm No. 1.

 


Unit, Transfer Intcm., No.2

 

Unit, Transfer Intcm., No. 1.

 

Unit, Transfer Intcm., No. 1.A.

 

Unit, Transfer Intcm., No.3.

5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28

Plug Point Numbering, Plug, No.2404.

- CM = Common
- BT = Battery
- EB = Extension Bell
- HL = Home Line
- R = Ring
- TR = External Extension Indicator Transfer
- S = Spare wire terminated
- o = Spare terminal

14	7	38	A						
L added to Q 152									
Amendment.									

Y