
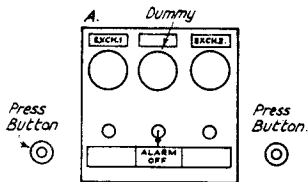



HOUSE EXCHANGE SYSTEM.

UNIT , TRANSFER , INTERCOM., No.2.

Q(L) 155. 9-5-35

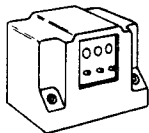


For use at
MAIN STATION
 When no 2nd choice
 Main Station fitted
 OR at
 2nd choice Main
 Station on installations
 having no external
 extension.

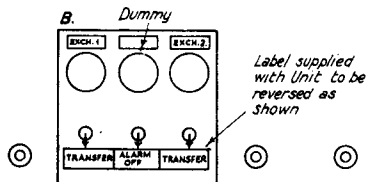

For use at
**1ST CHOICE
 MAIN STATION**
 When 2nd choice Main
 Station fitted.

Label No.77A
 (to be fitted locally) Indicator No.400K
 (to be fitted locally)

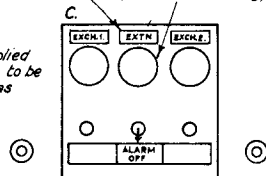

For use at
**2ND CHOICE
 MAIN STATION**
 on installations with
 external extension
 (Unit, Transfer, Intercom No.2
 together with Unit Transfer
 Intercom No.3 are fitted at
 1st Choice Main Stations on
 these installations
 See Q.156 For Unit, Transfer
 Intercom., No.3)

NOTE.

A & B are used only on installations with no external extension.