
GENERAL Amend

HOUSE EXCHANGE SYSTEM EXPLANATORY ELEMENTS

MULTIPLE STATION CALLING AND SPEAKING TO MULTIPLE STATION.

Q(L) 302 2 PANELS-1 21-2-53

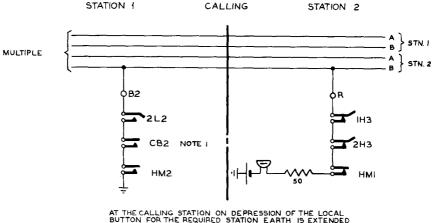

NOTE :-

I. COMMON BANK IS OPERATED IN RINGING POSITION OF LOCAL BUTTON.

VIA THE MULTIPLE B WIRE TO OPERATE THE BUZZER.

KEY CODES:H-HOLD EXCH.
L-LOCAL
CB-COMMON BANK
HM-CRADLE SWITCH

STATION I SPEAKING TO STATION 2 MULTIPLE **QHL** φA2 фВ2 2LI 2L2 **1H3** HMI CB₂ RA 200 200 200 200 HMI KEY CODES:-STN. 2 TELE. X- SPEAK EXCH. STN. I TELE. H-HOLD EXCH. THE ABOVE SHOWS THE SPEAKING CONDITION, TRANSMISSION CURRENT IS SUPPLIED VIA RETARDS AT EACH STATION L-LOCAL. CB-COMMON BANK. HM-CRADLE SWITCH,