

HOUSE EXCHANGE SYSTEM


EXPLANATORY ELEMENTS.

Q(L)304

21-2-53

MULTIPLE STATION CALLING & SPEAKING TO EXCHANGE

STATION	GENERAL	
	Suffix	
Circuit		
Notes		

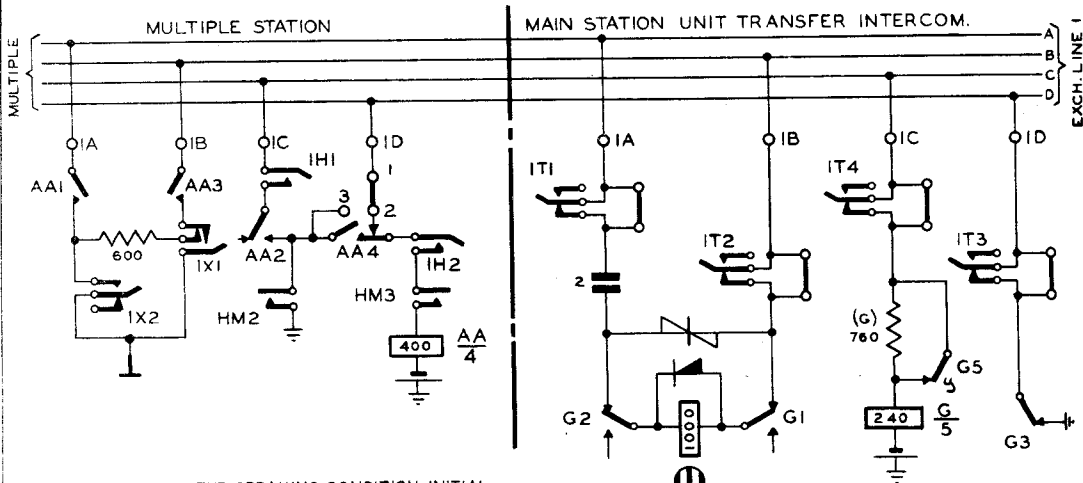

THE ABOVE SHOWS THE SPEAKING CONDITION. INITIAL CALLING CONDITION WITH CONTACTS AA4 & G3 NORMAL, AA RELAY OPERATED OVER CONTACT AA4, D WIRE & G3 & LOCKS VIA AA4. G RELAY OPERATED OVER C WIRE BY AA2 TO EARTH AT HM2, G3 REMOVED EARTH FROM D WIRE TO PREVENT INTRUSION FROM OTHER STATIONS.

KEY CODES :-

X - SPEAK EXCH.

H - HOLD EXCH.

HM - CRADLE SWITCH