HOUSE TELEPHONE SYSTEM.

EXPLANATORY ELEMENTS

NORMAL CONDITION STATION 1-HMT ON.

Q(L) 353 4 PANELS -1

5-5-59


HM4 NOTE 3 NOTE 2 LAST lwz. NOTE

NOTES:-

- 2. WIRED SIMILARLY FOR 5,10,00 IS LINE SYSTEMS.
- 3. HM4 SRINGS ARE OPERATED BY PRESS BUTTON FULLY DEPRESSED AND NOT BY RECEIVER REST

Q(L) 353

## EXPLANATORY ELEMENTS. CALLING CONDITION STATION | CALLING STATION 2 - HMT OFF, BUTTON DEPRESSED.

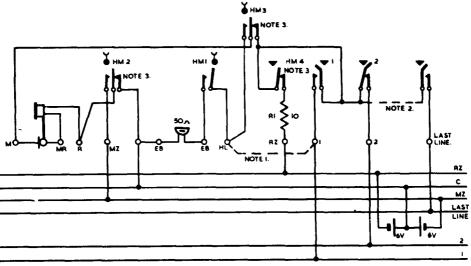


NOTES:- IL HE IS CONNECTED TO HOME STATION TERMINAL

- 2. WIRED SIMILARLY FOR 5, 10, OR 15 LINE SYSTEMS.
- 3. HM 2 & HM 3 MECHANICALLY RESTORED TO "HMT ON POSITION AND HM4 IS OPERATED, WHEN PRESS BUTTON FULLY DEPRESSED FOR CALLING.


MADE WHITE, MINOR MODS.

EXPLANATORY ELEMENTS
ANSWERING CONDITION
STATION 2 - HMT OFF

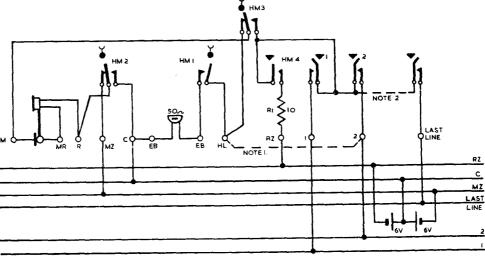

Q(L) 353

EXPLANATORY ELEMENTS.
CONVERSATIONAL CONDITION
STATION 1 SPEAKING TO STATION 2 - HMT OFF.

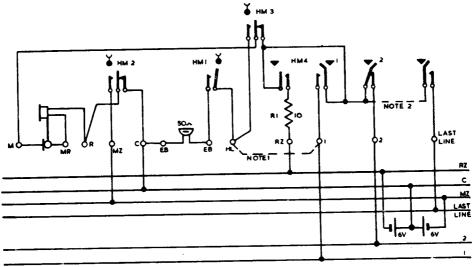

NOTES:- L HL IS CONNECTED TO HOME STATION TERMINAL.

- 2. WIRE SIMILARLY FOR 5,10, OR 15 LINE SYSTEMS.
- 3. HM2 & HM3 MECHANICALLY RESTORED TO "HMT ON" POSITION WHEN PRESS BUTTON DEPRESSED FOR SPEAKING TO STATION PREVIOUSLY RUNG.