

TD Callmaker

The TD Callmaker enables you to call any one of up to 31 telephone numbers simply by pressing a selected button on a compact desk or wall unit adjacent to your telephone.

Numbers can easily be added, altered or removed as required.



Description

The equipment for the TD Callmaker is contained in a unit placed beside the telephone or fixed to a nearby wall. On the right-hand side of the unit there are two columns of 14 push-buttons, making 28 in all. 27 of these are address buttons giving access to the stored telephone numbers. Between the two columns of buttons there are panels, on which you can write an identification of each stored number. The remaining button, at the bottom of the right-hand column, is the "repeat-last-number" button. The TD Callmaker remembers the last number called using the push-button keypad, which is incorporated on the left-hand side of the unit. That number can be called again simply by pressing the "repeat last number" button.

In addition to the push-button keypad, the left-hand side of the unit has four more address buttons, which are intended for your most important calls. There are two further buttons, "record on" and "record off", which are used to input numbers into the store. Full programming and operating instructions are provided.

How it operates

To call a number already in the store, lift the telephone handset, wait for dial tone and press the appropriate address button. At the end of the call, replace the handset in the normal way.

To store or change a number

Use a soft pencil (to allow easy amendments) to complete the address panel in the space provided alongside the appropriate address button. With the telephone handset on the rest, press and release the "record on" button (the record indicator will light). Press and release the chosen address button.

Record the required digits by using the push-button keypad on the left-hand side of the callmaker unit. Press and release the "record off" button. (The record indicator will go out.) If you make an error while recording, do not attempt to correct it, but start again from the beginning of the recording process. Any previous recording on the selected address button will be erased automatically when a fresh number is recorded.

To call a number not in the store

Use the associated telephone in the normal way.

Alternatively lift the telephone handset, wait for dial tone then call the required number using the push-button keypad.

Repeat last number

The "repeat last number" button will automatically recall the number which you last called using the push-buttons on the left-hand side of the unit. Simply lift the telephone handset, wait for dial tone and press the "repeat last number" button in the lower right-hand corner of the unit. (Note – this button does not operate in connexion with the 31 address buttons. To recall any of these, simply press the appropriate address button.)

General information

The TD Callmaker can be used with most types of telephone from which calls can be made. The desk or wall unit is simulated wood and black or off-white in colour.

The TD Callmaker is powered by a wall-mounted mains unit in a grey metal case. A 3-pin mains supply socket of at least 2-amp rating has to be provided by the customer. The mains supply must be connected at all times.

Dimensions

Width	140mm
Length	215mm
Depth	75mm (maximum)

Please note

We do our best to supply our customers with the apparatus they ask for but we may have to provide apparatus which does not accord exactly with the descriptions, illustrations and shades of colours shown in this leaflet.

Your Telephone Sales Office will gladly supply any further information or details of any changes in the information in this leaflet since it went to print. The address, telex and telephone numbers are shown in the preface of your Telephone Directory. Information on a wide range of our services and apparatus is contained in the Green Pages section of most Telephone Directories.

