

The Kirk Loudspeaking Telephone

from British Telecom



A new and exciting way
to talk on the telephone


The Kirk Loudspeaking Telephone

The latest in the range of loudspeaking telephones the Kirk brings you the benefit of hands-free telephone communication with these advantages:

- Your hands are free to take notes.
- Two or three people can take part in a telephone conversation at the same time.
- Simple operation.
- Volume of loudspeaker and handset is adjustable.
- The telephone can be used in the normal manner, when privacy is required.

When your phone rings – simply press a button and talk.


Available in 6 colours: Brown, White, Green, Yellow, Orange or Lava, the Kirk also has an electronic tone-caller which permits a choice of 4 calling tones.

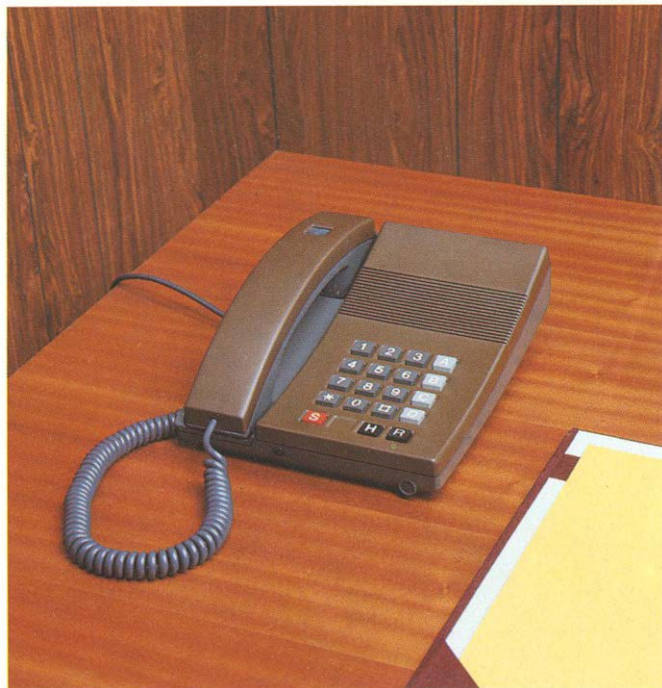

Lava



Green

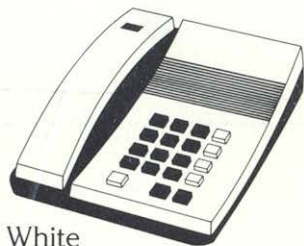

White



Yellow



Orange

How to operate

TO USE KIRK AS A LOUDSPEAKING TELEPHONE

Push the button marked **H** forward and down to lock in.



To make a call

- 1 Lock the **S** button by pressing forward and down. The red control lamp will flash.
- 2 Dial tone will be heard through the loudspeaker.
- 3 Dial the number required using the press-buttons, ringing tone will be heard through the loudspeaker.
- 4 When the called party answers, speak in the direction of the instrument.

Important The KIRK loudspeaking telephone is voice switched and if both parties speak at the same time neither will be heard clearly.

- 5 At the end of a call, or if the number is engaged or does not reply, press the **S** button down and back. The control lamp will go out.



To answer a call

Check the **H** button is down.

- 1 Depress the **S** button by pushing forward and down; the control lamp will flash.
- 2 You may now speak to the caller.
- 3 At the end of the call press the **S** button down and back; the control lamp will go out.

Privacy during a call

Should you wish to hold a conversation, or make an aside, during a call. When KIRK is being used as a loudspeaking telephone the **H** button may be restored (by pressing down and back) this disconnects the microphone from the circuit so that you will not be overheard. When you are ready to continue repress the **H** button down and forward to switch the microphone back into use.



To change to the handset during a hands-free conversation

Lift the handset, the **S** button will restore automatically.

To change to the loudspeaking facility whilst using the handset

- 1 Ensure the **H** button is down and locked.
- 2 Press the **S** button down and forward and hold down; the red control lamp will flash.
- 3 Replace the handset, ensuring the **S** button is locked.



To use KIRK as an enhanced facility telephone

Check that the **H** button has been restored.

- 1 Lock the **S** button by pushing forward and down, dial tone will be heard.
- 2 Call the number required using the press-buttons, ringing tone will be heard.
- 3 When the called party answers, lift the handset, this will restore the **S** button, and speak.
- 4 At the end of a call, or if the number is engaged, or does not reply, press the **S** button down and back to disconnect the line.

Dimensions


180mm wide x 225mm deep x 90mm high.

Weight 1.2 kgs.

Please note: We do our best to supply our customers with the apparatus they ask for, but we may have to provide apparatus which does not accord exactly with the descriptions,

illustrations and shades of colour shown in this leaflet. Your Telephone Sales Office will gladly supply any further information, details of charges or any changes in the information in this leaflet since it went to print.

 The address, telex and telephone numbers are shown in the preface of your Telephone Directory.

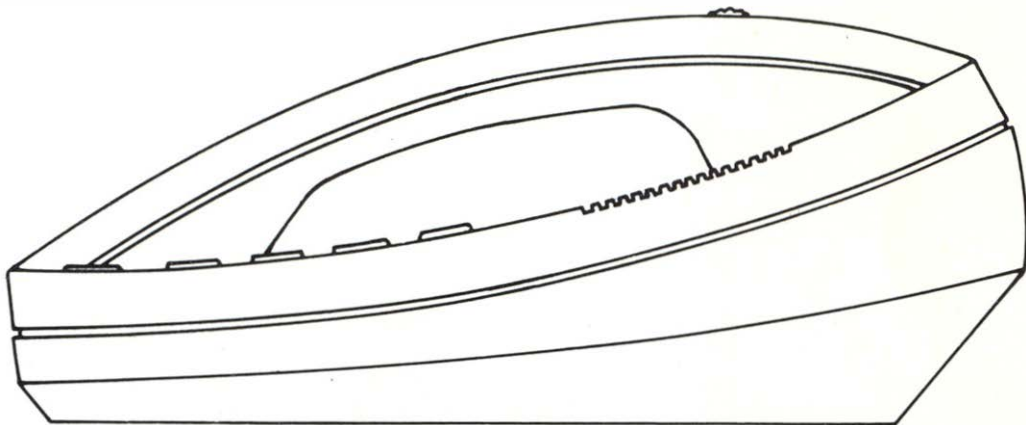

British
TELECOM