

SECTION Ⅴ

NUMERICAL INDEX

PAGES Ⅴ-1 THROUGH Ⅴ-31

Part Number	Description	Page	Part Number	Description	Page
BPC200	Cover	I-47	1169	Screw (6-40 x 7/16 Fil.)...I-10;IV-4	
MU1	Motor Unit	I-43,45	1174	Screw (4-40 Shoulder)..... I-23,54	
MU2	Motor Unit	I-43,44,45	1176	Screw (6-40 x 3/16 Fil.)I-2,21,25,67	
MU3	Motor Unit	I-43,45;IV-3	1178	Screw (2-56 x 7/16 Fil.)..I-58,60,68	
MU4	Motor Unit	I-41,45	1179	Screw (6-40 x 5/8 Fil.)...I-41,42,73	
MU5	Motor Unit	I-43,45	1192	Screw (10-32 x 2-9/16 Fil.).....I-64	
MU7	Motor Unit	I-41,45	1196	Screw (6-40 Shoulder).....I-14,17,22	
MU8	Motor Unit	I-41,45			25,65
MU11	Motor Unit	I-43,44,45	1206	Screw (4-40 x 9/16 Fil.)...I-7,65,72	
MU12	Motor Unit	I-43,45	1208	Screw (10-32 x 5/8 Fil.)..I-15,17,18	
MU15	Motor Unit	I-42,45			III-1
MU27	Motor Unit	I-43,44,45	1210	Screw (2-56 x 5/8 Fil.)..I-52,56;II-2	
MU28	Motor Unit	I-43,44,45	1222	Screw (2-56 x 1/2 Fil.)..I-8,50,53,73	
MU32	Motor Unit	I-43,44,45			74;II-1,2
MU33	Motor Unit	I-42,45	1224	Stud (6-40 Special).....I-1	
MU35	Motor Unit	I-43,44,45	1226	Screw (6-40 x 3/4 Fil.)...I-5,17,64	
169M	Magnet	I-6			65,74;II-1,2
177M	Coil (105 Ohms).....	I-32	1245	Screw (10-32 x 1 Fil.)...I-1,6,15,18	
195M	Coil (100 Ohms).....	I-8			IV-1
196M	Coil (70 Ohms).....	I-7	1248	Screw (6-40 x 1/2 Flat Hd.)..I-18,24	
198M	Coil (72 Ohms).....	I-70			70,72
207M	Coil (100 Ohms).....	I-29	1266	Screw (6-32 x 7/16 Rd.Hd.).....I-44	
217M	Coil (950 Ohms).....	I-7	1268	Screw (6-40 x 5/16 Flat Hd.)..I-10,49	
228M	Coil (72 Ohms).....	I-72	1269	Screw (6-40 x 1/2 Fil.)..I-1,13,25,27	
1010	Screw (6-40 Shoulder).....	I-23			58,67;IV-4
1020	Screw (6-40 x 1/4 Hex).....	I-16	1275	Screw (10-32 x 1-1/2 Rd.Hd.)... I-1	
1026	Screw (6-40 x 3/8 Fil.)..I-5,6,7,18		1291	Screw (6-32 x 3/4 Flat Hd.)... I-49	
		20,24,59			III-2
1028	Screw (4-40 x 1/4 Fil.)..I-2,5,6,7		1294	Screw (4-36 x 1/2 Flat Hd.)...III-2	
		32,45,70	1297	Screw (6-40 x 2-7/16 Fil.)..I-2,7,10	
1030	Screw (6-40 Shoulder)I-31,32,47,51				44,59,64
1035	Screw (4-40 x 3/8 Hex)....I-34,50		2034	Washer..... I-50,70	
1036	Nut (6-40 Hex)..... I-17		2191	Lock Washer...I-1 to 7, 10 to 25,27	
1038	Screw (6-40 x 9/32 Fil.)....I-7,13				29 to 34,41 to 54,56 to 74;
		19,71			II-1,2,3;III-1,2,3;IV-3
1041	Screw (6-40 Shoulder)	I-74	2199	Nut (7/16-32 Hex).....I-11	
1043	Screw (10-32 x 5/16 Rd. Hd.).. I-59		2201	Nut (5/16-32 Hex).....I-21	
1050	Screw (6-40 x 7/32 Fil.)...I-31,32		2248	Pin.....I-24	
1051	Screw (4-40 x 1/2 Fil.)....I-3,64		2291	Contact Spring.....I-3	
1064	Screw (6-32 x 1/4 Rd. Hd.)....I-2		2322	Lock Washer.....I-18;IV-1	
1072	Screw (6-40 Thumb)..... I-47,68		2378	Spacer Key Lever.....I-10	
1073	Screw (6-40 Thumb).....I-31,32,57		2382	Lock Washer.....I-14	
		67	2407	Lock Washer.....I-12,45	
1079	Screw (6-32 x 5/16 Fil.).....I-42		2422	Lock Washer.....I-52,63;II-1	
1086	Screw (4-40 x 3/8 Headless)...I-74		2438	Washer.....I-6,32,45,70	
1095	Screw (4-40 x 5/32 Hex).....I-69		2449	Lock Washer...I-6,14,17,22,23,26,28	
1097	Screw (4-40 x 15/32 Fil.)..I-34,56				41,42,43,51
1118	Screw (6-40 Shoulder)..... I-70		2451	Bearing Ball.....I-22,23	
1159	Screw (4-40 x 3/8 Fil.)..... I-51		2502	Mounting Plate	I-12
1160	Screw (6-40 x 5/16 Fil.)....I-1,14		2503	Plate.....I-12	
		17,19,20,32,51,57,70	2504	Insulator.....I-12	
1161	Screw (6-40 x 1/4 Fil.)....I-14,19		2525	Key Lever Guide-Front.....I-10	
		22,24,50,51,62,63,74;II-2	2526	Spacing Collar..... I-12	
1162	Screw (4-40 x 1/4 Fil.)..I-7,22,23		2528	Spring Plate..... I-10	
		25,47,50,56,58,64,68	2529	Bushing..... I-12	
1163	Screw (4-40 x 3/16 Fil.)..I-4,22,27		2539	Nut (3/8-32 Hex)..... I-14,15,52	
		64;II-1;III-3	2565	Key Lever Spring	I-10,40
1166	Screw (4-36 x 1/4 Flat Hd.)....I-1		2574	Upstop	I-10
1168	Screw (4-40 x 5/16 Fil.)..I-3,15,22		2623	Spring..... I-12	
		23,57,70	2663	Bumper-Rubber..... I-10	

Part Number	Description	Page	Part Number	Description	Page
2666	Nut (3/16-40 Hex).....	I-23	5740	Screw (2-56 x 1/4 Pil).....	I-63
2669	Lock Washer...I-1 to 7,14 to 20,22,23 24,29,34,41,42,43,45,51 52,59,61,65;II-1;III-1,3		5816	Washer-Fiber.....	I-6
2719	Washer.....	I-24	6345	Nut (6-32 Hex).....	I-46,67
2836	Spring.....	I-72	6685	Sword.....	I-30,33
2846	Washer.....	I-41,42,43	6689	Separator Plate.....	I-30,33
2924	Contact Spring.....	I-3	6706	Bracket.....	I-32
2980	Retaining Strap.....	I-5;IV-1	6712	Spring.....	I-68
3106	Turnbuckle.....	I-14	6745	Screw (10-32 x 1/2 Hex)....	I-1,2,3,5,6 7,14,15,19,22,23,34,52,65;II-1;III-3
3110	Nut (10-32 Hex L.H.).....	I-14	6746	Screw (6-40 x 5/16 Hex)..	I-1,6,7,10 to 15,17,18,20,22,23,25,27,29,30 32,33,41,42,43,45,50,52,54 56,63,64,68,70,72;II-3
3131	End Link - Short.....	I-14	6760	Shim (.004").....	I-20
3288	Washer.....	I-21	6799	Screw (6-40 Shoulder).....	I-31,32
3298	Eccentric.....	I-17,32	6800	Screw (6-40 Shoulder)....	I-17,23,24,25 51;IV-1
3339	Nut (9/16-32 Hex).....	I-24	6801	Screw (4-40 Pilot).....	I-31,32
3340	Lock Washer.....	I-24	6805	Screw (6-40 Shoulder).....	I-12,23
3438	Washer...I-2,5,7,10,18,20,47,52,59,70		6807	Screw (6-40 x 3/16 Set).....	I-52,58
3458	Shim (.015").....	I-10	6810	Screw (10-32 x 3/8 Hex)....	I-2,4,14,15 18,34
3571	Bushing.....	I-8,50,53,73,74;II-1	6811	Screw (6-40 x 5/8 Hex)...	I-1,3,4,12,14 16,17,29,32,41,42,43,50,52 60,61,64,65,68,71,72,74;II-1,2;IV-2
3595	Nut (1/4-32 Hex)...I-6,14,17,26,28,51		6814	Screw (6-40 Pilot).....	I-12,50
3598	Nut (6-40 Hex)....I-1,10,12,14,17,18 19,22 to 25,27,29 to 34,44,46 47,49 to 52,54,57,60,61,63 65,67,69,70,71,72;II-1;III-1,2;IV-3		6827	Connection Block.....	I-2
3599	Nut (4-40 Hex)...I-3,7,10,11,22,23,25 27,29,34,44,50,51,52,54 56,60,62,63,64,68,70;III-3		6827	Trip Latch.....	I-32
3603	Nut (1/4-32 Hex).....	I-14,19	6836	Yoke.....	I-32
3606	Nut (6-40 Hex)...I-7,10,19,23,29,49,52 58,63,64,68;II-1;III-1,2;IV-4		6850	Bell Crank.....	I-32
3610	Spring.....	I-54	6859	Spacing Collar.....	I-19
3618	Insulator.I-6,8,50,53,56,73,74;II-1,2		6863	Cam Sleeve Disk.....	I-16
3624	Washer.....	I-68	6884	Bracket.....	I-32
3640	Lock Washer....I-2,3,6,7,11,12,15,17 22 to 25,27,31,32,34,44 to 48 50 to 56,58,60,62,64,66,68,69,70 72,73;II-1;III-2,3		6909	Stop Pawl.....	I-31,32
3646	Lock Washer.I-2,6,7,10,24,59,64,70,72		6940	Spring Post.....	I-20,23
3647	Insulator...I-6,8,50,53,56,73,74;II-2		6942	Screw (4-40 Eccentric).....	I-12,32
3649	Washer.....	I-18	6966	Screw (4-40 Eccentric).....	I-31,32
3650	Washer-Brass.....	I-5,6,7	6970	Nut (3/8-32 Hex).....	I-24
3870	Spring.....	I-7	6971	Clutch Throw-Out Lever.....	I-30,33
3897	Bushing.....	I-4,58,66	6987	Washer.....	I-19,60
3899	Collar.....	I-6	6990	Screw (1/4-32 Pilot).....	I-30,33
3949	Spacer.....	I-53,73	6993	Spring.....	I-16
4293	Insulator.....	I-3,4,58,66	7001	Washer.....	I-19,30,33
4323	Ball.....	I-16	7002	Washer.....I-1,4,6,7,10 to 13,17,19 to 25,27,29,31,32,34,41 to 47 51 to 54,56 to 74;II-1,2,3;III-3	
4703	Spring.....	I-23	7007	Trip Plunger.....	I-31,32
4708	Spring.....	I-29,35;IV-3	7022	Reverse Lever-Left.....	I-23
4730	Spring.....	I-69	7023	Reverse Lever-Right.....	I-23
4810	Wick.....	I-11	7024	Reverse Pawl-Left.....	I-23
4812	Wick.....	I-19	7025	Reverse Pawl-Right.....	I-23
4814	Lock Washer.....	I-1,21,26,28	7032	Pawl.....	I-12
4851	Terminal.....	I-32,59,72	7036	Collar.....	I-25,27
4852	Lock Washer.....	I-18,69	7044	Link.....	I-23
4871	Bolt (10-24 x 4 Rd.Hd.).....	I-6,45	7093	Terminal Block.....	I-4
4881	Stiffener.....	I-12	7094	Connection Spring....	I-1,4,60,64,65,68 71,72,74;II-1,2
5017	Spring.....	I-7	7095	Retainer Plate....	I-1,4,60,64,65,68,71 72,74;II-1,2
5446	Screw (6-40 x 9/16 Pil).....	I-18	7096	Bushing.....	I-3,4
5475	Nut (3/16-40 Hex).....	I-29			

Part Number	Description	Page	Part Number	Description	Page
7105	Target-10 Spot.....	I-41,43	8896	Shim (.004").....	I-7,12,17,19,21,70
7318	Contact Lever.....	I-12	9177	Contact Spring.....	I-12
7334	Post.....	I-10	9178	Contact Spring.....	I-12
7339	Cam Sleeve (7.00).....	I-11	9182	Shaft.....	I-12
7372	Bearing.....	I-11	9203	Bracket (with Rollers).....	I-10
7373	Bearing Bushing.....	I-12	9209	Key Lever (with Disk).....	I-10
7377	Lock Loop.....	I-12	9210	Key Lever (with Disk).....	I-10
7381	Contact Mounting Assembly.....	I-12	9695	Plunger.....	I-6
7382	Bracket - Front.....	I-12	21397	Spring Washer.....	I-34
7383	Nut.....	I-12	22015	Spring.....	I-74
7385	Bracket (with Posts) - Rear.....	I-12	31636	Spring.....	I-54
7386	Stud.....	I-12	33038	Spring.....	I-63
7387	Brace.....	I-12	34432	Washer.....	I-3,4,15,17,18,19,22 23,25,31,32,34;III-1,3
7389	Driving Clutch.....	I-11	34444	Spacing Collar.....	I-69
7391	Driven Clutch.....	I-11	34464	Spring.....	I-35,71
7396	Bracket - Left.....	I-10	35503	Foot-Rubber.....	I-1
7397	Bracket - Right.....	I-10	35826	Washer.....	I-14
7398	Retainer Plate.....	I-3,4,58,66	35858	Margin Bell.....	I-15
7399	Stiffener.....	I-3,4,58,66	36273	Washer.....	I-11,12,23,44,69
7409	Clutch Lever.....	I-12	41177	Screw (8-40 x 9/64 Fil.).....	I-24
7482	Key Lever.....	I-10	41181	Knob.....	I-24
7602	Spring.....	I-31,32	41341	Crank Handle.....	I-24
7603	Spring.....	I-31,32,71	41342	Screw (8-40 Shoulder).....	I-24
7607	Collar.....	I-31,32	41543	Ball Bearing.....	I-18
7612	Spring.....	I-32	41663	Washer.....	I-12
7614	Spring.....	I-30,33	41675	Washer.....	I-21,23,25
7615	Spring.....	I-30,33	41720	Contact Spring.....	I-66;III-3
7634	Spring.....	I-22,23,36,69;II-2,3;IV-3	41732	Retainer Plate.....	I-3,7,58,62,64,65,71 72;II-1,2;III-3
7654	Shim (.004").....	I-60	41733	Insulator.....	I-3,58,62,64,66,71,72 II-1,2;III-3
7661	Adjusting Lever.....	I-43	41746	Bushing.....	I-66;II-1
7678	Screw (4-40 Pilot).....	I-24,52	41820	Contact Spring.....	I-71
7679	Roller.....	I-24	41830	Contact Spring.....	III-3
7835	Ribbon - Black.....	I-21	42823	Washer.....	I-55
7959	Magnet Bracket.....	I-6	43838	Cotter Pin.....	I-7
7965	Spring.....	I-51	43954	Bell.....	I-18
8097	Cam Sleeve (7.42).....	I-11	44048	Washer.....	I-46,64
8157	Selector Lever - Right.....	I-30,33	45104	Spring.....	I-25,70
8158	Selector Lever - Left.....	I-30,33	45333	Screw (8-40 x 7/16 Hex).....	I-6
8184	Washer.....	I-24	46092	Nut (10-32 Hex).....	I-14
8222	Wearing Strip.....	I-43	49385B	Insulator.....	II-1
8254	Cable Clamp.....	I-4	49396B	Washer.....	I-61
8308	Cable Clamp.....	I-4,70	55063	Spring.....	I-25
8330	Washer.....	I-22,43,70,71	55080	Bezel.....	I-10
8472	Locking Wedge.....	I-32	55088	Spring.....	I-17,24;IV-2
8486	Spring Post.....	IV-1	7C177	Screw (6-40 Pilot).....	I-10
8507	Cam Sleeve (Stamped "CX").....	I-33	70324	Bearing.....	I-11
8508	Armature.....	I-32	70464	Nut (8-40 Hex).....	I-70
8511	Locking Lever.....	I-33	70470	Locking Bar.....	I-13
8514	Stop Plate.....	III-2	70529	Stiffener.....	I-3,64,71;II-1,2
8539	Screw (6-40 x 1/2 Hex).....	I-1,2,4,6,7,10 11,16,17,19,21,22,24,25,27,32 46,52,58,65,66,69,72;III-3	70593	Screw (6-40 Thumb).....	I-15
8543	Screw (6-40 x 1/4 Fil).....	I-25,27,49,58 59,73;IV-4	70707	Bracket.....	I-6,45
8671	Screw (6-40 Shoulder).....	I-50	70724	Insulator.....	I-6,45
8783	Locking Lever.....	I-11	70793	Washer.....	III-1;IV-4
8809	Power Cord.....	I-9	70803	Screw (6-40 Pivot).....	I-32
8811	Line Cord.....	I-9	70873	Brush Holder Cap.....	I-44
8884	Terminal Block.....	I-17,41,42,43,60,64 65,68,71,72,74;II-1,2,4	70884	Eccentric.....	I-13
			70885	Spring Washer.....	I-13

Part Number	Description	Page	Part Number	Description	Page
70886	Washer.....	I-13,17,51	72818	Relay.....	I-6
70887	Nut (10-24 Hex).....	I-6,45	72824	Celluloid Keytop.....	I-40
70892	Lock Nut (1/8-27 Hex).....	I-45	72825	Celluloid Keytop.....	I-40
70893	Nipple	I-45	72826	Celluloid Keytop.....	I-39
71045	Lock Nut (6-40 Special).....	I-32	72827	Celluloid Keytop.....	I-39
71046	Screw (6-40 Special).....	I-32	72828	Celluloid Keytop.....	I-40
71047	Shim (.010").....	I-6,34;IV-3	72830	Celluloid Keytop.....	I-40
71051	Buzzer.....	I-65	72983	Key Lever.....	I-10
71073	Washer.....	I-29,32,52,60,63	72984	Key Lever.....	I-10
71161	Bushing.....	I-11	73151	Celluloid Keytop.....	I-40
71444	Bushing.....	I-58	73152	Celluloid Keytop.....	I-40
71445	Link	I-32	73175	Lock Washer.....	I-14,15,52
71449	Key Lever Guide-Rear.....	I-10	73196	Resistor (200-400 Ohms)(W.E.Co. 19-BB).....	I-1
71505	Wick.....	I-16	73197	Resistor (300-500 Ohms)(W.E.Co. 19-GJ).....	I-1
71659	Screw (6-40 Shoulder).....	I-15,57,70	73276	Screw (6-40 Shoulder)....	I-18,60,63 64,65,71
71670	Mounting Block.....	I-1	73427	Shim (.014").....	I-22
71671	Jack Spring-Left.....	I-1	73497	Plug - Red.....	I-9
71672	Cable Clamp.....	I-1	73588	Contact Spring	I-6,8,50,53 56,73,74;II-2
71675	Jack Spring-Right.....	I-1	73592	Spring Plate.....	I-6
71681	Printing Ribbon Spool	I-21	73593	Contact Spring	I-6,8,50,53,56 73,74;II-2
71696	Range Scale.....	I-32	73641	Line Guide.....	III-2
71697	Clamping Plate.....	I-31,32	73670	Terminal Block Assembly.....	I-5,6,7 IV-1
71829	Range Scale Assembly.....	I-32	73705	Terminal Block	I-5,6,7
71976	Stop Pawl Plate.....	I-31,32	73844	Washer	I-7
72021	Resistor Mounting Block Assembly..	I-1	74001	Shaft	I-11
72031	Celluloid Keytops.....	I-39	74003	Selector Mounting Plate	I-32,33
through 72035	Celluloid Keytop.....	I-40	74005	Shaft.....	I-20
72036	Celluloid Keytop.....	I-40	74006	Bushing.....	I-23
through 72037	Celluloid Keytops.....	I-39	74008	Bail Roller.....	I-23
72039	Celluloid Keytops.....	I-39	74009	Pawl Latch.....	I-50
72041	Celluloid Keytops.....	I-40	74010	Roller.....	I-22
through 72059	Celluloid Keytops.....	I-40	74011	Screw (6-40 Shoulder)....	I-14,24,69
72061	Celluloid Keytop.....	I-40	74013	Printing Bail Blade.....	I-19
72064	Resistor (1000 Ohms).....	I-6	74014	Screw (10-32 x 3/4 Hex)..	I-1,2,4,20 46
72254	Washer.....	I-72	74015	Spring.....	I-19
72425	Cable	I-65	74016	Post.....	I-14,15
72472	Shim (.004").....	I-11	74017	Screw (6-40 Shoulder).....	I-17
72480	Receptacle.....	I-53	74018	Plunger Rod.....	I-14
72481	Plug.....	I-9	74019	Spring Plate.....	I-20
72484	Relay.....	I-6	74020	Screw (6-40 Shoulder).....	I-24
72501	Shaft.....	I-11	74021	Bell Crank (No.1).....	I-19
72508	Screw (6-40 x 3/4 Hex).....	I-3,60,68 71,72	74022	Bell Crank (No.2).....	I-19
72509	Lock washer.....	I-18,25,42	74023	Bell Crank (No.3).....	I-19
72513	Driving Disk.....	I-16	74024	Bell Crank (No.4).....	I-19
72514	Spring.....	I-16	74025	Bell Crank (No.5).....	IV-1
72515	Keyed Nut.....	IV-1	74026	Collar.....	I-17
72516	Retaining Disk.....	I-33	74027	Screw (1/4-32 Pivot).....	I-14
72517	Keyed Nut (5/16-32).....	IV-1	74028	Dashpot Cylinder.....	I-14
72521	Wick.....	I-16	74029	Washer.....	I-14
72545	Post.....	I-10	74031	Platen Bracket-Right.....	I-24
72562	Driving Clutch.....	I-16	74032	Washer.....	I-14
72563	Washer-Felt.....	I-16	74033	Washer-Leather.....	I-14
72566	Resistor (100-100 Ohms).....	I-44	74036	Nut (10-32 Hex).....	I-22,23
72635	Shim (.002").....	I-70			
72643	Screw (6-40 Shoulder).....	I-10			
72644	Ball Bearing.....	I-16			

Part Number	Description	Page	Part Number	Description	Page
74037	Motor Stop Lever.....	I-50	74132	Spacing Gear.....	I-16
74038	Function Lever.....	I-35, 50; II-3	74133	"T" Lever.....	I-30, 33
74039	Function Lever.....	I-34, 35	74134	"T" Lever.....	I-30, 33
74040	Function Lever.....	I-35	74135	"T" Lever.....	I-30, 33
74041	Type Basket.....	I-23; I-2	74136	"T" Lever.....	I-30, 33
74042	Selector Vane (No. 1).....	I-20	74137	"T" Lever.....	I-30, 33
74043	Selector Vane (No. 2).....	I-20	74138	Function Lever.....	I-35
74044	Selector Vane (No. 3).....	I-20	74140	Printing and Function Cam.....	I-16
74045	Selector Vane (No. 4).....	I-20	74142	Cylinder Head.....	I-14
74046	Selector Vane (No. 5).....	I-20	74143	Retainer Plate.....	I-18
74049	Screw (4-40 Shoulder).....	I-50	74148	Bell Hammer.....	I-17
74050	Margin Bell Cam.....	I-15	74150	Bell Operating Lever.....	I-17
74051	Lever.....	I-15	74151	Gear (35T).....	I-41
74052	Keyboard Track.....	III-1	74152	Spring.....	I-16
74053	Connector Assembly.....	I-4	74153	Ball Bearing.....	I-16
74056	Retaining Plate.....	I-25	74154	Spacing Gear - Lower.....	I-18
74058	Detent Lever.....	I-14	74156	Screw (10-32 Special).....	I-19
74059	Screw (6-40 x 7/32 Hex).....	I-1, 25, 34, 44, 46, 58; III-3	74158	Function Bail Blade.....	I-19
74061	Clutch Disk.....	I-16	74160	Carriage Return Lock Bar.....	I-17
74062	Track - Lower.....	I-15	74161	Lock Bar Latch.....	I-17
74063	Spiral Gear (24T).....	I-16	74162	Extension Arm.....	I-17
74064	Gear (26T).....	I-11	74163	Shift Push Bar.....	I-17
74066	Shift Link Bracket.....	I-17	74164	Spacing Shaft.....	I-18
74068	Latch Bar.....	I-17	74166	Driving Disk.....	I-16
74069	Reset Bar.....	I-17	74169	Clamp.....	I-20
74071	Clutch Fork.....	I-17	74170	Screw (10-32 Pivot).....	I-20
74072	Operating Lever.....	I-17	74171	Screw (6-40 Eccentric).....	I-17
74076	Screw (1/4-32 Shoulder).....	I-14	74172	Screw (10-32 Eccentric).....	I-14
74077	Screw (10-32 Shoulder).....	I-14, 17	74173	Bell Latch Bar.....	I-17
74078	Latch Link.....	I-17	74174	Bell Push Bar.....	I-17
74079	Line Feed Bail.....	I-14	74175	Bracket.....	I-50
74080	Shift Link.....	I-17	74178	Bracket.....	I-15
74081	Line Feed Push Bar.....	I-14	74179	Shaft.....	I-21
74082	Shift Lever.....	I-14	74180	Code Bar.....	I-19, 36
74083	Vertical Link.....	I-14	74181	Code Bar.....	I-19, 36
74089	Printing Bail Arm.....	I-19	74182	Code Bar.....	I-19, 36
74091	Motor Plate.....	I-41, 42, 43	74183	Code Bar.....	I-19, 36
74095	Spacing Collar.....	I-19	74184	Code Bar.....	IV-1
74096	Spacing Pawl - Front.....	I-19	74185	Pull Bar.....	I-36, 69; II-2, 3; IV-3
74097	Spacing Pawl.....	I-19, 51	74186	Disk.....	I-25
74098	Shaft.....	I-19	74187	Pull Bar Guide.....	I-19, 23
74099	Retaining Ring.....	I-16	74190	Spacing Clutch.....	I-18
74100	Washer - Leather.....	I-16	74191	Latch.....	I-20
74101	Oil Plug.....	I-16	74192	Spacing Gear - Upper.....	I-18
74107	Bearing.....	I-19	74194	Stud.....	I-22
74109	Function Lever.....	I-34, 35	74195	Bearing Roller.....	I-22
74110	Stud.....	I-17	74196	Stud.....	I-23
74111	Shaft.....	I-14	74197	Bail Roller.....	I-23
74112	Screw (10-32 Pilot).....	I-17	74198	Bearing Cone.....	I-23
74119	Bail Shaft Bearing.....	I-14	74199	Eccentric Bushing.....	I-19; IV-1
74121	Latch Bell Crank.....	I-17	74200	Track - Upper.....	I-15
74122	Screw (6-40 x 13/16 Hex).....	I-19	74202	Type Bar #2 (without Pallet).....	I-37, 38
74124	Cross Bar Assembly.....	I-18	74202A	Type Bar #2 (with Pallet).....	I-38
74126	Support.....	I-15	74203	Type Bar #3 (without Pallet).....	I-37, 38
74127	Function Lever.....	I-35	74203A	through	
74128	Function Lever.....	I-35	74203C	Type Bars #3 (with Pallets).....	I-38
74129	Function Lever.....	I-35	74204	Type Bar #4 (without Pallet).....	I-37, 38
74130	Function Lever.....	I-35	74205	Type Bar #5 (without Pallet).....	I-36, 38
74131	Function Lever.....	I-35			

Part Number	Description	Page	Part Number	Description	Page
74205A			74247	Shift Stop Post.....	I-24
through	Type Bars #5 (with Pallets)....	I-38	74248	Stud.....	I-24
74205E			74249	Screw (1/4-32 Pilot).....	I-14
74206	Type Bar #6(without Pallet).I-	37, 38	74251	Dashpot Lever.....	I-14
74207	Type Bar #7(without Pallet)....	I-37	74252	Screw (3/8-32 Pilot).....	I-14, 15
74208	Type Bar #8(without Pallet).I-	37, 38	74253	Stud.....	I-23
74209	Type Bar #9(without Pallet)....	I-37	74254	Cross Bar - Rear.....	I-17
74210	Type Bar#10(without Pallet).I-	37, 38	74255	Function Lever Comb.....	I-20, 54
74210A	Type Bar #10 (with Pallet)....	I-38	74259	Detent.....	I-24
74211	Type Bar#11(without Pallet).I-	37, 38	74262	Arm - Left.....	I-57
74211A			74263	Arm - Right.....	I-57
through	Type Bars #11 (with Pallets)...	I-38	74264	Platen Shaft.....	I-24, IV-2
74211C			74269	Washer.....	I-18
74212	Type Bar #12(without Pallet)...	I-37	74271	Clamping Washer.....	I-18
74213	Type Bar #13(without Pallet)...	I-37	74272	Spring.....	I-18
74214	Type Bar#14(without Pallet).I-	37, 38	74275	Shaft.....	I-18
74214A			74276	Ball Bearing.....	I-18
through	Type Bars #14 (with Pallets)...	I-38	74278	Escapement Lever.....	I-18
74214F			74279	Strip - Leather.....	III-3
74215	Type Bar#15(without Pallet)....	I-36	74281	Backstop Assembly.....	III-3
74216	Type Bar#16(without Pallet)....	I-37	74282	Dashpot Assembly.....	I-14
74217	Type Bar#17(without Pallet).I-	36, 38	74283	Spring Washer.....	I-25, 34, 74
74218	Type Bar#18(without Pallet).I-	37, 38	74286	Bail Guide.....	I-19
74218A			74289	Backstop.....	I-50
through	Type Bars #18 (with Pallets)...	I-38	74291	Spring Bracket.....	I-50
74218D			74292	Screw (10-32 Shoulder).....	I-23
74219	Type Bar#19(without Pallet)....	I-37	74294	Adapter Plate.....	I-22
74220	Type Bar#20(without Pallet).I-	36, 38	74296	Screw (6-40 Pilot).....	I-22
74220A			74297	Latch Plate.....	I-17
through	Type Bars #20 (with Pallets)...	I-38	74300	Spring Drum Assembly.....	I-18
74220D			74301	Set of Type Pallets-Murray Style...	I-36
74221	Type Bar#21(without Pallet).I-	36, 38	74302		
74221A			through	Type Pallets.....	I-37
through	Type Bars #21 (with Pallets)...	I-38	74304		
74221G			74305	Type Pallet.....	I-36
74221H	Type Bar #21 (with Pallet)....	I-36	74306		
74222	Type Bar #22 (without Pallet).I-	36, 37, 38	through	Type Pallets.....	I-37
74222A			74313		
through	Type Bars #22 (with Pallets)...	I-38	74314	Type Pallet.....	I-37, 38
74222F			74315	Type Pallet.....	I-36
74223	Type Bar#23(without Pallet)....	I-37	74316	Type Pallet.....	I-37
74224	Type Bar#24(without Pallet).I-	37, 38	74317	Type Pallet.....	I-36
74224A			74318	Type Pallet.....	I-37; II-2, 3
through	Type Bars #24 (with Pallets)...	I-38	74319	Type Pallet.....	I-37
74224D			74320		
74225	Type Bar#25(without Pallet).I-	37, 38	through	Type Pallets.....	I-36
74225A			74322		
through	Type Bars #25 (with Pallets)...	I-38	74323		
74225E			through	Type Pallets.....	I-37
74226	Type Bar#26(without Pallet)....	I-37	74328		
74227	Type Bar#27(without Pallet).I-	37, 38	74329	Shaft.....	I-21
74228	Type Bar#28(without Pallet).I-	37, 38	74330	Spring.....	I-22
74228A	Type Bar#28(with Pallet).....	I-38	74331	Spring.....	I-22
74230	Driving Clutch.....	I-18	74332	Flanged Roller.....	I-23
74239	Clutch Bushing.....	I-16	74334	Washer.....	I-23
74240	Roller.....	I-23	74335	Shaft Lever.....	I-22
74241	Driven Clutch.....	I-18	74337	Roller - Upper.....	I-23
74243	Roller Assembly.....	I-23	74338	Release Lever.....	I-25
74244	Printing Bail.....	I-19; IV-1	74339	Cross Bar.....	I-25
74246	Motor Stop Pawl-Inner.....	I-50	74342	Eccentric Stud.....	I-23

Part Number	Description	Page	Part Number	Description	Page
74343	Stud.....	I-23	74451	Release Lever Shaft.....	I-25
74344	Reverse Arm - Right.....	III-1;IV-4	74452	Release Shaft.....	I-25
74345	Reverse Arm - Left.....	III-1;IV-4	74454	Release Cam.....	I-25
74358	Bracket.....	I-15	74455	Paper Chute.....	I-25
74359	Draw Strap.....	I-18	74457	Guide Lever.....	I-25
74361	Screw (6-40 Shoulder).....	I-24	74460	Shaft.....	I-25,56
74363	Full Bar Bail.....	I-23	74463	Adjusting Lever.....	I-25
74366	Spacing Rack.....	I-22	74465	Line Feed Lever.....	I-24
74367	Screw (10-32 Special).....	I-26,28	74467	Line Feed Pawl.....	I-24
74368	Bail Roller Assembly.....	I-23	74469	Paper Finger - Right.....	I-25
74371	Ribbon Carrier.....	IV-2	74470	Paper Finger - Left.....	I-25
74372	Link.....	I-23	74473	Stop.....	I-25
74373	Type Bar Segment.....	I-22	74476	Straightener Rod.....	I-25
74374	Plunger.....	I-23	74477	Tearing Edge.....	I-57
74376	Bracket.....	I-23	74478	Lever.....	I-24
74378	Margin Bell Pawl.....	I-22	74479	Bushing.....	I-24
74379	Bracket.....	I-22	74480	Spring.....	I-24
74380	Shaft.....	I-23	74481	Detent Roller.....	I-24
74381	Feed Pawl.....	I-23	74482	Guide Plate.....	I-49
74383	Bearing - Right.....	I-23	74490	Roller - Front.....	I-25,56
74384	Gear.....	I-21	74491	Roller - Rear.....	I-25
74385	Gear.....	I-21	74493	Spacer.....	I-25,56
74390	Ribbon Reverse Bail.....	I-23	74494	Spacer.....	I-25,56
74392	Spool Bracket.....	I-21	74495	Guide Block.....	I-49
74394	Shaft.....	I-21	74499	Bearing Cap - Right.....	I-23
74395	Relay Guard.....	I-2	74500	Bearing - Left.....	I-23
74397	Draw Strap Post.....	I-22	74501	Bearing Cap - Left.....	I-23
74398	Shaft.....	I-23	74502	Driven Clutch.....	I-16
74399	Screw (6-40 Pilot).....	I-30,33	74503	Function Bail.....	I-19
74401	Ribbon Oscillator.....	I-22	74505	Pinion (7T).....	I-41
74404	Operating Lever.....	III-3	74507	Lever.....	I-34
74405	Bracket.....	III-3	74508	Spring Housing.....	I-18
74406	Contact Lever.....	III-3	74511	Spring.....	I-23
74407	Send-Receive-Reset Lever.....	I-34	74512	Roller Assembly.....	I-22
74408	Post.....	I-34	74513	Fulcrum Rod.....	I-22
74409	Contact Lever.....	I-50	74514	Screw (4-40 x 55/64 Fil.).....	III-3
74410	Frame - Left.....	I-14	74519	Paper Finger Shaft.....	I-25
74411	Send-Receive Handle.....	III-3	74520	Screw (6-40 Eccentric).....	I-34
74412	Bushing.....	I-17	74521	Bevel Gear.....	I-21
74413	Backstop.....	I-17	74525	Screw (1/4-32 Thumb).....	I-10
74414	Type Bar Guide.....	I-22	74526	Locking Collar.....	I-21
74415	Guide Bracket.....	I-34	74528	Spacer Bar Loop.....	I-10
74416	Lever.....	I-34	74529	Bracket.....	I-13
74417	Lever.....	I-34	74530	Separator.....	I-1
74420	Bracket.....	I-1,5	74531	Switch Cover.....	I-1
74421	Bracket.....	I-45	74533	Latch Handle.....	III-3
74422	Bracket.....	I-1,2	74534	Bearing Bracket.....	I-17
74424	Bracket.....	I-6	74536	Screw (6-40 x 9/64 Fil.)..	I-21,24,25 27,60
74425	Receptacle.....	I-1	74537	Safety Pawl.....	III-3
74428	Send-Receive-Break Mechanism...	III-3	74538	Bracket.....	I-50,74;II-2
74430	Bracket.....	I-1,5,6;IV-1	74539	Mounting Plate.....	I-34
74432	Mounting Plate.....	I-4	74545	Release Lever.....	I-50
74433	Plate Insulator.....	I-4	74546	Cable Clamp.....	I-4
74435	Platen Bracket - Left.....	I-24	74548	Spring.....	I-18
74437	Slide Bar.....	I-25;IV-4	74551	Insulator.....	I-1
74438	Platen - Rubber Covered.....	I-26	74552	Frame.....	I-20
74446	Line Feed Ratchet.....	I-24;IV-2	74554	Spring Post.....	I-25,30,33
74447	Detent Ratchet.....	I-24;IV-2	74556	Motor Stop Pawl.....	I-50
74448	Bushing.....	I-24	74557	Lamp.....	I-45
74449	Bushing.....	I-24			

Part Number	Description	Page	Part Number	Description	Page
74558	Socket.....	I-45	74663	through Type Bars (with Pallets).....	I-37
74559	Shaft.....	I-24	74668	Strap.....	I-3
74561	Post.....	I-24	74684	Contact Spring.....	I-4
74562	Screw (6-40 Special).....	I-24	74685	Contact Spring.....	I-4, 58, 66
74563	Lever.....	I-24	74686	Shift Vane.....	I-20
74564	Detent Lever	I-24	74687	Screw (6-40 x 5/8 Fil.).....	I-23
74566	Screw (10-32 Shoulder).....	I-24	74688	Lever.....	I-34
74567	Screw (1/4-20 x 1/2 Hex).....	I-41, 42, 43	74689	Guide Post.....	I-19
74568	Terminal Block.....	I-1	74690	Transmitter Mechanism.....	I-12
74569	Terminal Block.....	I-10	74691	Resistor.....	I-10
74571	Cable Assembly.....	I-45	74692	Post Spring.....	I-14, 17, 51, 63, 64
74572	Cable.....	II-4	74693	Post.....	I-24
74573	Cable.....	II-4	74694	Friction Arm.....	I-24
74574	Cable.....	II-4	74695	Friction Sleeve.....	I-24
74575	Cable.....	I-2; II-4	74697	Copyholder Extension.....	I-49
74581	Selector Bar.....	I-10	74700	Spring.....	I-22
74582	Selector Bar.....	I-10	74701	Spring.....	I-51; III-3
74583	Selector Bar.....	I-10	74702	Spring.....	III-3
74584	Selector Bar.....	I-10	74703	Spring.....	I-50
74585	Selector Bar.....	I-10	74704	Spring.....	I-14
74587	Base Pad.....	I-1	74705	Spring.....	I-34, 35, 51, 54
74588	Terminal Block Assembly.....	I-1	74706	Spring.....	I-24; IV-2
74589	Terminal Block.....	I-10	74707	Spring.....	I-14, 51
74590	Plate.....	I-10	74708	Spring.....	I-25; IV-2
74592	Retaining Rod.....	I-1	74709	Spring.....	I-25, 52
74594	Retaining Ring.....	I-10	74710	Spring.....	I-24
74595	Gear (24T).....	I-11	74712	Spring.....	I-14; II-1
74596	Spiral Gear.....	I-16	74716	Bushing.....	III-3
74599	Eccentric.....	I-50	74717	Screw (4-40 x 23/32 Fil.).....	I-64, 66
74601	Universal Bar.....	I-10			
74604	Repeat Space Rod.....	I-11	74718	Bushing.....	III-3
74605	Bracket.....	I-11	74719	Relay Base.....	I-2; IV-1
74609	Spacer Bar Shaft.....	I-10	74720	Screw (1/4-20 Thumb).....	I-1; IV-1
74610	Key Lever Shaft.....	I-10	74721	Spring.....	I-23
74613	Screw (4-40 x 1/4 Hex)	I-25, 55, 56	74722	Washer.....	I-19, 51, 56, 69; IV-4
74614	Resistor.....	I-2, 46	74724	Screw (10-32 Thumb).....	I-32
74620	Switch.....	I-1	74725	Screw (6-40 Shoulder).....	I-17
74621	Stud Assembly.....	I-1	74726	Extension.....	I-22
74624	Blank Guide Assembly.....	I-49	74727	Terminal.....	I-3, 62, 64, 66; III-3
74625	Cable.....	I-32; II-4	74728	Terminal.....	I-65; II-1, 2; III-3
74627	Connector Assembly.....	I-4	74730	Screw (6-40 Shoulder).....	I-22
74628	Fuse Holder.....	I-1	74731	Nut (6-40 Hex).....	I-22
74635	Mounting Strap.....	I-62	74732	Post.....	I-25
74637	Spring.....	I-47, 48	74733	Stud.....	I-18, 25
74638	Glass.....	I-61	74736	Bracket.....	I-18
74642	Type Bar (with Pallet).....	I-37; II-2, 3	74737	Lever.....	I-18
74643	Type Bar (with Pallet).....	I-37	74739	Screw (6-40 Special).....	I-26, 28
74644	Type Bar (with Pallet).....	I-37	74744	Guard.....	I-3
74645	Type Bar (with Pallet).....	I-36	74749	Stop Plate.....	I-10
74646	through Type Bars (with Pallets).....	I-37	74751	Trip-off Pawl.....	I-12
74654	Type Bar (with Pallet).....	I-36	74754	Detent Spring.....	I-23
74655	Type Bar (with Pallet).....	I-37	74755	Wick.....	I-16
74656	Type Bar (with Pallet).....	I-37	74756	Wick.....	I-16
74657	Type Bar (with Pallet).....	I-36	74757	Bracket.....	I-44
74658	Type Bar (with Pallet).....	I-37	74759	Felt.....	I-47, 68
74659	Type Bar (with Pallet).....	I-37	74760	Spring.....	I-19, 66
74660	through Type Bars (with Pallets).....	I-36	74762	Key Lever.....	I-10, 40
74662	74662		74763	Set of Type Pallets-Murray Style Fractions.....	I-36

Part Number	Description	Page	Part Number	Description	Page
74764	Set of Parts for Mechanical Motor Control.....	I-50	74898	Locating Stud.....	I-1
74765	Type Pallet.....	I-37;II-2,3	74899	Ball Bearing.....	I-16
74766	Type Pallet.....	I-37	74900	Washer.....	I-16
74767	Type Pallet.....	I-37	74901	Nut (15/32-32 Hex).....	I-16
74768	Type Pallet.....	I-37	74904	Shaft.....	I-16
74769	Type Pallet.....	I-37	74909	Frame-Right.....	I-15
74770	Type Pallet.....	I-36	74912	Pinion (7T).....	I-41
74771	Type Pallet.....	I-36	74913	Gear (30T).....	I-41
74772	Type Pallet.....	I-37	74916	Gear Hub.....	I-16
74773	Set of Type Pallets Murray Style.....	I-36	74923	Screw Assembly.....	I-26,28
74776	Insulator.....	I-1	74928	Spring Post.....	I-25
74783	Lever.....	I-20	74932	Function Lever.....	I-35
74788	Cable.....	I-45	74933	Pull Bar Stripper.....	I-19
74789	Cable.....	I-50;II-4	74946	Insulator.....	I-17,60,64,65,68,71 72,74;II-1,2
74790	Cable Clamp.....	I-4	74949	Lever.....	I-3
74793	Line Guide.....	I-49;III-2	74952	Screw (4-40 x 5/8 Fil.)....	I-3,58,62 71;II-1
74795	Stop Plate.....	III-2	74953	Screw (4-40 x 13/16 Fil.)....	I-8
74798	Screw (6-40 x 31/64 Fil.)....	I-18	74961	Spring.....	I-35
74799	Retainer Plate.....	I-18	74962	Spring.....	I-35,53,73,74;II-1,2
74801	Disk.....	I-16	74964	Contact Spring.....	I-3,64
74802	Spring.....	I-16	74969	Sleeve Bearing.....	I-21
74805	Screw (10-32 x 3/4 Hex)..	I-16,19,23	74972	Stud.....	I-23
74806	Guide Post Mounting Plate....	I-23	74975	Screw (10-32 x 5/8 Fil.)....	I-1
74807	Nut (10-32 Hex).....	I-23	74986	Screw (6-40 x 13/32 Hex)...	I-4,10,14 16,19,22,27,51,53,61,69,70,73
74808	Bushing.....	I-11	74988	Spring.....	I-50
74813	Set of Parts for Platen Tearing Edge.....	I-57	74990	Insulator.....	I-1
74814	Relay Mounting Assembly....	I-6;IV-1	74991	Insulator.....	I-41,42,43
74816	Lever Assembly.....	I-34	74992	Insulator Bushing.....	I-5,6
74817	Line Relay Spark Protection....	I-3	74994	Mounting Plate.....	I-19
74820	Platen-Hard Rubber.....	I-26	74995	Bell Crank.....	I-19
74821	Resistor.....	I-2	75229	Spring.....	I-3
74825	Covering Strip.....	I-47	75231	Bushing.....	I-2,6
74838	Bearing Cap.....	I-14	75249	Bushing.....	I-74
74839	Motor Unit.....	II-3	75257	Spring Post.....	I-24
74840	Motor Unit.....	II-3	75400	Screw (6-40 x 1 Fil.).....	I-46
74841	Strap.....	I-32	75436	Resistor.....	I-2
74842	Type Bar (with Pallet).....	I-37	75437	Test Key.....	I-13
74843	Type Bar (with Pallet).....	I-36	75525	Celluloid Keytop.....	I-40
74844	Type Bar (with Pallet).....	I-37	75578	Celluloid Keytop.....	I-40
74845	Type Bar (with Pallet).....	I-37,69	75606	Spring.....	I-12
74846	Type Bar (with Pallet).....	I-37	75607	Washer.....	I-12
74847	Type Bar (with Pallet).....	I-36	75652	Celluloid Keytop.....	I-39
74848	Type Bar (with Pallet).....	I-36	75653	Celluloid Keytop.....	I-40
74849	Type Bar (with Pallet).....	I-37	75654	Celluloid Keytop.....	I-40
74853	Power Cord.....	I-9	75655	Celluloid Keytop.....	I-39
74855	Cross Bar.....	I-27	75656	Celluloid Keytop.....	I-40
74875	Ribbon Carrier.....	IV-2	75657	Celluloid Keytop.....	I-39
74877	Spring.....	IV-2	75658	Celluloid Keytop.....	I-40
74878	Drag Spring.....	I-25	75689	Spring.....	I-63,64
74879	Spring Post.....	I-15	75701	Celluloid Keytop.....	I-40
74882	Spring.....	I-18	75702	Celluloid Keytop.....	I-40
74885	Lever.....	I-3	75704	Celluloid Keytop.....	I-40
74889	Mounting Block.....	I-22,III-3	75750	Washer - Fiber.....	I-2,7,10,46,64 III-1,3
74890	Contact Assembly....	I-8,50,53,73,74	75851	Set of Keytops-Celluloid....	I-39,40
74891	Shim (.004").....	I-11	75852	Celluloid Keytop.....	I-39
74892	Shim (.004").....	I-11,12			
74894	Identification Plate.....	I-48			

Part Number	Description	Page	Part Number	Description	Page
75886	Celluloid Keytops.....	I-40	78826	Mounting Block.....	I-32
through 75889	Celluloid Keytop.....	I-40	78889	Insulator.....	I-6
75891	Celluloid Keytop.....	I-40	78905	Washer-Fiber.....	I-44
75893	Celluloid Keytops.....	I-40	78932	Set of Keytops - Spring Cushion.....	I-30 40
through 75895	Washer-Felt.....	I-24	78935	Set of Keytops-Spring Cushion...I-39	40
76084	Friction Disk.....	I-24	78936	Set of Keytops-Spring Cushion...I-39	40
76085	Spring Washer.....	I-24	78939	Set of Keytops-Spring Cushion...I-39	40
76086	Nut (9/16-32 Special).....	I-24	78940	Set of Keytops-Spring Cushion...I-39	40
76087	Washer.....	I-1,46,47,48,73	78946	Spring Cushion Keytop.....	I-39
76099	Washer.....	I-26,28	78947	Spring Cushion Keytop....I-39;II-2,3	
76156	Screw (4-40 x 3/16 Hex).....	I-22	78948	Spring Cushion Keytop....I-39;II-2,3	
76167	Bushing.....	I-3,71	78949	Spring Cushion Keytop.....	I-39
76246	Screw (6-40 Shoulder).....	I-72	78950	Spring Cushion Keytop.....	I-39
76260	Plate.....	I-57	78951	Spring Cushion Keytop....I-39;II-2,3	
76275	Eccentric.....	I-63	78952	Spring Cushion Keytop.....	I-39
76277	Terminal.....	I-46	78953	Spring Cushion Keytop....I-39;II-2,3	
76281	Wire.....	I-7	78954	Spring Cushion Keytop.....	I-39
76284	Spring.....	I-17	78955	Spring Cushion Keytop....I-39;II-2,3	
76296	Bushing.....	I-3	78956	Spring Cushion Keytop....I-40;II-2,3	
76333	Nut (10-32 Hex).....	II-1	78957	Spring Cushion Keytop....I-40;II-2,3	
76474	Fan.....	I-41,42	78958	Spring Cushion Keytop.....	I-40
76484	Screw (10-32 Pilot).....	I-1,51	78959	Spring Cushion Keytop....I-40;II-2,3	
76699	Bushing.....	I-64	78960	Spring Cushion Keytop.....	I-40
76790	Screw (10-32 x 3/16 Set).....	I-73	78961	Spring Cushion Keytop....I-40;II-3	
76966	Contact Spring.....	III-3	78962	Spring Cushion Keytop.....	I-40
77038	Contact Spring.....	III-3	78963	Spring Cushion Keytop.....	I-40
77040	Contact Spring.....	III-3	78964	Spring Cushion Keytop.....	I-40
77041	Celluloid Keytop.....	I-40	78965	Spring Cushion Keytop.....	I-40
77214	Celluloid Keytop.....	I-40	78966	Spring Cushion Keytop....I-40;II-2,3	
77216	Resistor.....	I-7	78967	through Spring Cushion Keytops.....	I-40
77362	Screw (6-40 x 2-3/8 Rd. Hd.)..	III-1	78974	Spring Cushion Keytop.....	I-40
77902	Screw (6-40 x 1-15/16 Fil.)..	I-4,64 III-3	78976	Spring Cushion Keytop.....	I-40
77920	Cover.....	I-6	78978	Spring Cushion Keytop.....	I-40
77977	Capacitor.....	I-5,6,64	78979	Spring Cushion Keytop.....	I-40
78011	Screw (4-48 x 3/16 Rd. Hd.)....	I-42	78980	Spring Cushion Keytop.....	I-40
78025	Screw (6-40 x 15/16 Hex).....	I-5,44	78981	Spring Cushion Keytop.....	I-39;II-2
78028	Spring Post.....	I-68	78982	Spring Cushion Keytop.....	I-39;II-3
78044	Screw (6-40 x 1-3/16 Hex).....	I-46	78983	Spring Cushion Keytop.....	I-40;II-3
78103	Post.....	I-30,33	78984	Spring Cushion Keytop.....	I-39;II-3
78163	Stud.....	I-30,33	78985	Spring Cushion Keytop.....	I-40;II-3
78164	Resistor.....	I-6,45	78986	Spring Cushion Keytop.....	I-39;II-3
78205	Resistor Assembly.....	I-6,45;II-3	78987	Spring Cushion Keytop.....	I-40;II-3
78206	Spacing Collar.....	I-5	78988	Spring Cushion Keytop.....	I-40;II-3
78287	Screw (10-32 x 5/8 Hex).....	I-17,41 42,43	78990	Spring Cushion Keytop.....	I-40
78301	Terminal.....	I-7	78991	Spring Cushion Keytop.....	I-39
78363	Connector.....	III-1	78993	Spring Cushion Keytop....I-39;II-3	
78374	Cable Clamp.....	I-65	78994	Spring Cushion Keytop.....	I-39
78430	Resistor.....	I-45	78995	Spring Cushion Keytop.....	II-2
78473	Friction Washer.....	I-31,32	79513	Plate....I-6,8,50,53,56,73,74;II-1,2	
78596	Screw (10-32 Shoulder).....	I-31,32	79523	Screw (2-56 x 25/32 Fil.).....	I-2
78597	Celluloid Keytop.....	I-40	79716	Stiffener.....	II-1
78646	Celluloid Keytop.....	I-40	80138	Spring Cushion Keytop.....	I-50
78648	Celluloid Keytop.....	I-40	80146	Screw (1/4-32 Special).....	I-26,28
78650	Celluloid Keytop.....	I-40	80148	Type Pallet.....	I-37
78651	Celluloid Keytop.....	I-40	80149	Type Pallet.....	I-36
78652	Celluloid Keytop.....	I-40	80216	Platen - Rubber Covered.....	I-28
78661	Celluloid Keytop.....	I-40			
78662	Spring.....	I-24,33			

Part Number	Description	Page	Part Number	Description	Page
80217	Platen - Rubber Covered.....	I-28	80725	Handwheel Assembly.....	I-24
80248	Platen - Rubber Covered.....	I-28	80755	Bushing.....	I-7,62,65
80249	Platen - Rubber Covered.....	I-28	80757	Screw (10-32 x 1/2 Fil.).....	I-14,15
80255	Screw (4-40 x 21/64 Fil.).....	I-54;IV-2	80765	Platen - Steel Jacketed.....	I-28
80294	Spring Post.....	I-24	80766	Platen - Steel Jacketed.....	I-28
80334	Terminal.....	I-58;II-1	80826	Bracket.....	I-58
80341	Governor Brush and Speed Adjusting Bracket Assembly.....	I-43	80827	Lamp.....	I-58
80342	Screw (6-40 x 23/64 Hex).....	I-1,11,42 54,56,57,63;III-1;IV-4	80832	Bracket.....	I-56
80352	Governor.....	I-43	80833	Guard Spring.....	I-66
80374	Set of Gears.....	I-41	80840	Terminal Block.....	I-45
80392	Spring.....	I-10	80848	Spring.....	I-17
80395	Paper Guide Strip.....	I-27	90860	Set of Type Pallets - Murray Style.. Fracticons.....	I-36
80396	Bracket.....	I-27	80861	Type Pallet.....	I-37
80397	Retarding Rod.....	I-27	80862	Type Pallet.....	I-36
80398	Pulley.....	IV-2	80863	Type Pallet.....	I-37
80399	Paper Carrier Belt.....	IV-2	80864	Type Pallet.....	I-37
80400	Bracket.....	I-27	80865	Type Pallet.....	I-36
80401	Spring.....	I-27	80866	Type Pallet.....	I-37
80402	Screw (4-40 x 15/32 Fil.).....	I-27	80867	Type Pallet.....	I-37
80403	Screw (6-40 Shoulder).....	I-27	80868	Set of Type Pallets-Murray StyleI-	36
80405	Baffle Plate.....	I-27	80869	Rail - Right.....	I-47
80407	Shaft.....	I-27	80870	Rail - Left.....	I-47
80412	Clamp.....	I-27	80875	Cover Arm.....	I-47
80413	Pressure Roller.....	I-27;IV-2	80876	Mounting Strap.....	I-47
80415	Sprocket Ring.....	I-28	80911	Conduit.....	I-45
80420	Paper Guide.....	I-27	80913	Resistor Assembly.....	I-45;IV-3
80421	Spacer.....	I-27	80919	Function Lever.....	I-35
80422	Platen - Rubber Covered.....	I-28	80924	Set of Type Pallets-Murray StyleI-	36
80437	Set of Gears.....	I-41	80925	Connector.....	I-45
80444	Screw (6-40 x 1/4 Hex).....	I-7,45,51 57,61,66	80926	Spring.....	I-19
80451	Platen - Rubber Covered.....	I-28	80929	Receptacle.....	I-65
80458	Screw (6-40 Special).....	I-26	80948	Wood Screw.....	I-45
80459	Screw Assembly.....	I-26,28	80956	Set of Parts for Remote Signal Bell Contacts.....	I-65
80460	Cable Clamp.....	I-1	80985	Screw (4-40 Fil.).....	I-61
80466	Crank Assembly.....	I-24	80986	Lock Washer.....	I-61
80471	Spring.....	I-11	81006	Stop Post.....	I-15
80478	Spring Post.....	I-25,27	81015	Cable Clamp.....	I-4
80479	Collar.....	I-27	81024	Platen - Rubber Covered.....	I-28
80481	Post.....	I-27	81025	Platen - Rubber Covered.....	I-28
80483	Set of Parts for Converting Friction Feed Printers to Sprocket Feed,I-	27	81026	Screw Assembly.....	I-26,28
80488	Post.....	I-27	81027	Stud.....	I-26,28
80489	Function Lever.....	I-35	81028	Spacing Post.....	I-26,28
80509	Spring Post.....	I-15	81029	Screw (1/4-32 Special).....	I-26,28
80510	Margin Bell Hammer.....	I-15	81299	Bushing.....	I-56;II-2
80511	Margin Bell Shaft.....	I-15	81564	Screw (6-40 Special).....	I-58
80516	Cotter Pin.....	I-17	81595	Screw (4-40 Eccentric Shoulder) I-	64
80564	Signal Bell.....	III-1	81726	Terminal.....	I-71,72
80565	Signal Bell.....	III-1	81729	Type Pallet.....	I-38
80598	Platen - Rubber Covered.....	I-28	81730	Type Bar (with Pallet).....	I-38
80599	Platen - Rubber Covered.....	I-28	81747	Insulator Block.....	I-17
80600	Platen - Rubber Covered.....	I-28	81760	Type Pallet.....	I-37
80601	Platen - Rubber Covered.....	I-28	81774	Washer - Brass.....	I-5
80706	Screw (6-40 x 3/16 Set).....	I-28	81775	Resistor (8000 ohms).....	I-2
80721	Washer.....	I-29	81778	Screw (1-40 x 3/16 Fil.).....	I-7
80722	Platen - Rubber Covered.....	I-28	81784	Function Lever.....	I-35
80723	Platen - Rubber Covered.....	I-28	81800	Contact Assembly.....	I-56;II-2
80724	Paper Rod Lever.....	I-25	81801	Platen - Steel Jacketed.....	I-28
			81802	Platen - Steel Jacketed.....	I-28
			81805	Platen - Steel Jacketed.....	I-28

Part Number	Description	Page	Part Number	Description	Page
81806	Platen - Steel Jacketed.....	I-28	82474	Terminal.....	I-4,7,9,44,45,46,53,66 71,72
81825	Capacitor.....	I-46	82493	Washer.....	I-32
81836	Washer - Fiber.....	I-4,5	82498	Type Pallet.....	I-37
81841	Capacitor.....	I-3	82499	Set of Type Pallets-Murray Style	I-36
81889	Spring Bracket.....	I-22	82507	Plate.....	I-7,60
81893	Spring Bracket.....	I-22	82508	Relay Assembly.....	I-6
81895	Spring Post.....	I-18	82516	Spring.....	I-2
81936	Feed Lever.....	I-23	82518	Mounting Plate.....	I-7
81956	Blocking Ball.....	I-20,76	82519	Bracket.....	I-7
82009	Contact Lever.....	I-65	82525	Shim (.004").....	I-7
82011	Type Pallet.....	I-38	82526	Armature.....	I-7
82012	Spring.....	I-27,61	82529	Lever.....	I-7
82015	Resistor.....	I-7	82530	Spring Post.....	I-7
82021	Type Bar (with Pallet).....	I-38	82531	Bracket.....	I-7
82024	Set of Type Pallets - Murray Style	I-36	82532	Screw (6-40 Shoulder).....	I-7
82025	Type Pallet.....	I-38	82537	Spring Post.....	I-7
82075	Spring.....	I-17	82538	Screw (6-40 x 5/16 Hex).....	I-7
82147	Type Pallet.....	I-36	82539	Armature.....	I-7
82148	Type Pallet.....	I-36	82540	Hinge Pin.....	I-7
82149	Type Pallet.....	I-36	82541	Lever.....	I-7
through	Type Pallets.....	I-37	82542	Contact Spring.....	I-7
82154	Type Pallets.....	I-37	82544	Contact Spring.....	I-7
82172	Platen - Rubber Covered.....	I-28	82547	Insulator.....	I-7,8,58
82173	Platen - Rubber Covered.....	I-28	82548	Insulator.....	I-7,8,65
82174	Platen - Rubber Covered.....	I-28	82549	Mounting Plate.....	I-8
82175	Platen - Rubber Covered.....	I-28	82550	Contact Spring.....	I-8
82176	Type Pallet.....	I-36	82553	Contact Spring.....	I-7
82177	Type Pallet.....	I-38	82555	Contact Spring.....	I-7
82178	Type Bar (with Pallet).....	I-36	82557	Stiffener.....	I-7
82179	Type Bar (with Pallet).....	I-38	82559	Bushing.....	I-8
82253	Platen - Steel Jacketed.....	I-26	82588	Type Bar (with Pallet).....	I-37
82271	Function Lever.....	I-8,35,50,56;II-2	82589	Type Bar (with Pallet).....	I-36
82272	Type Pallet.....	I-38	82590	Type Bar (with Pallet).....	I-36
82283	Synchronous Motor.....	I-41	82591	Type Bar (with Pallet).....	I-38
82289	Type Pallet.....	I-38	82592	Type Bar (with Pallet).....	I-38
82290	Type Pallet.....	I-38	82593	Type Bar (with Pallet).....	I-37
82291	Type Pallet.....	I-38	82594	Type Bar (with Pallet).....	I-37
82346	Resistor Assembly.....	I-6	82595	Type Bars(with Pallets).....	I-38
82363	Signal Bell.....	III-1	through	Type Bars (with Pallet).....	I-36
82368	Incandescent Lamp.....	I-45	82598	Type Bars (with Pallet).....	I-36
82399	Pad - Felt.....	I-47	82600	Type Bars (with Pallet).....	I-36
82401	Pad - Felt.....	I-47	through	Type Bars (with Pallets).....	I-37
82402	Pad - Felt.....	I-47	82602	Type Bars (with Pallets).....	I-37
82403	Pad - Felt.....	I-47	82605	Spring Cushion Keytop.....	I-40
82411	Bracket.....	IV-3	82606	Spring Cushion Keytop.....	I-40
82412	Bracket.....	IV-3	82607	Spring Cushion Keytop.....	I-8,39,50;II-3
82413	Arm.....	IV-3	82608	Spring Cushion Keytops.....	I-39
82414	Detent Knob.....	I-47,68	through	Spring Cushion Keytops.....	I-39
82415	Spring.....	I-47	82612	Spring Cushion Keytop.....	I-40
82420	Type Pallet.....	I-36	82613	Magnet Yoke.....	I-7
82421	Type Pallet.....	I-37	82617	Magnet Yoke.....	I-7
82422	Type Pallet.....	I-38	82620	Magnet Yoke.....	I-7
82423	Type Pallet.....	I-36	82633	Cable.....	I-8,53,56,73;II-2,4
82425	Cover Glass.....	I-47	82702	Screw (6-40 x 9/32 Flat Hd.).....	I-44 66,72
82440	Screw (6-40 x 7/16 Hex).....	I-11,29,31 42,44,54,60;III-3	82704	Cable.....	I-8
82442	Spring.....	I-15	82714	Synchronous Motor.....	I-41
82444	Bushing.....	I-58	82718	Type Pallet.....	I-38
82463	Spring.....	I-24			

Part Number	Description	Page	Part Number	Description	Page
82728	Identification Plate.....	I-48	83412	Locating Stud.....	I-1
82729	Identification Plate.....	I-48	83413	Buffer.....	I-1
82733	Bearing Cap.....	I-15	83419	Spring.....	I-7
82740	Contact Assembly.....	I-50	83421	Pad-Felt.....	I-47
82742	Set of Parts for Mechanical Motor Control.....	I-50	83538	Type Pallet.....	I-37
82750	Set of Type Pallets-Murray Style (Weather Map Service)....	I-36;IV-3	83539	Type Pallet.....	I-38
82751	Type Pallet.....	I-37	83540	Celluloid Keytop.....	I-40
82767	Set of Type Pallets Murray Style.....	I-36	83571	Eccentric.....	I-50,70
82770	Type Pallet.....	I-38	83572	Paper Guide Plate.....	I-47
82771	Type Pallet.....	I-38	83718	Set of Parts Sixth Vane Extension..	I-17
82787	Spring.....	I-50	83760	Insulator.....	I-7
82788	Spring.....	I-8,35,50,56;II-2	83799	Synchronous Motor.....	I-41
82859	Set of Keytops-Spring Cushion.....	I-39,40	83861	Type Pallet.....	I-38
82865	Bracket.....	I-2	83862	Celluloid Keytop.....	I-40
82866	Resistor.....	I-2,10	83863	Celluloid Keytop.....	I-40
82868	Resistor and Bracket Assembly...	I-2	83864	Celluloid Keytop.....	I-40
82871	Set of Type Pallets-Gothic Style...	I-36	83884	Screw (10-32 x 3-3/4 Hex).....	I-14
82873	Type Pallet.....	I-37	83885	Nut (6-32 Hex).....	I-47,48;IV-3
82874	Type Pallet.....	I-37	83902	Spring Cushion Keytop.....	I-39
82875	Type Pallet.....	I-36	83904	Spring Cushion Keytop.....	I-40
82876	Type Pallets.....	I-37	83906	Spring Cushion Keytop.....	I-40
through	Type Pallets.....	I-37	83914	Contact Spring.....	I-65,71
82884	Type Pallet.....	I-36	83920	Top Separator Plate.....	I-30,33
82885	Type Pallet.....	I-37	83976	Platen Crank.....	I-24
82886	Type Pallet.....	I-37	83977	Clip.....	I-24
82887	Type Pallet.....	I-36	83979	Extension.....	I-24
82888	Type Pallet.....	I-37	84018	Pinion (7T).....	I-41
82889	Type Pallet.....	I-37	84019	Gear (25T).....	I-41
82890	Type Pallets.....	I-36	84025	Type Pallet.....	I-37
through	Type Pallets.....	I-36	84040	Bushing.....	I-7;II-1
82892	Type Pallets.....	I-37	84042	Set of Gears.....	I-41
82893	Type Pallets.....	I-37	84047	Stop Plate.....	I-43
through	Type Pallets.....	I-37	84060	Function Lever.....	I-35;IV-3
82898	Send-Receive-Break Mechanism.....	I-3;III-3	84069	Type Pallet.....	I-37
82917	Bracket.....	I-3	84073	Mounting Plate.....	I-61
82918	Bearing.....	I-3	84076	Tearing Edge Bracket.....	I-61
82919	Bushing.....	I-3	84077	Blade.....	I-61
82920	Break Lever.....	I-3	84079	Lever - Left.....	I-27,61
82921	Adjusting Plate.....	I-3	84081	Lever - Right.....	I-27,61
82922	Stop Lever.....	I-3	84082	Screw (6-40 x 13/32 Fil).....	I-61
82923	Plate.....	I-3	84105	Pinion (8T).....	I-41
82924	Upper Contact Lever.....	I-3	84106	Gear (32T).....	I-41
82925	Contact Spring.....	I-3,72	84114	Yoke.....	I-72
82927	Contact Spring.....	I-3,62	84115	Armature.....	I-72
82930	Extension.....	I-17	84466	Test Key.....	I-13
82963	Screw (4-40 Shoulder).....	I-17	84530	Celluloid Keytop.....	I-40
82964	Spring.....	I-17	84531	Celluloid Keytop.....	I-40
82965	Letters Push Bar.....	I-17	84532	Celluloid Keytop.....	I-40
82966	Screw (1/4-32 Pilot).....	I-19	84535	Celluloid Keytop.....	I-40
82988	Screw (6-40 x 2-1/2 Rd. Hd.)...	I-72	84536	Celluloid Keytop.....	I-40
82999	Spring.....	I-22	84575	Spring.....	I-34;III-3
83054	Capacitor.....	I-44	84578	Bearing Block.....	I-18
83355	Washer-Fiber.....	I-59	84579	Spacer.....	I-7
83408	Screw (4-40 x 3/16 Rd. Hd.)....	I-31	84687	Type Pallet.....	I-38
		II-2,3,4	84705	Contact Spring.....	II-2
			84708	Type Bar (with Pallet).....	I-37
			84709	Type Bar (with Pallet).....	I-37
			84710	Type Bar (with Pallet).....	I-36

Part Number	Description	Page	Part Number	Description	Page
84711	Type Bars (with Pallets).....	I-37	86193	Set of Parts for Converting Bell System 15C** Keyboard to 15A**II-2	
through 84719	Type Bar (with Pallet).....	I-36	86461	Spring Cushion Keytop.....	I-39
84720	Type Bar (with Pallet).....	I-37	86462	Spring Cushion Keytop.....	I-40
84721	Type Bar (with Pallet).....	I-36	86463	Spring Cushion Keytop.....	I-39
84722	Type Bar (with Pallet).....	I-37	86466	Spring Cushion Keytop.....	I-40
84723	Type Bar (with Pallet).....	I-37	86630	Celluloid Keytop.....	I-40
84724	Type Bar (with Pallet).....	I-37	86631	Celluloid Keytop.....	I-40
84725	Type Bars (with Pallets).....	I-36	86635	Set of Type Pallets - Long Gothic Style.....	I-36
through 84727	Type Bars (with Pallets).....	I-37	86636	Type Pallet.....	I-37
84728	Type Bars (with Pallets).....	I-37	86637	Type Pallet.....	I-37
through 84733	Type Bar (with Pallet).....	I-37;IV-3	86638	Type Pallet.....	I-36
84734	Type Bar (with Pallet).....	I-37	86639	Type Pallet.....	I-37
84735	Type Bar (with Pallet).....	I-37	86641	Type Pallet.....	I-37
84736	Type Bar (with Pallet).....	I-37	86643	Type Pallet.....	I-37
84737	Type Bar (with Pallet).....	I-36	86644	Type Pallet.....	I-37
84738	Type Bars (with Pallets).....	I-37	86647	Type Pallet.....	I-37
through 84740	Type Bar (with Pallet).....	I-38	86650	Type Pallet.....	I-36
84741	Type Bar (with Pallet).....	I-37	86651	Type Pallet.....	I-37
84742	Type Bar (with Pallet).....	I-36	86653	Type Pallets.....	I-36
84743	Type Bar (with Pallet).....	I-37	through 86655	Type Pallets.....	I-37
84744	Type Bar (with Pallet).....	I-37	86657	Type Pallets.....	I-37
84745	Type Bar (with Pallet).....	I-36	through 86661	Type Pallet.....	I-38
84746	Type Bar (with Pallet).....	I-36	86662	Type Pallet.....	I-38
84747	Type Bar (with Pallet).....	I-38	86663	Type Pallet.....	I-38
84748	Type Bar (with Pallet).....	I-37	86667	Screw Assembly.....	I-26,28
84749	Type Bar (with Pallet).....	I-38	86668	Stud.....	I-26,28
84750	Type Bar (with Pallet).....	I-37	86669	Screw (1/4-32 Special).....	I-26,28
84751	Type Bar (with Pallet).....	I-37	86710	Oil Cup.....	I-14,19
84752	Type Bar (with Pallet).....	I-38	86732	Spring Cushion Keytop.....	I-39,51
84753	Type Bar (with Pallet).....	I-37	86758	Plate.....	I-51,73
84754	Type Bar (with Pallet).....	I-37	86759	Tabulator Bar.....	IV-3
84755	Type Bar (with Pallet).....	I-38	86760	Bearing.....	I-51
84756	Type Bar (with Pallet).....	I-35,51	86761	Spring Post.....	I-51
84792	Function Lever.....	I-40,51	86762	Tabulator Stop.....	IV-3
84799	Spring Cushion Keytop.....	I-38	86763	Tabulator Stop.....	IV-3
84890	Type Pallet.....	I-65,72;II-1	86764	Nut (4-40 Special).....	I-51
84892	Stiffener.....	I-51	86765	Adapter Block.....	I-51
84893	Set of Parts to Provide Spacing for 8 Characters per Inch.....	I-23	86766	Tabulator Latch.....	I-51
84894	Arm.....	I-23	86768	Function Lever.....	I-35,51
84895	Detent Spring.....	I-23	86769	Latch Bar.....	I-51
84896	Screw (10-32 Shoulder).....	I-23	86770	Bracket.....	I-51
84902	Platen - Rubber Covered.....	I-28	86771	Extension.....	I-51
84913	Set of Parts for Converting Sprocket Feed Printers to Friction Feed.....	I-25	86772	Screw (6-40 Eccentric).....	I-51
84925	Set of Parts for Tabulator.....	I-51	86773	Link.....	I-51
84927	Function Lever.....	I-51,70	86774	Screw (6-40 Shoulder).....	I-51
84928	Function Lever.....	I-51	86776	Post.....	I-51
84966	Roller - Cork.....	I-51	86777	Retainer.....	I-51
84967	Roller - Cork.....	I-25	86779	Pawl.....	I-51
85098	Space Bar.....	I-62	86828	Bracket.....	I-62
85993	Spring Post.....	I-62	86829	Lever.....	I-62
86007	Detent Spring.....	I-62	86830	Mounting Plate.....	I-62
86192	Set of Parts for Converting Bell System 15C** Keyboard to 15B**II-2		86835	Spring.....	I-57
			86841	Celluloid Keytop.....	I-40
			86850	Screw (10-32 x 1-1/4 Fil).....	I-5;IV-1

Part Number	Description	Page	Part Number	Description	Page
86873	Spring.....	I-34,35	88969	Spring.....	I-56
86951	Resistor.....	I-70-72	89076	Bracket.....	I-34
86959	Bushing.....	I-72;II-2	89077	Stud.....	I-14,34
87136	Lever.....	I-66	89097	Spacing Pawl Arm.....	I-19,51
87154	Set of Parts to Provide a Paper Guide.....	I-27	89208	Spring Cushion Keytop.....	I-40
87182	Disk.....	I-10	89217		
87401	Spring.....	I-20	through	Type Bars (with Pallets).....	I-38
87402	Spring.....	I-35	89220		
87403	Set of parts to Adapt a Mech. or Elect. Motor Control to Operate on Shift-Blank-Stop.....	I-56	89221		
87483	Type Pallet.....	I-38	through	Type Pallets.....	I-38
87490	Type Pallet.....	I-38	89224		
87509	Spring Post.....	I-19;IV-1	89225	Spring Cushion Keytop.....	I-40
87573	Type Pallet.....	I-37	89226	Spring Cushion Keytop.....	I-39
87636	Screw (2-56 x 3/16 Rd.Hd.)....	I-48	89227	Spring Cushion Keytop.....	I-40
87692	Set of Parts for Feeding Four Lines per Inch.....	I-57	89228	Spring Cushion Keytop.....	I-40
87693	Set of Parts for Bell System Name Plate.....	II-2	89317	Line Cord.....	I-9
87851	Bushing - Fiber.....	I-3	89324		
87852	Line Feed Ratchet.....	I-57	through	Type Pallets.....	I-38
87853	Detent Ratchet.....	I-57	89326		
87860	Set of Parts for Tabulator....	I-51	89327		
87868	Set of Parts for Converting Bell System 15S and 15T Typing Units to 15J and 15L (Upper Case "H" Contact Mechanism).....	I-56;II-2	through	Type Bars (with Pallets).....	I-38
87936	Bracket.....	III-2	89329		
87937	Bracket.....	III-2	89352	Spring Cushion Keytop.....	I-40
87938	Bracket.....	III-2	89353	Type Pallet.....	I-38
87949	Type Pallet.....	I-38	89396	Type Pallet.....	I-38
87979	Cover Lid.....	I-47	89397	Type Pallet.....	I-37
87980	Cover Lid.....	I-47	89398	Type Pallet.....	I-36
87993	Screw (6-40 x 5/32 Fil.)....	I-20,46	89399	Type Pallet.....	I-38
88033	Power Cord.....	I-53	89400	Type Pallet.....	I-38
88651	Set of Keytops - Celluloid.....	I-39,40	89401	Spring Cushion Keytop.....	I-39
88745	Screw (6-40 Special).....	I-26	89402	Spring Cushion Keytop.....	I-40
88746	Screw (1/4-32 Special).....	I-26	89403	Spring Cushion Keytop.....	I-40
88777	Screw Assembly.....	I-26	89404	Spring Cushion Keytop.....	I-39
88832	Platen - Rubber Covered.....	I-28	89410	Set of Keytops.....	I-39,40
88833	Platen - Rubber Covered.....	I-28	89413	Spring Cushion Keytop.....	I-40
88846	Type Bar (with Pallet).....	I-38	89414		
88847	Type Bar (with Pallet).....	I-38	through	Spring Cushion Keytops.....	I-39
88848	Type Bar (with Pallet).....	I-38	89419		
88849	Spring Cushion Keytop.....	I-39	89420		
88850	Spring Cushion Keytop.....	I-40	through	Spring Cushion Keytops.....	I-40
88851	Spring Cushion Keytop.....	I-39	89422		
88855	Spring Cushion Keytop.....	I-40	89423	Spring Cushion Keytop.....	I-39
88856	Stud.....	I-17	89424	Spring Cushion Keytop.....	I-40
88857	Spring Washer.....	I-17	89425	Spring Cushion Keytop.....	I-39
88877	Lacing; Black.....	I-47,48	89426	Spring Cushion Keytop.....	I-40
88878	Spring Cushion Keytop.....	I-39	89438	Line Cord.....	I-9
88947	Spindle Disk.....	I-57	89442	Downstop Assembly.....	I-34
88959	Guide Bracket.....	I-54,56	89469	Power Cord.....	I-9
88962	Adapter Plate.....	I-56	89472	Line Cord.....	I-9
88963	Spring Bracket.....	I-56	89535	Bumper.....	I-67
88966	Blocking Lever.....	I-56	89540	Platen - Rubber Covered.....	I-28
88967	Retainer Plate.....	I-56	89541	Type Bar (with Pallet).....	I-38
88968	Stud.....	I-56	89542	Type Bar (with Pallet).....	I-38
			89543	Type Pallet.....	I-38
			89544	Type Pallet.....	I-38
			89545	Spring Cushion Keytop.....	I-39
			89546	Spring Cushion Keytop.....	I-40
			89547	Type Pallet.....	I-38
			89548	Contact Spring.....	I-2
			89576	Washer.....	I-65
			89734	Type Pallet.....	I-36

Part Number	Description	Page	Part Number	Description	Page
89735	Type Pallet.....	I-37	90227		
89736	Type Pallet.....	I-37	through	Type Bars (with Pallets).....	I-37
89858	Pressure Roller.....	I-27, 82	90229		
89881	Wick.....	I-16	90230	Type Bar (with Pallet).....	I-36
89896	Oil Cup.....	I-11, 12, 17	90231	Type Bar (with Pallet).....	I-37
89897	Nut (10-32 Hex).....	I-11, 12, 17	90246	Resistor.....	I-2
89917	Screw (4-40 Eccentric).....	I-12	90247	Resistor.....	I-2
89925	Terminal Block.....	I-6, 45	90248	Resistor.....	I-2
89932	Type Pallet.....	I-36	90249	Set of Parts for Tabulator Indication.....	I-57
89933	Type Pallet.....	I-37	90250	Bracket.....	I-57
89934	Type Pallet.....	I-37	90251	Indicator.....	I-57
89936	Type Pallet.....	I-36	90252	Scale.....	I-57
89937	Type Pallet.....	I-37	90253	Set of Parts for Converting Bell System 15S Typing Unit to a 15E.....	II-2
89946	Name Plate.....	I-42	90254	Set of Parts for Converting Bell System 15K Typing Unit to a 15F.....	II-3
89969	Washer - Fiber.....	I-2, 44, 70, 72	90255	Set of Parts for Converting Bell System 15T Typing Unit to a 15G.....	II-3
89971	Platen - Steel Jacketed.....	I-28	90256	Set of Parts for Converting Bell System 15M Typing Unit to a 15H.....	II-3
89972	Platen - Steel Jacketed.....	I-28	90260	Spring.....	I-12
89992	Set of Parts to Control Transmitter Distributor (XD) from Tabulator..	I-52	90265	Screw (6-40 Special).....	I-29
89993	Tabulator Bar Extension.....	I-52	90273	Cord Clamp.....	I-1
89994	Bracket.....	I-52	90275	Spring Cushion Keytop.....	I-39
89995	Tabulator Contact Lever.....	I-52	90276	Type Pallet.....	I-39
89996	Screw (4-40 x 63/64 Fil.).....	II-1	90277	Type Pallet.....	I-38
90024	Retainer.....	I-29	90278	Type Pallet.....	I-39
90043	Armature Bracket.....	I-29	90279	Type Pallet.....	I-38
90069	Post.....	I-29	90281	Celluloid Keytop.....	I-40
90088	Latch.....	I-31	90282	Celluloid Keytop.....	I-40
90101	Set of Keytops - Spring Cushion (Weather Map Service)I-39,40;IV-3		90283	Celluloid Keytop.....	I-40
90103	Set of Parts to Disseminate Weather Map Data.....	IV-3	90284	Set of Type Pallets-Large Gothic Style.....	I-36, 69
90192	Type Bar (with Pallet).....	I-37	90287	Detent Lever.....	I-56, 69
90193	Type Bar (with Pallet).....	I-37	90288	Rack.....	I-69
90194	Type Bar (with Pallet).....	I-36	90289	Spacing Gear - Upper.....	I-69
90195			90421	Spacer.....	I-63, 64
through	Type Bars (with Pallets).....	I-37	90438	Wick.....	I-11, 12
90203			90505	Locking Lever.....	I-30
90204	Type Bar (with Pallet).....	I-36	90507	Top Plate.....	I-30
90205	Type Bar (with Pallet).....	I-37	90508	Spring Arm.....	I-30
90206	Type Bar (with Pallet).....	I-36	90509	Detent.....	I-29
90207	Type Bar (with Pallet).....	I-37	90510	Spring.....	I-29
90208	Type Bar (with Pallet).....	I-37	90511	Screw (6-40 x 13/16 Hex).....	I-15, 19, 29
90209			90512	Bracket.....	I-29
through	Type Bars (with Pallets).....	I-36	90513	Screw (6-40 Eccentric).....	I-29
90211			90514	Screw (3/16-40 Pivot).....	I-29
90212			90515	Screw (3/16-40 Pivot).....	I-29
through	Type Bars (with Pallets).....	I-37	90516	Selector Arm.....	I-29
90217			90517	Spring.....	I-29
90218	Type Bar (with Pallet).....	I-38	90518	Locking Wedge.....	I-29
90219	Type Bar (with Pallet).....	I-37	90519	Screw (2-56 x 3/16 Special)....	I-29
90220	Type Bar (with Pallet).....	I-36	90520	Armature Lever.....	I-29
90221	Type Bar (with Pallet).....	I-38	90524	Screw (4-40 Special).....	I-29
90222	Type Bar (with Pallet).....	I-38			
90223	Type Bar (with Pallet).....	I-36			
90224	Type Bar (with Pallet).....	I-37			
90225	Type Bar (with Pallet).....	I-37			
90226	Type Bar (with Pallet).....	I-36			

Part Number	Description	Page	Part Number	Description	Page
90599	Shim (.008").....	I-60	91519	Blocking Bail.....	I-76
90752	Washer - Felt.....	I-1	91521	Set of Type Pallets - Murray Style.....	I-36
90760	Range Scale Assembly.....	I-31	91526	Type Pallet.....	I-38
90774	Bell Crank.....	I-31	91527	Type Pallet.....	I-38
90775	Range Scale.....	I-31	91528	Spring Cushion Keytop.....	I-40
90791	Lock Washer.....	I-29, 32, 68	91578	Type Bar (with Pallet).....	I-38
90814	Resistor (1000 OHMS).....	I-4	91600	Screw (6-40 x 31/32 Hex).....	I-17
90815	Resistor.....	III-3	91610	Type Pallet.....	I-38
90951	Lock Washer.....	I-54	91611	Type Bar (with Pallet).....	I-38
91013	Type Pallet.....	I-38	91617	Shim (.010").....	I-43
91018	Type Bar (with Pallet).....	I-38	91619	Spring Cushion Keytop.....	I-39
91032	Spring Cushion Keytop.....	I-39	91621	Window.....	II-2
91033	Spring Cushion Keytop.....	I-39	91657	Lever Assembly.....	I-22
91034	Spring Cushion Keytop.....	I-39	91658	Extension.....	I-22
91043	Type Pallet.....	I-37	91659	Lockout Lever.....	I-22
91044	Type Pallet.....	I-37	91683	Nut (15/32-32 Hex).....	I-2, 45; III-3
91045	Type Pallet.....	I-36	91684	Nut (15/32-32 Ring).....	I-2; III-3
91046	Type Pallets.....	I-37	91721	Screw 10-32 x 3-3/4 Fil.).....	I-4
through	Type Pallets.....	I-37	91744	Screw (6-40 x 13/64 Fil.).....	I-5
91054	Type Pallet.....	I-36	91746	Terminal Block.....	I-5
91056	Type Pallet.....	I-37	91753	Bracket.....	III-3
91057	Type Pallet.....	I-36	91754	Guard.....	III-3
91058	Type Pallet.....	I-37	91755	Toggle Switch.....	III-3
91059	Type Pallet.....	I-37	91761	Bracket.....	I-45; II-3
91060	Type Pallets.....	I-36	91762	Cable Assembly.....	I-45; II-3
through	Type Pallets.....	I-36	91763	Cable Assembly.....	I-45; II-3
91062	Type Pallets.....	I-37	91764	Bracket.....	I-5
91063	Type Pallets.....	I-37	91765	Spacing Collar.....	I-5
through	Type Pallets.....	I-37	91766	Cable Clamp.....	I-4
91068	Spring.....	I-12, 30	91767	Cable Clamp.....	I-4
91120	Spring Cushion Keytop.....	I-39	91768	Wire.....	I-7
91133	Spring Cushion Keytop.....	I-39	91769	Cable.....	II-4
91134	Spring Cushion Keytop.....	I-39	91770	Cable.....	II-4
91135	Platen - Rubber Covered.....	I-28	91786	Set of Parts for Relay Mounting..	I-2
91136	Platen - Rubber Covered.....	I-28			IV-2
91144	Spring Cushion Keytop.....	I-39	91787	Resistor.....	I-2
91145	Bracket.....	I-69	91789	Line Relay Cable.....	I-2; IV-2
91150	Screw (10-32 x 1-9/16 Fil.).....	I-5	91805	Type Pallet.....	I-36
91155	Contact Lever.....	I-65	91808	Spring Cushion Keytop.....	I-39
91158	Bracket.....	I-65	91809	Spring Cushion Keytop.....	I-40
91159	Set of Parts for Remote Signal Bell Contacts.....	I-65	91810	Spring Cushion Keytop.....	I-39
91175	Roller Assembly.....	I-19	91811	Spring Cushion Keytop.....	I-40
91213	Bracket.....	I-65	91813	Type Pallet.....	I-38
91218	Selector Mounting Plate.....	I-29, 30	91814	Type Pallet.....	I-38
91232	Type Pallet.....	I-38	91827	Set of Parts for Converting 74839 Motor Unit to 91830.....	II-3
91233	Type Bar (with Pallet).....	I-38	91828	Set of Parts for Converting 74840 Motor Unit to 91831.....	II-3
91234	Spring Cushion Keytop.....	I-39	91830	Motor Unit.....	II-3
91266	Retaining Disk.....	I-31	91831	Motor Unit.....	II-3
91273	Spring Cushion Keytop.....	I-40	91832	Paper Spindle.....	I-57
91274	Spring Cushion Keytop.....	I-40	91850	Screw (10-32 Special).....	I-26, 28
91277	Cable.....	II-4	91851	Nut (10-32 Special).....	I-26, 28
91286	Pinion (7T).....	I-41	91868	Platen - Steel Jacketed.....	I-28
91287	Gear (24T).....	I-41	91871	Platen - Steel Jacketed.....	I-28
91294	Spring Cushion Keytop.....	I-39	91873	Type Pallet.....	I-38
91507	Set of Parts for Triple Line- Feed Function.....	I-66	91874	Type Pallet.....	I-39
91509	Platen - Steel Jacketed.....	I-28	91875	Type Pallet.....	I-38
91512	Platen - Rubber Covered.....	I-28	91876	Spring Cushion Keytop.....	I-39

Part Number	Description	Page	Part Number	Description	Page
91877	Spring Cushion Keytop.....	I-40	92529	Type Pallet.....	I-38
91878	Spring Cushion Keytop.....	I-40	92530	Spring Cushion Keytop.....	I-39
91881	Plate.....	I-53,73	92534	Test Key.....	I-13
91882	Latch.....	I-53,73	92575	Synchronous Motor.....	I-42
91883	Pawl.....	I-53,73	92687	Washer.....	I-69
91884	Plate.....	I-53	92745	Paper Chute.....	I-55,56
91885	Blocking Bail.....	I-20,53,76	92748	Screw (6-40 x 1-7/16 Fil.)...	I-46
91895	Set of Parts to Control Reperforator from Model 15 Printer.....	I-53	92784	Set of Parts to Provide End-of-Line Printing and Spacing Cutout Mechanism....	I-63
91898	Cable.....	II-4;III-3	92785	Printing Bail Latch.....	I-63
91943	Strap.....	I-45	92787	Eccentric Bushing.....	I-63
92003	Name Plate.....	II-2	92789	Bracket.....	I-63
92108	Dust Shield.....	I-33	92790	Clutch Stop.....	I-63
92109	Dust Shield.....	I-29	92793	Platen - Steel Jacketed.....	I-28
92154	Set of Parts for Converting Send-Receive-Break Mechanism from Single to Double Blank Operation.....	I-34;IV-3	92795	Platen - Steel Jacketed.....	I-28
92170	Bracket.....	I-46	92796	Platen - Rubber Covered.....	I-28
92176	Base Cable.....	I-53,73	92798	Platen - Rubber Covered.....	I-28
92180	Spring Cushion Keytop.....	I-40	92801	Type Pallet.....	I-38
92204	Cable Clamp.....	I-58	92802	Spring Cushion Keytop.....	I-39
92216	Filter.....	I-46	92819	Platen - Steel Jacketed.....	I-28
92222	Filter Assembly.....	I-46	92821	Platen - Steel Jacketed.....	I-28
92231	Set of Keytops - Spring Cushion I-39,40	I-39,40	92822	Spring Cushion Keytop.....	I-39
92232	Set of Parts for Converting Bell System 15E** Keyboard to 15D**.....	II-3	92823	Spring Cushion Keytop.....	I-39
92237	Cable.....	II-4	92824	Spring Cushion Keytop.....	I-40
92238	Cable.....	II-4	92854	Plug (2 Prong).....	I-9
92256	Type Pallet.....	I-37	92856	Resistor.....	I-4
92257	Type Bar (with Pallet).....	I-37	93018	Screw (4-40 Shoulder).....	I-62
92258	Spring Cushion Keytop.....	I-39	93022	Spring.....	I-62
92264	Screw (6-32 x 2-1/4 Rd.Hd.)..	I-46	93073	Resistor Assembly.....	I-4
92273	Magnet Core.....	I-29	93075	Nut (15/32-32 Ring).....	I-45
92291	Capacitor.....	I-4,66	93085	Spring Cushion Keytop.....	I-39
92299	Set of Keytops - Spring Cushion I-39,40	I-39,40	93108	Lock Washer.....	I-17
92300	Platen - Steel Jacketed.....	I-28	93112	Screw (4-40 x 7/8 Fil.).....	I-54
92303	Platen - Steel Jacketed.....	I-28	93141	Screw (6-40 x 7/32 Fil.)..	I-44,61
92304	Platen - Rubber Covered.....	I-28	93152	Contact Spring.....	I-62
92305	Line Feed Ratchet (37T).....	I-24	93167	Reverse Arm - Left.....	I-21;IV-4
92306	Detent Ratchet (37T).....	I-24	93168	Reverse Arm - Right.....	I-21;IV-4
92308	Platen - Rubber Covered.....	I-28	93636	Resistor (100 OHMS).....	I-59
92309	Resistor.....	I-46,64	93668	Type Pallet.....	I-38
92341	Spring Cushion Keytop.....	I-40	93669	Type Pallet.....	I-38
92441	Type Pallet.....	I-39	93728	Type Bar (with Pallet).....	I-38
92442	Type Pallet.....	I-38	93730	Set of Keytops - Spring Cushion.....	I-39,40
92443	Type Pallet.....	I-39	93731	Set of Keytops - Spring Cushion.....	I-39,40
92444	Type Pallets.....	I-38	93735	Spring Cushion Keytop.....	I-40
through 92449	Type Pallets.....	I-38	93737	Shim (.004").....	I-10
92450	Type Bars (with Pallets).....	I-38	93743	Cover Lid.....	I-47
through 92455	Type Bars (with Pallets).....	I-38	93754	Bail.....	I-20
92505	Shielding Tube.....	I-46	93755	Roller.....	I-20
92511	Lock Loop Roller.....	I-12	93756	Housing.....	I-20
			93757	Bearing.....	I-20
			93758	Washer - Felt.....	I-20
			93834	Glass.....	I-62
			93839	Bail Assembly.....	I-20
			93848	Paper Guide Plate.....	I-62
			93854	Synchronous Motor.....	I-42
			93875	Paper Guide.....	I-67

Part Number	Description	Page	Part Number	Description	Page
93882	Mounting Plate.....	I-46	94673	Star Wheel.....	I-63,64
93883	Capacitor Assembly.....	I-46	94674	Spring Washer.....	I-63,64
93884	Filter Assembly (Transmitting Contacts).....	I-46	94677	Retainer Plate.....	I-63
93887	Spring Cushion Keytop.....	I-39	94687	Stud.....	I-67
93894	Contact Lever Latch.....	I-65	94693	Wick.....	I-19
93915	Spring Cushion Keytop.....	I-40	94694	Wick.....	I-14
94000	Spring Cushion Keytop.....	I-39	94709	Spring.....	I-68
94009	Toggle Switch.....	I-45	94712	Washer.....	I-57
94015	Clutch Lever Bracket.....	I-30,33	95050	Power Cord.....	I-9
94073	Type Pallet.....	I-38	95052	Power Cord.....	I-9
94074	Spring Cushion Keytop.....	I-39	95063	Plug (3 Prong).....	I-9
94094	Washer - Fiber.....	I-18	95064	Plug (4 Prong).....	I-9
94226			95088	Set of Parts for Remote Signal Bell Contacts.....	I-65
through	Type Pallets.....	I-38	95089	Transformer.....	I-65
94233			95090	Chime Assembly.....	I-65
94234	Type Pallet.....	I-39	95091	Typing Unit Cable.....	I-65
94235	Type Pallet.....	I-38	95092	Base Cable.....	I-65
94240	Spiral Gear (34T).....	I-56	95102	Celluloid Keytop.....	I-40
94241	Spiral Gear (6T).....	I-56	95162	Spring Cushion Keytop.....	I-39
94242	Driving Clutch.....	I-56	95167	Spring Cushion Keytop.....	I-39
94243	Driven Clutch.....	I-56	95168	Spring Cushion Keytop.....	I-40
94248	Cable Clamp.....	I-58	95169	Spring Cushion Keytop.....	I-40
94249	Cable Clamp.....	I-58	95171	Type Pallet.....	I-38
94295	Contact Assembly.....	I-74	95172	Type Bar (with Pallet).....	I-38
94296	Contact Lever.....	I-74	95173	Spring Cushion Keytop.....	I-39
94300	Blocking Bail.....	I-76;II-1	95201	Set of Parts to Provide End-Of- Last-Form Indicating Mechanism.....	I-62
94303	Screw (6-40 Pilot).....	II-1	95210	Set of Keytops - Spring Cushion	I-39,40
94401	Type Pallet.....	I-38	95213	Set of Parts for Spark Protection.....	I-64
94406	Type Pallet.....	I-38	95214	Set of Parts for Spark Protection.....	I-64
94411	Type Pallet.....	I-38	95216	Set of Parts to Provide Electrical Word and Operations Counter for Use with A.C.....	I-64
94468	Type Pallet.....	I-38	95217	Set of Parts to Provide Electrical Word and Operations Counter for Use with D.C.....	I-64
94490	Series - Parallel Switch Assembly I-31;II-4;III-3;IV-2		95238	Resistor.....	I-64
94496	Spring Cushion Keytop.....	I-40	95239	Screw (2-56 Special).....	I-64
94616	Set of Parts for Instruction Card Holder.....	I-68	95240	Cover.....	I-64
94617	Spacer.....	I-49,68;III-2	95241	Contact Spring.....	I-64
94622	Set of Parts to Provide Sprocket Feed Tearing Edge Mounted on the Typing Unit.....	I-61	95242	Bracket.....	I-64
94623	Arm - Left.....	I-61	95243	Shaft.....	I-64
94624	Screw (6-40 x 1-1/8 Fil.).....	I-61	95244	Bearing Block.....	I-64
94625	Arm - Right.....	I-61	95246	Cable.....	I-64
94626	Spacing Collar.....	I-61	95247	Bushing.....	I-64
94627	Bracket.....	I-61	95248	Bracket.....	I-64
94628	Screw (10-32 x 7/8 Rd.Hd.).....	I-61	95249	Plate Insulator.....	I-64
94629	Blade.....	I-61	95302	Screw (6-40 x 1-3/4 Flat Hd.).....	I-64
94630	Paper Guide.....	I-61	95303	Bushing.....	I-64
94648	Spring Cushion Keytop.....	I-40	95316	Detent Lever.....	I-69
94663	Set of Parts for Mechanical Word Counter.....	I-63	95317	Set of Parts to Apply Signal Distortion Prevention Detent.....	I-69
94664	Support - Right.....	I-63,64	95320	Toggle Switch.....	I-2
94665	Screw (6-40 Shoulder).....	I-63,64			
94666	Lever.....	I-63,64			
94668	Bell Crank.....	I-63,64			
94669	Screw (4-40 Shoulder).....	I-63,64			
94670	Lever.....	I-63,64			
94671	Bracket.....	I-63,64			

Part Number	Description	Page	Part Number	Description	Page
95380	Set of Parts Converting a Typing Unit with a Pulling Magnet Selector to a Typing Unit with a Holding Magnet Selector.....	I-29	97381	Plunger.....	I-70
95636	Screw (6-40 Special).....	I-52	97382	Carriage Track.....	I-70
95774	Post.....	I-66	97384	Type Bar Guide.....	I-70
95935	Insulator.....	I-44	97388	Bracket.....	I-70
95936	Choke Coil.....	I-44	97389	Link.....	I-70
95937	Capacitor.....	I-44, 46	97390	Bar.....	I-70
95938	Capacitor.....	I-44, 46	97391	Screw (4-40 Shoulder).....	I-70
96117	Wire.....	I-4	97392	Armature Lever.....	I-70
96208	Wire.....	I-7	97394	Screw (6-40 Shoulder).....	I-70
96258	Wire.....	I-2	97396	Magnet Yoke.....	I-70
96261	Wire.....	I-2	97397	Armature.....	I-70
96276	Strap.....	I-71	97399	Bracket.....	I-71
96493	Spring Cushion Keytop.....	I-40	97400	Spacer.....	I-71
96522	Spring Cushion Keytop.....	I-40	97401	Link.....	I-71
96523			97402	Screw (6-40 Shoulder).....	I-71
through	Spring Cushion Keytops.....	I-39	97403	Contacting Operating Lever.....	I-71
96526			97404	Latch.....	I-70
96527			97405	Send-Receive Lever.....	I-71
through	Spring Cushion Keytops.....	I-40	97406	Latch.....	I-71
96531			97407	Lever.....	I-70
96532	Spring Cushion Keytop.....	I-39	97408	Oscillator.....	I-70
96533	Spring Cushion Keytop.....	I-39	97409	Spacer.....	I-71
96534	Spring Cushion Keytop.....	I-40	97410	Bracket.....	I-70
96535	Set of Gears.....	I-41	97411	Plate.....	I-70
96536	Set of Gears.....	I-41	97412	Bracket.....	I-71
96545			97413	Contact Assembly.....	I-71
through	Type Pallets.....	I-38	97420	Cable.....	I-71
96548			97600	Ribbon Carrier.....	I-70
96549			97604	Set of Parts for Operation on "Blank" Selection.....	II-2
through	Type Pallets.....	I-39	97621	Contact Assembly.....	II-2
96554			97622	Contact Spring.....	II-2
96555	Type Pallet.....	I-38	97626	Cable.....	II-2
96556	Type Pallet.....	I-38	97645	Set of Parts for Upper Case "H" Contact Mechanism.....	I-7,8
96557	Type Pallet.....	I-39	97646	Set of Parts for Motor Control.....	I-8
96558	Type Pallet.....	I-38	97648	Strap.....	I-71
96559	Type Pallet.....	I-37	97649	Spring Cushion Keytop.....	I-39
96598	Spring Cushion Keytop.....	I-39	97675	Draw Strap.....	I-18
96599	Spring Cushion Keytop.....	I-40	97852	Celluloid Keytop.....	I-40
96763	Shim (.012").....	IV-1	97924	Type Pallet.....	I-38
96764	Shim (.016").....	IV-1	97925	Type Pallet.....	I-38
96765	Shim (.020").....	IV-1	97926	Type Bar (with Pallet).....	I-38
96807	Set of Parts to Control Reperforator from Model 15 Printer.....	I-53	97927	Type Bar (with Pallet).....	I-38
96822	Function Lever.....	I-35	97928	Spring Cushion Keytop.....	I-39
96883	Terminal.....	I-10, 58, 66	97929	Spring Cushion Keytop.....	I-39
96892	Set of Parts for Upper Case "H" Electrical Motor Control.....	I-8	98049	Spring Cushion Keytop.....	I-39
96893	Motor Stop Assembly.....	I-8	98351	Spring Cushion Keytop.....	I-39
96894	Bracket.....	I-7	98379	Type Bar (with Pallet).....	I-38
96895	Cable.....	I-7	98387	Sending Contact Spark Protection (Wave Shaper).....	I-4
97117	Ribbon: Red-Black.....	I-70	98465	Set of Type Pallets Murray Style.....	I-36
97203	Spring Cushion Keytop.....	I-40	98492	Function Lever.....	I-35
97292	Link.....	I-29	98497	Celluloid Keytop.....	I-40
97306	Lock Washer.....	I-16	98499	Celluloid Keytop.....	I-40
97317	Clamping Plate.....	I-29	98500	Celluloid Keytop.....	I-40
97380	Type Bar Basket.....	IV-2	98833	Screw (4-40 x 31/32 Fil.).....	I-7
			98893	Spring Cushion Keytop.....	I-40
			99038	Type Pallet.....	I-39

Part Number	Description	Page	Part Number	Description	Page
99039	Type Pallet.....	I-38	99535	Spring Cushion Keytop.....	I-39
99040	Type Pallet.....	I-38	99538	Spring Cushion Keytop.....	I-40
99041	Spring Cushion Keytop.....	I-39	99543	Spring Cushion Keytop.....	I-39
99042	Spring Cushion Keytop.....	I-40	through	Spring Cushion Keytops.....	I-39
99043	Spring Cushion Keytop.....	I-40	99545	Spring Cushion Keytop.....	I-40
99112	Function Lever.....	I-35	99549	Spring Cushion Keytop.....	I-40
99163	Type Pallet.....	I-38	99551	Spring Cushion Keytop.....	I-40
99164	Type Pallet.....	I-38	99556	Spring Cushion Keytop.....	I-39
99165	Type Pallet.....	I-38	through	Spring Cushion Keytops.....	I-39
99166	Type Bar (with Pallet).....	I-38	99558	Spring Cushion Keytop.....	I-40
99167	Type Bar (with Pallet).....	I-38	99559	Spring Cushion Keytop.....	I-40
99168	Type Bar (with Pallet).....	I-38	99560	Spring Cushion Keytop.....	I-39
99169	Spring Cushion Keytop.....	I-40	99561	Spring Cushion Keytop.....	I-39
99175	Spring Cushion Keytop.....	I-39	99562	Spring Cushion Keytop.....	I-40
99188	Type Pallet.....	I-38	99564	Spring Cushion Keytop.....	I-39
99189	Type Pallet.....	I-38	99566	Spring Cushion Keytop.....	I-39
99190	Spring Cushion Keytop.....	I-39	99568	Spring Cushion Keytop.....	I-39
99197	Type Pallet.....	I-38	99569	Spring Cushion Keytop.....	I-39
99198	Type Bar (with Pallet).....	I-38	99574	Spring Cushion Keytop.....	I-39
99199	Spring Cushion Keytop.....	I-40	99575	Spring Cushion Keytop.....	I-39
99210	Spring Cushion Keytop.....	I-40	99578	Spring Cushion Keytop.....	I-39
99211	Celluloid Keytop.....	I-40	99579	Spring Cushion Keytop.....	I-40
99250	Filter Assembly.....	I-44	99589	Spring Cushion Keytop.....	I-40
99354	Container.....	I-44	99593	Spring Cushion Keytop.....	I-39
99355	Bracket.....	I-44	99629	Spring Cushion Keytop.....	I-40
99356	Bracket.....	I-44	99632	Spring Cushion Keytop.....	I-39
99357	Retaining Strap.....	I-44	99676	Celluloid Keytop.....	I-40
99440	Platen - Rubber Covered.....	I-28	99677	Celluloid Keytop.....	I-40
99447	Spring Cushion Keytop.....	I-39	99689	Celluloid Keytop.....	I-40
99450	Spring Cushion Keytop.....	I-39	99698	Celluloid Keytop.....	I-40
99452	Spring Cushion Keytop.....	I-40	99700	Celluloid Keytop.....	I-40
99458	Platen - Rubber Covered.....	I-28	through	Celluloid Keytops.....	I-40
99502	Modification Kit for Two-Color Printing.....	I-70,71	99704	Screw (6-40 x 13/64 Fil.).....	I-70
99503	Template.....	I-70	99744	Resistor.....	I-2
99504	Type Pallet.....	I-39	99745	Line and Selector Jack.....	I-2;IV-1
99505	Type Pallets.....	I-38	99802	Retainer Plate.....	I-2
through	Type Pallets.....	I-38	99803	Insulator.....	I-2
99507	Type Pallet.....	I-39	99804	Insulator.....	I-2
99508	Type Pallet.....	I-39	99805	Plunger.....	I-2
99509	Type Pallet.....	I-39	99806	Bracket.....	I-2
99510	Type Pallets.....	I-38	99807	Contact Spring.....	I-2
through	Type Pallets.....	I-38	99809	Contact Spring.....	I-2
99515	Type Pallet.....	I-39	99816	Relay Base.....	I-2;IV-1
99516	Type Pallet.....	I-39	99817	Foot - Metal.....	I-1
99517	Type Pallets.....	I-38	99818	Clamp.....	I-1
through	Type Pallets.....	I-38	99897	Shaft.....	I-55
99519	Type Pallet.....	I-39	99898	Screw (6-40 Special).....	I-55
99520	Type Pallet.....	I-39	99939	Ring.....	I-73
99521	Type Pallet.....	I-38	99959	Cord Clamp.....	I-1
99523	Type Pallet.....	I-38	100565	Screw (6-40 x 3/4 Hex).....	I-1
99524	Type Pallet.....	I-39	100759	Screw (4-40 x 3/16 Flat).....	I-27
99525	Type Pallets.....	I-38	101003	Jewel - Amber.....	I-58
through	Type Pallets.....	I-38	101384	Set of Parts for Upper Case "H" Contact Mechanism.....	II-2
99527	Type Pallet.....	I-39	101419	Mechanical Counter.....	I-63
99528	Type Pallet.....	I-39	101456	Screw (6-32 x 9/32 Rd. Hd.).....	I-10
99529	Type Pallets.....	I-38			58,66
through	Type Pallets.....	I-38	101470	Plug.....	I-59
99533	Spring Cushion Keytop.....	I-40	101538	Handwheel.....	I-73
99534					

Part Number	Description	Page	Part Number	Description	Page
101584	Type Bar (with Pallet).....	I-38	103286	Fusetron - 1.6 Amp.....	I-1
101597	Function Lever.....	II-1	103289	Fusetron - 0.8 Amp.....	I-1
101598	Contact Lever.....	II-1	103300	Function Lever.....	I-35
101748	Type Bar.....	I-38	103323	Washer.....	I-61
101749	Blocking Bail.....	I-20,69,76	103440	Set of Parts to Provide for Printing and Spacing Blank and Other Functions....	I-69
101750	Type Bar (with Pallet)....	I-38,69	103527	Pressure Roller Lever.....	I-55
101751	Type Bar (with Pallet)....	I-38,69	103528	Pressure Roller Lever.....	I-55
101752	Type Bar (with Pallet)....	I-38,69	103628	Speed Indicator.....	I-41
101757	Contact Spring.....	II-1	103746	Resistor.....	I-5;IV-1
101758	Contact Spring.....	II-1	103933	Type Pallet.....	I-38
101760	Contact Assembly.....	II-1	103934	Type Pallet.....	I-38
101808	Shim (.004").....	I-60	103975	Window.....	I-47
101919	Operating Lever.....	II-1	104068	Repeat Lever Yoke.....	I-58
101920	Contact Lever.....	II-1	104075	Type Pallet.....	I-36
101921	Universal Contact and Bracket Assembly.....	II-1	104084	Blocking Bail.....	I-20,76
101922	Bracket.....	II-1	104206	Set of Parts to Provide Connection on Base for Typing Units with Switching Contacts.....	II-1
101923	Contact Spring.....	II-1	104243	Spacer Bar Shaft.....	I-58
101927	Contact Spring.....	II-1	104244	Repeat Rod.....	I-58
101928	Function Lever.....	II-1	104246	Spacer Bar Loop.....	I-58
101929	Bracket.....	II-1	104300	Hub.....	I-73
101930	"Figures" Contact and Bracket Assembly.....	II-1	104301	Block.....	I-73
102014	Cover.....	II-1	104302	Pin.....	I-73
102015	Cable.....	II-1	104451	Lock Washer.....	I-19,43
102049	Cable.....	II-1	104473	Pressure Roller Bushing..	I-56;IV-2
102100	Terminal.....	I-9	104521	Handwheel Assembly.....	I-73
102171	Shelf.....	I-67	104572	Arm.....	I-47;IV-3
102369	Platen - Steel Jacketed.....	I-28	104666	Set of Parts for Cam Operated Contacts.....	I-66
102372	Platen - Steel Jacketed.....	I-28	104687	Contact Spring.....	I-66
102671	Contact Spring.....	II-1	104688	Guard.....	I-66
102672	Contact Spring.....	II-1	104697	Cable.....	I-66
102673	Contact Spring.....	II-1	104698	Wire.....	I-66
102721	Shelf.....	I-67	104731	Housing.....	I-63
102820	Strap.....	I-66	104824	Spring.....	I-17
102821	Set of Parts to Provide 1/10 MF Capacitor Across Upper Case "H" Motor Control Contacts...I-66		104990	Glass.....	I-47
102874	Filter Assembly (Power Leads)	I-46	104995	Pin.....	I-24;IV-2
102907	Spool Retainer.....	I-21	105029	Collar.....	I-24;IV-2
102914	Bracket.....	I-46	105048	Set of Parts for Lubricating Model 15 Printer Main Shaft...I-16	
102915	Insulator.....	I-46	105149	Extension Lever.....	I-58
102916	Bracket.....	I-46	105221	Contact Spring.....	I-3
102917	Insulator.....	I-46	105222	Contact Spring.....	I-3
102918	Terminal Block.....	I-46	105223	Contact Spring.....	I-3
102940	Ground Wire.....	I-46	105274	Function Lever.....	I-35,54
102946	Filter.....	I-46	105333	Type Pallet.....	I-38
102982			105337	Type Pallet.....	I-38
through	Type Bars (with Pallets)....	I-38	105338	Type Pallet.....	I-38
102984			105343	Type Pallet.....	I-36
102985	Type Bar (with Pallet).....	I-37	105381	Blocking Bail.....	I-54,76
102986			105912	Lock Washer.....	I-45
through	Type Bars (with Pallets)....	I-38	105940	Stiffener.....	I-58
102991			105960	Screw (6-40 x 41/64 Hex)....	I-58
103169	Type Pallet.....	I-39	106038	Blocking Bail.....	I-20,54,76
103170	Type Pallet.....	I-39	106039	Set of Parts to Adapt a Mech. Motor Control to Operate on Shift-Blank-Stop.....	I-56
103171	Type Pallet.....	I-38			
103236	Plug - Black.....	I-9			
103284	Fusetron - 3.2 Amp.....	I-1			

Part Number	Description	Page	Part Number	Description	Page
106140	Guide Plate.....	I-54	110761	Signal Bell.....	I-65;III-1
106141	Lever.....	I-54	110762	Signal Bell.....	I-65;III-1
106142	Bell Crank Retainer.....	I-54	110763	Signal Bell.....	I-65;III-1
106143	Trip Lever.....	I-54	110908		
106144	Function Lever.....	I-35, 54	through	Type Pallets.....	I-38
106145	Function Lever.....	I-35	110911		
106146	Bail.....	I-54	110912		
106148	Extension.....	I-54	through	Type Bars (with Pallets).....	I-38
106150	Mounting Plate.....	I-54	110915		
106244	Resistor.....	I-5, 31	110920	Guide Rod.....	I-49;III-2
106245	Resistor.....	I-31	110921	Guide Rod.....	I-49
106279	Function Lever.....	I-35, 54	110980	Filler - Fiber.....	I-61
106852	Retainer Plate.....	I-54	110983	Clamp - Rear.....	I-61
106855	Screw (4-40 Eccentric Shoulder)	I-54	110984	Clamp - Front.....	I-61
			110985	Glass - Rear.....	I-61
106938	Set of Parts to Convert Test Key from Push Type to Cam Type.....	I-13	110986	Glass - Front.....	I-61
106939	Set of Parts to Provide Spacing for 8 Characters per Inch...I-69		111003	Receptacle.....	I-58
106968	Set of Parts to Provide for 84 Characters per Line or 11-2/3 Characters per Inch.....I-69		111015	Function Lever.....	I-35
107112	Shim (.002").....	I-11	111017	Screw (6-40 x 5/16 Fil.)...I-56, 69	IV-4
107137	Shield.....	I-27	111027	Buffer Lever Block.....	I-14
107141	Dust Shield.....	I-22;III-3	111182	Set of Parts for Converting Bell System 15F** Keyboard to 15G** (Set of Keytops - Spring Cushion).....	I-39, 40;II-3
107159	Set of Type Pallets (Weather Map Service).....	I-37;IV-3	111253	Cord - Nylon.....	I-61
107160	Set of Parts to Convert to Weather Map Service.....	IV-3	111259	Hook.....	I-61
107174	Paper Stripper.....	I-27;IV-2	111262	Bracket.....	I-13
107176	Set of Type Pallets - Murray Style.....	I-36	111303	Container.....	I-46
107213	Bracket.....	I-2	111329	Line Guide.....	I-49
107269	Polar-Neutral Toggle Switch..I-2		111365	Type Pallet.....	I-38
107273	Spring - Left.....	I-21	111366	Type Pallet.....	I-39
107274	Spring - Right.....	I-21	111367	Type Pallet.....	I-39
107458	Spring.....	I-61	111448	Type Pallet.....	I-37
107460	Gear (20T).....	I-41	111516	Washer.....	I-74
107461	Pinion (7T).....	I-41	111654	Pad - Felt.....	I-47
107474	Set of Gears.....	I-41	111713	Screw (2-56 x 5/32 Flat Hd.).....	III-3
107485	Screw (6-40 Eccentric Shoulder).....	I-12;IV-1	111736	Type Pallet.....	I-38
107487	Container.....	I-21	111737	Type Pallet.....	I-38
107488	Container.....	I-21	111738	Type Pallet.....	I-39
107491	Screw (10-32 x 1 Flat Hd.)...I-3		111739	Type Pallet.....	I-39
109770	Terminal Block.....	I-31	111740	Type Pallet.....	I-38
109889	Screw (3-56 x 1/4 Flat Hd.)..I-13		111741	Type Pallet.....	I-38
110350	Spring Block.....	I-21	111742	Type Pallet.....	I-39
110351	Backstop.....	I-21	111743	Type Pallet.....	I-39
110352	Set of Parts for Ribbon Reverse Arm, Yield Spring and Backstop.....	I-21;IV-4	111744	Type Pallet.....	I-38
110434	Screw (4-40 x 3/16 Fil.).....	I-44	111745	Type Pallet.....	I-38
110435	Nut (4-40 Hex)....I-2, 12, 17, 24, 31, 32, 47, 50, 53, 54, 63, 64, 73, 74		111746	Type Pallet.....	I-39
110437	Spring.....	I-3, 63	111747		
110440	Pin.....	I-52	through	Type Pallets.....	I-38
110743	Lock Washer.....	I-31, 69	111752		
			111753	Type Pallet.....	I-39
			111754	Type Pallet.....	I-38
			111755	Type Pallet.....	I-39
			111756	Type Pallet.....	I-38
			111757	Type Pallet.....	I-39
			111758	Type Pallet.....	I-38
			111759	Type Pallet.....	I-39

Part Number	Description	Page	Part Number	Description	Page
111760	Type Pallet.....	I-39	113675	Set of Parts for Independently Operated Paper Fingers.....	I-60
111761 through 111764	Type Pallets.....	I-38	113699	Paper Guide Roller Shaft Assembly.....	I-55
111765	Type Pallet.....	I-39	113700	Set of Parts for Two-Color Ribbon Printer Equipped with Reperforator Control.....	I-75
111766	Type Pallet.....	I-39	113703	Terminal Block Assembly (Series-Parallel)...	I-31;II-4;IV-2
111970	Cam Key.....	I-13	113704	Terminal Block Assembly...	I-31;IV-2
111987	Type Pallet.....	I-38	113749	Modification Kit to Convert Bell System Keyboard from Arrangement "A" to "D".....	I-40
111988	Type Pallet.....	I-39	113761	Set of Parts to Provide "H" Suppression on Keyboards.....	I-69
111989	Type Pallet.....	I-39	113780	Set of Parts for Printer Having Excessive wear on Side Frame..	I-74
111990	Type Pallet.....	I-38	113790	Set of Parts to Provide Tear-off Edge for Short Forms.....	I-62
111991	Type Pallet.....	I-38	113872	Eccentric Bushing.....	I-19;IV-1
111992 through 111994	Type Pallets.....	I-39	113892	Bracket.....	I-44
111995	Type Pallet.....	I-38	113951	Filter Assembly.....	I-44
111996 through 111998	Type Pallets.....	I-39	114069	Base Plate.....	I-1
111999	Type Pallet.....	I-38	114125	Screw (6-40 x 3/8 Hex).....	I-23
112000	Type Pallet.....	I-39	114139	Bell Crank.....	I-19;IV-1
112001	Type Pallet.....	I-39	114240	Copyholder Plate.....	I-49
112002	Type Pallet.....	I-38	114321	Synchronous Motor.....	I-42
112003	Type Pallet.....	I-38	114322	Capacitor.....	I-42
112016	Type Pallet.....	I-39	114323	Capacitor.....	I-42
112127	Cam Follower Hinge.....	I-58	114324	Bracket.....	I-42
112128	Cam Follower Retainer.....	I-58	114432	Code Bar.....	I-19,36;IV-1
112549	Set of Parts to Provide Local Test on Keyboard.....	I-13	114437	Knob.....	I-63
112571	Contact Spring.....	I-58	114477	Shelf.....	I-67
112572	Contact Spring.....	I-58	114515	Set of Keytops-Spring Cushion.....	I-39,40
112578	Plate.....	I-58	114518	Link.....	I-63,64
112621	Screw (4-40 Shoulder).....	I-22;III-3	114519	Eccentric Spring Post.....	I-63,64
112626	Nut (10-32 Hex).....	I-1,2,14,15,18,19,20,22,23,24,32,34,41,42,43,51,52,61,65;II-1	114520	Arm.....	I-56
112627	Nut (2-56 Hex).....	I-32,48,52,58,60,61	114521	Arm.....	I-56
112631	Spring.....	I-58	114627	Type Pallet.....	I-38
112634	Spring.....	I-11	114628	Type Pallet.....	I-38
112670	Local Test Key.....	I-13	114629	Type Pallet.....	I-39
112699	Screw (6-40 Set).....	I-24	114657	Spring.....	I-25,55,56;IV-2
113250	Spring Cushion Keytop.....	I-39	114717	Rail.....	I-1
113251	Spring Cushion Keytop.....	I-39	114748	Backstop Assembly.....	III-1
113252	Spring Cushion Keytop.....	I-40	114749	Cable.....	I-13;II-4
113259	Spring Cushion Keytop.....	I-40	114785	Type Bar (with Pallet).....	I-37
113296	Spring Cushion Keytop.....	I-39	114786	Type Bar (with Pallet).....	I-38
113309	Spring Cushion Keytop.....	I-39	114788	Type Bars (with Pallets).....	I-38
113310 through 113312	Spring Cushion Keytops.....	I-40	114794	Type Bar (with Pallet).....	I-37
113316	Spring Cushion Keytop.....	I-40	114826	Type Bar (with Pallet).....	I-37
113317	Spring Cushion Keytop.....	I-40	114829	Type Bars (with Pallets).....	I-37
113318	Spring Cushion Keytop.....	I-39	114832	Type Bar (with Pallet).....	I-37
113327	Spring Cushion Keytop.....	I-39	114835	Type Bar (with Pallet).....	I-37
113329	Spring Cushion Keytop.....	I-39	114836	Type Bar (with Pallet).....	I-37
113345	Spring Cushion Keytop.....	I-40	114838	Type Bar (with Pallet).....	I-36
113348	Spring Cushion Keytop.....	I-40	114839	Type Bar (with Pallet).....	I-37
113660	Set of Parts to Provide Switching Contacts on BP99 and BF105..	II-1	114840	Type Bar (with Pallet).....	I-36
			114842	Type Bar (with Pallet).....	I-37

Part Number	Description	Page	Part Number	Description	Page
114843	Type Bar (with Pallet).....	I-36	115751	Set of Parts for Communication Service.....	I-54
114846	Type Bar (with Pallet).....	I-37	115752	Set of Parts for Weather Service.....	I-54
114847	Type Bar (with Pallet).....	I-37	115765	Form Accumulating Shelf.....	I-67
114849	Type Bar (with Pallet).....	I-37	115766	Form Accumulating Shelf.....	I-67
114850	Type Bar (with Pallet).....	I-37	115769	Sprocket Feed Tearing Edge Assembly.....	I-61
114857	Set of Type Bars with Pallets - Large Gothic Style.....	I-36,56,69	115790	Single Pressure Roller on Platen Parts.....	I-55;IV-4
114861	Type Bar (with Pallet).....	I-37	115823	Type Bar Backstop Assembly....	I-22
114862	Type Bar (with Pallet).....	I-37	115842	Type Bar Backstop Assembly (with Dust Shield).....	I-22
114865	Type Bar (with Pallet).....	I-36	115847	End-of-Last-Form Indicating Mechanism.....	I-60
114864	Type Bars (with Pallets).....	I-37	115872	Set of Parts to Convert Typing Unit.....	I-27
through 114867	Type Bar (with Pallet).....	I-36	115889	Control Reperforator from Model 15 Printer.....	I-73
114868	Type Bar (with Pallet).....	I-36	116709	Bracket.....	I-44
114869	Type Bar (with Pallet).....	I-36	116714	Function Lever.....	I-35
114870	Type Bar (with Pallet).....	I-37	116761	Post.....	I-56,69
114890	Celluloid Keytops.....	I-40	116769	Blocking Bail.....	I-20,73,76
through 114894	Celluloid Keytop.....	I-40	116793	Lock Washer.....	I-26,57
114897	Celluloid Keytop.....	I-40	116965	Function Lever.....	I-35,53,73,74
114908	Celluloid Keytop.....	I-40	116992	Screw (1/4-32 Pilot).....	I-43
114919	Celluloid Keytop.....	I-40	117079	Rail - Right.....	I-62
114921	Celluloid Keytop.....	I-40	117080	Rail - Left.....	I-62
114958	Signal Lamp Cover.....	I-58	117141	Type Pallet.....	I-39
114959	Signal Lamp.....	I-58	117142	Type Pallet.....	I-39
114965	Filter Assembly (Line Relay)...	I-46	117143	Type Pallet.....	I-38
114967	Bracket.....	I-46	117145	Type Pallet.....	I-39
114992	Celluloid Keytop.....	I-40	117146	Type Pallet.....	I-38
115299	Terminal Strip.....	I-59	117147	Type Pallet.....	I-39
115542	Function Lever.....	I-35	117148	Type Pallet.....	I-38
115586	Cable.....	I-45	117149	Type Pallet.....	I-39
115620	Type Pallet.....	I-37	117150	Type Pallet.....	I-38
115621	Type Pallet.....	I-36	117151	Type Pallets.....	I-39
115622	Type Pallets.....	I-37	through 117157	Type Pallet.....	I-38
through 115627	Type Pallet.....	I-36	117158	Cover Lid (to Accommodate Paper Winder).....	I-47
115628	Type Pallet.....	I-36	117197	Set of Type Pallets - Gothic Style.....	I-36
115629	Type Pallets.....	I-38	117235	Type Pallet.....	I-37,39
through 115633	Type Pallet.....	I-39	117236	Type Pallet.....	I-36,38
115634	Type Pallet.....	I-38	117237	Type Pallet.....	I-37,39
115635	Type Pallet.....	I-39	117238	Type Pallet.....	I-37,39
115636	Type Pallet.....	I-38	117239	Type Pallet.....	I-36,38
115637	Type Pallet.....	I-39	117240	Type Pallet.....	I-37,39
115638	Type Pallet.....	I-38	117241	Type Pallet.....	I-37,39
115639	Type Pallet.....	I-39	117242	Type Pallet.....	I-37,39
115640	Type Pallet.....	I-39	117243	Type Pallet.....	I-39
115641	Type Pallet.....	I-38	117244	Type Pallet.....	I-38
115642	Type Pallet.....	I-39	117245	Type Pallet.....	I-38
115643	Type Pallet.....	I-38	117246	Type Pallet.....	I-39
115644	Type Pallet.....	I-38	117247	Type Pallet.....	I-39
115700	Copyholder Assembly.....	I-49	117248	Type Pallet.....	I-38
115704	Cover Plate - Front.....	I-48	117249	Type Pallet.....	I-39
115706	Cover Plate - Front.....	I-48			
115709	Copyholder Assembly.....	I-49			
115715	Cover Plate - Front.....	I-48			
115721	Cover Plate - Front.....	I-48			
115723	Form Accumulating Shelf.....	I-67			
115740	Glare Shield.....	I-61			

Part Number	Description	Page	Part Number	Description	Page
117258	Push Button Key.....	I-58	118011		
117306	Cover Plate - Front.....	I-48	through	Spring Cushion Keytops.....	I-40
117313	Adjustable Spindle.....	I-26;IV-2	118014		
117314	Spring.....	I-26, 57;IV-4	118015	Spring Cushion Keytop.....	I-39
117315	Hub.....	I-26	118017	Spring Cushion Keytop.....	I-40
117316	Hub.....	I-26	118018	Spring Cushion Keytop.....	I-40
117317	Stud.....	I-26, 57	118019	Spring Cushion Keytop.....	I-39
117318	Screw (6-32 x 1/4 Fil.)....	I-26, 57	118020	Spring Cushion Keytop.....	I-39
117319	Shaft.....	I-26, 57	118028	Spring Cushion Keytop.....	I-40
117407	Contact Spring.....	I-65	118034	Spring Cushion Keytop.....	I-40
117408	Contact Spring.....	I-7	118035		
117409	Mounting Plate.....	I-7	through	Type Pallets.....	I-38
117410	Cable.....	I-7	118037		
117434	Cover Door.....	I-47	118038	Type Pallet.....	I-39
117745	Set of Parts for Upper Case "H" Electric Motor Control.....	I-7	118039		
117746	Set of Parts for Motor Control.....	I-7	through	Type Pallets.....	I-38
117747	Motor Stop Assembly.....	I-7	118041		
117907	Shield.....	I-67	118042	Type Pallet.....	I-39
117931	Mounting Bracket.....	I-67	118043	Type Pallet.....	I-38
117936	Spring Cushion Keytop.....	I-40	118044	Type Pallet.....	I-39
117939	Spring Cushion Keytop.....	I-40	118045		
117940	Spring Cushion Keytop.....	I-39	through	Type Pallets.....	I-38
117943	Spring Cushion Keytop.....	I-39	118047		
117948	Spring Cushion Keytop.....	I-39	118048	Type Pallet.....	I-39
117949	Spring Cushion Keytop.....	I-39	118049	Type Pallet.....	I-39
117950	Spring Cushion Keytop.....	I-40	118052	Type Pallet.....	I-38
117951	Spring Cushion Keytop.....	I-39	118053	Type Pallet.....	I-39
117952	Spring Cushion Keytop.....	I-40	118054		
117954	Spring Cushion Keytop.....	I-39	through	Type Pallets.....	I-38
117955	Spring Cushion Keytop.....	I-39	118062		
117957	Spring Cushion Keytop.....	I-40	118063	Type Pallet.....	I-39
117967	Spring Cushion Keytop.....	I-40	118064	Type Pallet.....	I-38
117970	Spring Cushion Keytop.....	I-39	118065	Type Pallet.....	I-39
117971	Spring Cushion Keytop.....	I-40	118066	Type Pallet.....	I-39
117972			118067	Type Pallet.....	I-38
through	Spring Cushion Keytops.....	I-39	118068	Type Pallet.....	I-38
117977			118069	Type Pallet.....	I-39
117978			118070	Type Pallet.....	I-38
through	Spring Cushion Keytops.....	I-40	118071	Type Pallet.....	I-39
117981			118072	Type Pallet.....	I-38
117982	Spring Cushion Keytop.....	I-39	118073	Type Pallet.....	I-38
117983	Spring Cushion Keytop.....	I-40	118074		
117984	Spring Cushion Keytop.....	I-39	through	Type Pallets.....	I-39
117985	Spring Cushion Keytop.....	I-40	118076		
117989	Spring Cushion Keytop.....	I-39	118077	Type Pallet.....	I-38
117990	Spring Cushion Keytop.....	I-39	118078	Type Pallet.....	I-39
117991	Spring Cushion Keytop.....	I-40	118079	Type Pallet.....	I-39
117992	Spring Cushion Keytop.....	I-40	118081	Type Pallet.....	I-38
117994	Spring Cushion Keytop.....	I-40	118082	Type Pallet.....	I-38
117995	Spring Cushion Keytop.....	I-39	118083	Type Pallet.....	I-39
117996	Spring Cushion Keytop.....	I-39	118084	Type Pallet.....	I-39
117999	Spring Cushion Keytop.....	I-40	118265	Platen - Rubber Covered.....	I-28
118000	Spring Cushion Keytop.....	I-39	118267	Platen - Rubber Covered.....	I-28
118001	Spring Cushion Keytop.....	I-39	118281	Spacing Gear - Upper.....	I-69
118002	Spring Cushion Keytop.....	I-40	118282	Rack.....	I-69
118003	Spring Cushion Keytop.....	I-39	118484	Function Lever.....	I-35
118005	Spring Cushion Keytop.....	I-40	118485	Cover Plate.....	I-48
118010	Spring Cushion Keytop.....	I-39	118491	Blocking Bail.....	I-76

Part Number	Description	Page	Part Number	Description	Page
118836	Set of Type Pallets - Long Gothic Style.....	I-36	120021	Type Pallet.....	I-38
118837	Set of Type Pallets - Long Gothic Style.....	I-36	120023	Type Pallet.....	I-38
119180	Type Pallets.....	I-39	120024	Type Pallet.....	I-39
through 119182	Type Pallet.....	I-38	120025	Type Pallet.....	I-38
119183	Type Pallet.....	I-38	120026	Type Pallet.....	I-38
119184	Type Pallet.....	I-38	120027	Type Pallet.....	I-39
119185	Type Pallet.....	I-39	120028	Type Pallet.....	I-38
119186	Type Pallet.....	I-39	120029	Type Pallet.....	I-38
119187	Type Pallet.....	I-39	120031	Type Pallet.....	I-39
119188	Type Pallet.....	I-38	120033	Type Pallets.....	I-39
119189	Type Pallets.....	I-39	through 120035	Type Pallet.....	I-38
through 119198	Type Pallet.....	I-38	120036	Type Pallet.....	I-38
119199	Type Pallet.....	I-39	120037	Type Pallets.....	I-39
119200	Type Pallet.....	I-38	through 120039	Type Pallet.....	I-38
119201	Type Pallet.....	I-38	120040	Type Pallet.....	I-38
119202	Type Pallet.....	I-38	120041	Type Pallet.....	I-38
119203	Type Pallets.....	I-39	120042	Type Pallet.....	I-39
through 119206	Type Pallet.....	I-38	120049	Type Pallet.....	I-39
119207	Type Pallet.....	I-38	120052	Type Pallet.....	I-39
119235	Insulator.....	I-68	120053	Type Pallet.....	I-38
119465	Switch.....	I-58	120054	Type Pallet.....	I-39
119467	Insulator.....	I-52	120055	Type Pallet.....	I-39
119468	Collar.....	I-68	120056	Type Pallet.....	I-38
119469	Mounting Plate.....	I-68	120057	Type Pallets.....	I-39
119470	Arm.....	I-68	through 120061	Resistor (330 OHMS).....	I-59
119471	Switch Assembly.....	I-68	120452	Code Plate.....	II-2,3,4
119474	Screw (4-40 Special).....	I-68	120453	Code Plate.....	II-2,3,4
119486	Bracket.....	I-68	120456	Code Plate.....	II-3,4
119488	Switch Operating Bracket.....	I-58	120460	Code Plate.....	II-3,4
119534	Oil Wick.....	I-22	120490	Type Pallet.....	I-38
119540	Keyed Nut.....	I-16;IV-1	120498	Retainer.....	I-47
119629	Link.....	I-31,32	120575	Type Bar Bracket.....	I-22
119652	Retaining Ring.....	I-52	120593	Blade.....	I-61
119654	Retaining Ring.....	I-52	120683	Function Lever.....	I-35
119759	Cable Assembly.....	I-68	120684	Function Lever.....	I-35
119858	Cable.....	I-58	120685	Set of Parts to Provide Tearing Edge with Cover Glass.....	I-68
119860	Switch Mounting Bracket.....	I-58	120686	Glass.....	I-68
119861	Key Lever.....	I-58	120687	Blade.....	I-68
119862	Clamp Bracket.....	I-58	120713	Screw (4-40 x 1-1/16 Fil.)...I-3,52	
119881	Function Lever.....	I-35,54	120714	Hub.....	I-57;IV-4
119882	Function Lever.....	I-35,54	120720	Spring Cushion Keytop.....	I-39
119883	Bail.....	I-54	120725	Spring Cushion Keytop.....	I-40
119885	Stop Bracket.....	I-54	120726	Spring Cushion Keytop.....	I-40
119886	Screw (4-40 Eccentric Shoulder)I-54		120733	Spring Cushion Keytop.....	I-39
119887	Shield.....	I-61	120735	Spring Cushion Keytop.....	I-40
119925	Stop Nut.....	I-34;IV-3	120737	Spring Cushion Keytop.....	I-40
119975	Set of Parts for Paper-Out Device.....	I-68	120739	Spring Cushion Keytop.....	I-40
120012	Type Pallet.....	I-38	120743	Spring Cushion Keytop.....	I-40
120013	Type Pallet.....	I-39	120744	Spring Cushion Keytop.....	I-40
120014	Type Pallets.....	I-38	120745	Spring Cushion Keytop.....	I-39
through 120016	Type Pallet.....	I-38	120746	Spring Cushion Keytop.....	I-40
120017	Type Pallets.....	I-39	120747	Spring Cushion Keytop.....	I-39
through 120020	Type Pallets.....	I-39	120750	Spring Cushion Keytop.....	I-39

Part Number	Description	Page	Part Number	Description	Page
120751			120934	Type Pallet.....	I-39
through 120753	Spring Cushion Keytops.....	I-40	120935	Type Pallet.....	I-39
120754	Spring Cushion Keytop.....	I-39	120936		
120756	Spring Cushion Keytop.....	I-39	through 120940	Type Pallets.....	I-38
120761	Spring Cushion Keytop.....	I-39	120941	Type Pallet.....	I-39
120765	Spring Cushion Keytop.....	I-40	120942	Type Pallet.....	I-39
120770	Spring Cushion Keytop.....	I-39	120943	Type Pallet.....	I-38
120771	Spring Cushion Keytop.....	I-40	120944	Type Pallet.....	I-39
120772	Spring Cushion Keytop.....	I-40	120945	Type Pallet.....	I-39
120775	Spring Cushion Keytop.....	I-40	120946		
120778	Spring Cushion Keytop.....	I-39	through 120948	Type Pallets.....	I-38
120780	Spring Cushion Keytop.....	I-39	120949	Type Pallet.....	I-39
120781	Spring Cushion Keytop.....	I-40	121051	Bracket.....	I-22
120782	Spring Cushion Keytop.....	I-40	121052	Spring.....	I-22
120786			121057	Backstop Bracket.....	I-22
through 120788	Spring Cushion Keytops.....	I-39	121058	Range Finder and Line Test Key Door.....	I-47,48
120790	Spring Cushion Keytop.....	I-39	121095	Paper Guide Plate.....	I-67
120791	Spring Cushion Keytop.....	I-39	121096	Paper Guide Plate Assembly....	I-67
120792	Spring Cushion Keytop.....	I-40	121098	Paper Guide.....	I-61
120793	Spring Cushion Keytop.....	I-40	121102	Plate.....	I-52
120794	Spring Cushion Keytop.....	I-39	121103	Plate.....	I-52
120805	Spring Cushion Keytop.....	I-39	121104	Stud.....	I-52
120810	Spring Cushion Keytop.....	I-39	121107	Gear.....	I-52
120811	Spring Cushion Keytop.....	I-39	121108	Washer-Sirvene.....	I-52
120814	Spring Cushion Keytop.....	I-40	121112	Cam Assembly.....	I-52;IV-3
120815	Spring Cushion Keytop.....	I-39	121113	Handwheel.....	I-52
120816	Spring Cushion Keytop.....	I-39	121114	Washer.....	I-52
120834	Celluloid Keytop.....	I-40	121116	Gear Assembly.....	I-52
120835	Celluloid Keytop.....	I-40	121117	Stud.....	I-52
120870	Wick.....	I-11	121118	Bushing.....	I-52
120893	Celluloid Keytop.....	I-40	121119	Hub.....	I-52
120900	Type Pallet.....	I-38	121120	Collar.....	I-52
120901	Type Pallet.....	I-39	121122	Bushing.....	I-52
120902	Type Pallet.....	I-38	121123	Stud.....	I-52
120903	Type Pallet.....	I-39	121124	Collar.....	I-52
120904	Type Pallet.....	I-38	121125	Spring Washer.....	I-52
120905	Type Pallet.....	I-38	121127	Gear (33T).....	IV-4
120906	Type Pallet.....	I-39	121128	Gear (51T).....	IV-4
120907	Type Pallet.....	I-39	121130	Set of Parts to Provide Platen Indexing Feature on Sprocket Feed Printer.....	I-52;IV-4
120910			121173	Gear (20T).....	IV-4
through 120914	Type Pallets.....	I-39	121174	Gear (55T).....	IV-4
120915	Type Pallet.....	I-38	121175	Gear (20T).....	IV-4
120916	Type Pallet.....	I-38	121176	Gear (44T).....	IV-4
120917			121177	Gear (24T).....	IV-4
through 120919	Type Pallets.....	I-39	121178	Gear (44T).....	IV-4
120920			121179	Gear (28T).....	IV-4
through 120922	Type Pallets.....	I-38	121180	Gear (44T).....	IV-4
120924			121181	Gear (32T).....	IV-4
through 120927	Type Pallets.....	I-39	121182	Gear (44T).....	IV-4
120928	Type Pallet.....	I-38	121183	Gear (36T).....	IV-4
120929			121184	Gear (40T).....	IV-4
through 120931	Type Pallets.....	I-39	121186	Gear (33T).....	IV-4
			121187	Gear (39T).....	IV-4
			121188	Gear (42T).....	IV-4

Part Number	Description	Page	Part Number	Description	Page
121189	Gear (33T).....	IV-4	122368	Contact Spring.....	I-72
121190	Gear (45T).....	IV-4	122369	Guard.....	I-72
121191	Gear (48T).....	IV-4	122370	Cable.....	I-72
121196	Gear (22T).....	IV-4	122371	Lever.....	I-72
121213	Cable.....	I-60	122372	Bracket.....	I-72
121214	Set of Gears.....	IV-4	122373	Screw (6-40 Shoulder).....	I-72
121215	Set of Gears.....	IV-4	122375	Bracket.....	I-72
121216	Set of Gears.....	IV-4	122376	Cable.....	I-72
121218	Set of Gears.....	IV-4	122377	Switch.....	I-72
121219	Set of Gears.....	IV-4	122380	Bracket.....	I-58
121220	Set of Gears.....	IV-4	122382	Type Bar Guide.....	I-69
121221	Set of Gears.....	IV-4	122531	Paper Finger - Right.....	I-60
121223	Set of Gears.....	IV-4	122532	Paper Finger - Left.....	I-60
121224	Set of Gears.....	IV-4	122533	Spring.....	I-60
121225	Set of Gears.....	IV-4	122534	Spring.....	I-60
121226	Set of Gears.....	IV-4	122535	Shaft.....	I-60
121227	Set of Gears.....	IV-4	122536	Hub.....	I-60
121232	Set of Gears.....	IV-4	122541	Function Lever.....	I-35
121321	Cable.....	I-60	122542	Function Lever.....	I-35
121323	Insulating Sleeve.....	I-60	122741	Washer - Felt.....	I-16
121927	Strap.....	I-44	122744	Washer - Felt.....	I-16
122037	Magnet Bracket.....	I-71	122745	Washer - Felt.....	I-16
122039	Bracket.....	I-70	122752	Wick.....	I-16
122057	Switch.....	I-52	122754	Cam Sleeve.....	I-31
122059	Spring.....	I-16	122838	Spacer.....	I-16;IV-1
122065	Spring Cushion Keytop.....	I-40	122874	Function Lever.....	I-35,71
122089	Spring Cushion Keytop.....	I-40	122875	Type Pallet.....	I-39
122103	Spring.....	I-52	122876	Type Pallet.....	I-38
122104	Contact Lever.....	I-52	122877		
122208	Washer.....	I-57	through	Type Pallets.....	I-39
122293	Governed Motor.....	I-43	122881		
122297	Governed Motor.....	I-43	122882		
122301	Governed Motor.....	I-43	through	Type Pallets.....	I-38
122310	Type Pallet.....	I-38	122885		
122311	Type Pallet.....	I-38	122886	Type Pallet.....	I-39
122340			122887	Type Pallet.....	I-39
through	Type Pallets.....	I-39	122888	Type Pallet.....	I-38
122343			122889	Type Pallet.....	I-38
122346			122890	Type Pallet.....	I-39
through	Type Pallets.....	I-38	122891	Type Pallet.....	I-39
122348			122893	Type Pallet.....	I-39
122349			122895		
through	Type Pallets.....	I-39	through	Type Pallets.....	I-39
122352			122902		
122353	Type Pallet.....	I-38	122903	Type Pallet.....	I-38
122354	Type Pallet.....	I-39	122904	Type Pallet.....	I-39
122355	Type Pallet.....	I-38	122905	Type Pallet.....	I-39
122356	Type Pallet.....	I-39	122906	Type Pallet.....	I-38
122357	Type Pallet.....	I-39	122907	Type Pallet.....	I-39
122358	Type Pallet.....	I-38	122908	Type Pallet.....	I-39
122359	Type Pallet.....	I-39	122909	Type Pallet.....	I-38
122362	Set of Parts for Switch Cut-In and Automatic Cut-Out of Horizontal Tabulation Feature.....	I-72	122910	Type Pallet.....	I-39
122363	Plate.....	I-72	122911	Type Pallet.....	I-38
122364	Bracket.....	I-72	122912		
122365	Plate.....	I-72	through	Type Pallets.....	I-39
122366	Contact Bracket.....	I-72	122914		
122367	Guard.....	I-72	122915	Type Pallet.....	I-38

Part Number	Description	Page	Part Number	Description	Page
122916 through 122924	Type Pallets.....	I-39	123763	Apparatus Mounting.....	I-59
122974	Capstan Nut.....	I-16;IV-1	123764	Cam Follower.....	I-58
123005	Spring Cushion Keytop.....	I-40	123765	Cable.....	I-59
123006	Spring Cushion Keytop.....	I-40	123786	Stud.....	I-72
123012	Spring Cushion Keytop.....	I-39	123823	Washer.....	I-31
123013	Spring Cushion Keytop.....	I-40	123864	Insulator.....	I-31
123014	Spring Cushion Keytop.....	I-40	123865	Guard.....	I-31
123015	Spring Cushion Keytop.....	I-39	123933	Bracket.....	I-69
123017	Spring Cushion Keytop.....	I-40	123946	Plate.....	I-71
123018	Spring Cushion Keytop.....	I-39	123947	Plate.....	I-75
123021	Spring Cushion Keytop.....	I-40	123948	Pawl.....	I-75
123023	Spring Cushion Keytop.....	I-39	123949	Latch.....	I-75
123024	Spring Cushion Keytop.....	I-40	123953	Blocking Bail.....	I-71,76
123025	Spring Cushion Keytop.....	I-40	124033	Tabulator Bar.....	I-51;IV-3
123026	Spring Cushion Keytop.....	I-39	124034	Tabulator Stop.....	I-51;IV-3
123027	Spring Cushion Keytop.....	I-40	124035	Reset Stop.....	I-51;IV-3
123028	Spring Cushion Keytop.....	I-39	124420	Function Lever.....	I-35
123029	Spring Cushion Keytop.....	I-40	124421	Function Lever.....	I-35
123030	Spring Cushion Keytop.....	I-40	124477	Magnet Bracket.....	I-70
123033	Spring Cushion Keytop.....	I-39	124478	Resistor Bracket Assembly.....	I-70
123035	Spring Cushion Keytop.....	I-40	124480	Bracket.....	I-31
123036	Spring Cushion Keytop.....	I-39	124539	Release Lever.....	I-55
123037	Spring Cushion Keytop.....	I-40	124540	Spacer.....	I-55
123038	Spring Cushion Keytop.....	I-39	124541	Shaft.....	I-55
123039	Spring Cushion Keytop.....	I-40	124591	Cable.....	II-4
123040	Spring Cushion Keytop.....	I-39	124608	Instruction Card Holder.....	I-55
123041	Spring Cushion Keytop.....	I-39	124609	Window - Plastic.....	I-55
123042	Spring Cushion Keytop.....	I-40	124623	Pawl (with Hub).....	I-51
123043	Spring Cushion Keytop.....	I-39	124624	Pawl Extension.....	I-51
123044	Spring Cushion Keytop.....	I-40	124625	Space Pawl Assembly.....	I-51
123048	Spring Cushion Keytop.....	I-39	124681	Screw (6-40 Set).....	I-21
123049	Spring Cushion Keytop.....	I-40	124687	Type Pallet.....	I-39
123050	Spring Cushion Keytop.....	I-39	124688	Type Pallet.....	I-39
123051	Spring Cushion Keytop.....	I-40	124689	Type Pallet.....	I-38
123054	Spring Cushion Keytop.....	I-40	124690	Type Pallet.....	I-39
123056	Spring Cushion Keytop.....	I-40	124741	Lock Washer.....	I-27
123057	Spring Cushion Keytop.....	I-39	124842	Pressure Roller.....	I-55
123058	Spring Cushion Keytop.....	I-40	124876	Screw (2-56 x 1/4 Rd.Hd.).....	I-61
123059	Spring Cushion Keytop.....	I-39	124877	Screw (2-56 x 1/2 Rd.Hd.).....	I-61
123060	Spring Cushion Keytop.....	I-39	124915	Motor Control Relay.....	I-6
123061	Spring Cushion Keytop.....	I-58	124971	Switch Operating Bracket.....	I-60
123101	Celluloid Keytop.....	I-40	124973	Washer.....	I-29,32,60
123525	Modification Kit for Manually Controlled Two-Color Printing	I-70	124994	Post.....	I-23
123540	Cable Assembly.....	I-31	124999	Switch.....	I-60
123743	Counter Assembly.....	I-58	125002	Screw (8-32 x 3/8 Flat Hd.).....	I-1
123744	Accessory Box.....	I-58,59	125006	Screw (10-32 x 5/8 Flat Hd.).....	I-7
123745	Set of Parts for Line Feed Counting.....	I-58,59	125010	Washer - Fiber.....	I-4
123756	Apparatus Box.....	I-59	125011	Washer...I-3,22,23,24,25,27,31,4748,54,56,58,64,69,II-1;III-3	
123757	Bracket.....	I-59	125012	Lamp Socket.....	I-58
123758	Capacitor - 1 MF.....	I-59	125015	Washer...I-1,17,25,29,42,67,68,72	
123759	Contact Assembly.....	I-58	125112	Screw (2-56 x 1/8 Fil.).....	I-6
123760	Selector.....	I-59	125119	Screw (4-40 Shoulder).....	I-3,34,52 53,73;III-3
123761	Contact Bank.....	I-59	125120	Screw (6-40 Shoulder)...I-18,23,63	
123762	Apparatus Mounting.....	I-59	125122	Screw (2-56 x 3/4 Fil.).....	I-6,74
			125126	Screw (2-56 x 9/32 Fil.).....	I-63
			125138	Screw (2-56 x 3/8 Fil.).....	I-58
			125139	Screw (4-40 x 1/8 Fil.)...I-46,62,66	