CIRCULATION
GENERAL

HOUSE EXCHANGE SYSTEM.

PLUG & JACK WIRING FOR UNIT, TRANSFER INTERCOM., No. 2.
(WITH OR WITHOUT ADDITIONAL INDICATOR) USED AT
2ND CHOICE MAIN STATIONS.

Q(L) 205 21 6 35

2 PANELS – 1

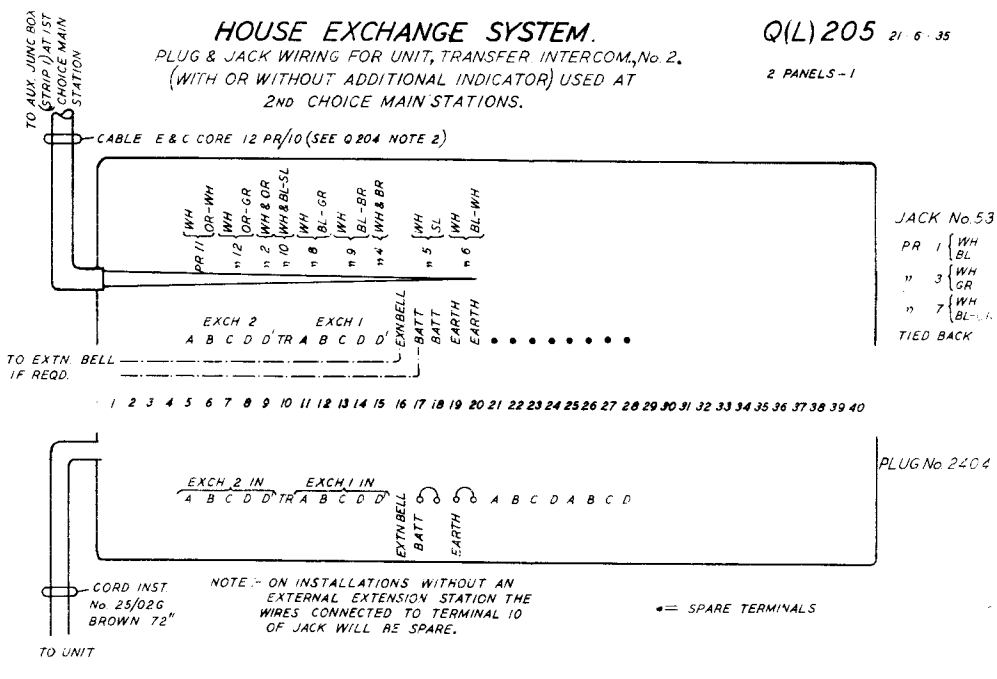

NOTE :- ON INSTALLATIONS WITHOUT AN EXTERNAL EXTENSION STATION THE WIRES CONNECTED TO TERMINAL 10 OF JACK WILL BE SPARE.

• = SPARE TERMINALS

AMENDMENT	
(L) added to Q 205	21.11.38 A

W

Q(L) 205

2 PANELS – 2

NOTE

CABLE FORMS FOR JACK WIRING FOR UNIT, TRANSFER, INTERCOM, No. 2.

(WITH OR WITHOUT ADDITIONAL INDICATOR) USED AT 2ND CHOICE MAIN STATIONS.

WHEN THE CABLE ENTRY IS TO BE AT POINT "B" OF THE JACK, REFER TO DIMENSIONS ABOVE THE CABLE FORM DIAGRAM

" " " " " " " " " "A" " " " " " " BELOW " " " "

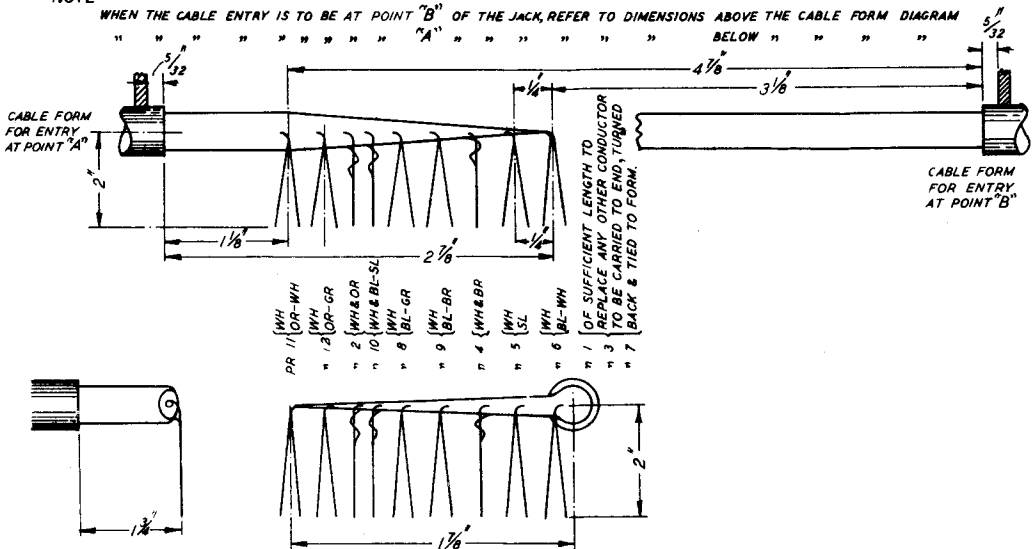

CABLE FORM FOR ENTRY AT POINT "C"

FOR POSITION OF ENTRY POINTS A, B & C AND POSITIONS IN WHICH THE JACK MAY BE PLACED SEE Q 204 (NOTE 2).