

**C.B. & AUTOMATIC SYSTEMS**  
**SUBSCRIBER'S EXTENSION PLAN IA (INTERNAL ONLY)**  
**ON EXTERNAL EXTENSION OF PLAN 7 OR 7A**  
**USING TELEPHONES Nos. 328... & 332...**

**NOTES:—**

**GENERAL**

1 The diagram shows a Plan IA Extension connected to the External Extension of a Plan 7 or 7A

2 Use Cable 4W to wire Generator No.26AP to block terminal


**PLAN 7 OR 7A EXTERNAL EXTENSION**

3 Remove existing cord, inst. and block terminal from telephone and fit Cord Inst. No. 4/57B... and Block Terminal No.35A. Remove Strap T1-T2

**PLAN IA EXTENSION**

4 Fit Cord Inst. No.4/57B... and Block Terminal No.35A to Telephone No.328... . Remove Straps T10-T11-T12 and connect Strap T1-T2. Fit Key No.302B-1 and connect to T2 and T12 to short circuit these terminals when the key is normal and open circuit when the key is depressed. Fit Part No.1/DPL/358 and Label No.252C to case

5 On earlier installations a Key No.304A may have been fitted and Springs K11 & K12 connected to T2 & T12 respectively

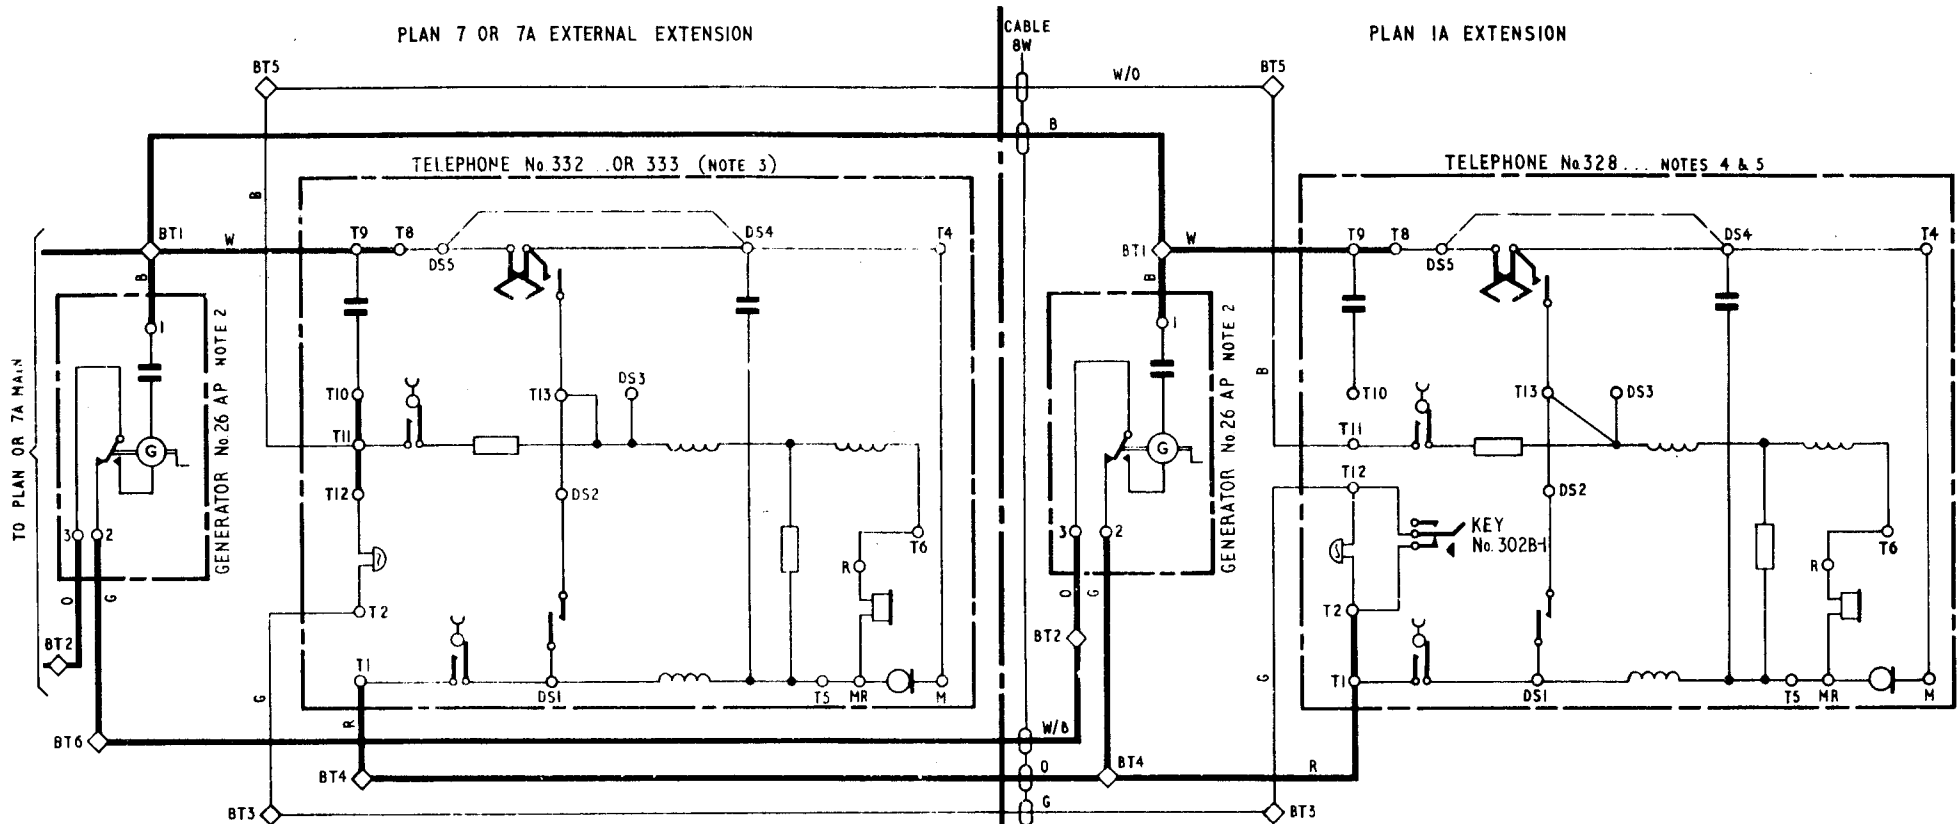

PO TELECOMMS HQRS  PAPER:— Y  DISTN: CB & AUTO	ISSUE			
	B	NEW FORMAT MINOR AMENDMENTS MADE YELLOW	T0 2-3-1	25-1-74
	A	NOTES AMENDED JFM KMA	S1	7-4-59