CIRCULATION

CBS 2,3 &


MAGNETO

SWITCHBOARDS B.E. MAGNETO. (SWBDS. W.P., SINGLE CORD N.T.)

N.917. 1.5.23.

CONNECTED TO CONDENSERED MAGNETO EXCHANGES, OR TO C.B. EXCHANGES USING L.B. TELEPHONES.(SEE NOTES)

WITH CALLING-IN FACILITIES.
WITHOUT PROHIBITION OF EXCH. SERVICE.

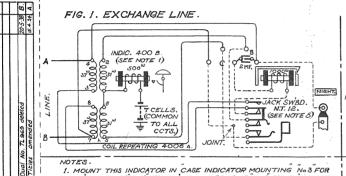

- . MOUNT THIS INDICATOR IN CASE INDICATOR MOUNTING No 8 FOR SWEDS. N.T. 3, No 4 FOR SWEDS. N.T. 5 OR 6 OR No 5 FOR SWEDS. N.T.T. THE CASE INDICATOR MOUNTING TO BE FITTED IN PLACE OF SWITCHBOARD TERMINAL COVER.
- 2. WHERE CENTRE POINT OF BELL IS NOT WIRED TO A TERMINAL CONNECT PRESS BUTTON TO B LINE.
- 3. FOR WIRING OF SWITCHBOARD AS ISSUED SEE DIAGRAM T.L. 963.
- 4. DOTTED LINES REPRESENT NORMAL CONNECTIONS OF APPARATUS AS ISSUED, FULL LINES CONNECTIONS TO BE MADE LOCALLY.
- 5. FIT THIS JACK IN WOODWORK BELOW BOTTOM STRIP, CONNECT EXCH.
 LINE TO EQUIPMENT IN THAT STRIP & TRANSFER WIRES TO JACK AS SHOWN,
 DISUSED JACK TO BE PEGGED UP.
- 6."HOLD "VACK WILL BE FITTED ON ALL SIZES OF SWITCHBOARD.


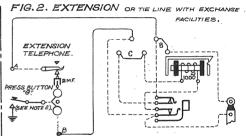


FIG.3. OPERATORS TELEPHONE.



W

mendmen