
AUTODIAL No 105A 46 ADDRESS, PRESS-BUTTON REPERTORY DIALLER WITH MF SIGNALLING

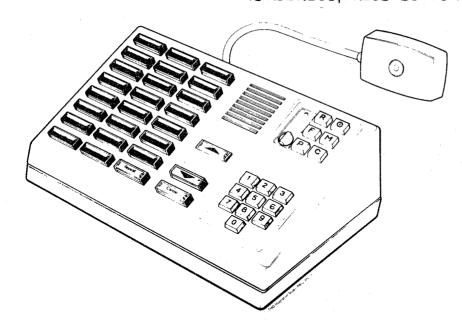

REFERENCES :-

FACILITIES

INSTALLATION

MAINTENANCE

POWER UNIT No.53 ...

TI B4 M0057


TI C3 S0105 TI E5 F3215

DGM N631


NOTES:-

- I. APPARATUS TO BE REQUISIONED SEPARATELY: 2 BATTERIES SECONDARY No.22 POWER-UNIT No.53
- 2. THE POWER-UNIT No.53 SHOULD BE FITTED ADJACENT TO A 3 PIN MAINS SOCKET IN ACCORDANCE WITH DIAGRAM NGSI.
- 3. THE LENGTH OF CABLE BETWEEN THE POWER-UNIT AND THE BT OF THE AUTODIAL SHOULD NOT EXCEED 25M.
- 4. FIT BOTH BATTERIES SECONDARY No. 22 IN THE COMPARTMENT BENEATH THE AUTODIAL AND CONNECT TO THE 2 PIN PLUGS PROVIDED.

TAKE CARE NOT TO DAMAGE ANY WIRES WHEN REPLACING THE COVER TO THE BATTERY COMPARTMENT.



CONNEXIONS

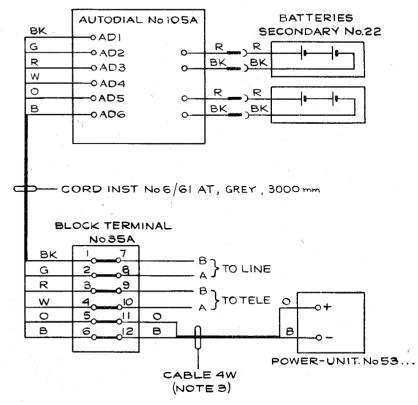

- 5. SINGLE LINE INSTALLATIONS CONNECT THE INCOMING LINE DIRECTLY TO AUTODIAL TERMINALS ADI, ADZ. ALL TELEPHONES AND EXTENSION BELLS SHOULD BE CONNECTED BEHIND THE AUTODIAL TO TERMINALS ADS, AD4
- 6. MULTI-LINE INSTALLATIONS THE AUTODIAL CAN ONLY BE CONNECTED TO ONE SELECTED EXCHANGE LINE AND SHOULD BE WIRED IN ACCORDANCE WITH NOTE 5
- 7, NO ATTEMPT SHOULD BE MADE TO OPEN THE AUTODIAL. THE ONLY FIELD REPLACEABLE PARTS ARE :-

BATTERIES SECONDARY No.22 CORD INST No.6/61 AT, GREY 3000 mm BLOCK TERMINAL No. 35A