



**CB & AUTOMATIC SYSTEMS**  
**SUBSCRIBERS EXTENSION PLAN 1 ON STANDARD PABX's & PMBX's**  
**WITH ENQUIRY, TRANSFER & OPERATOR RECALL FACILITIES**

**NOTES:-**

- From one to six Extensions may be fitted in addition to the Main. The facilities given by Plan 1 are shown on Dgm. N1424. The inter-station cabling and the types of terminal block for stations in continuous run are as follows:-

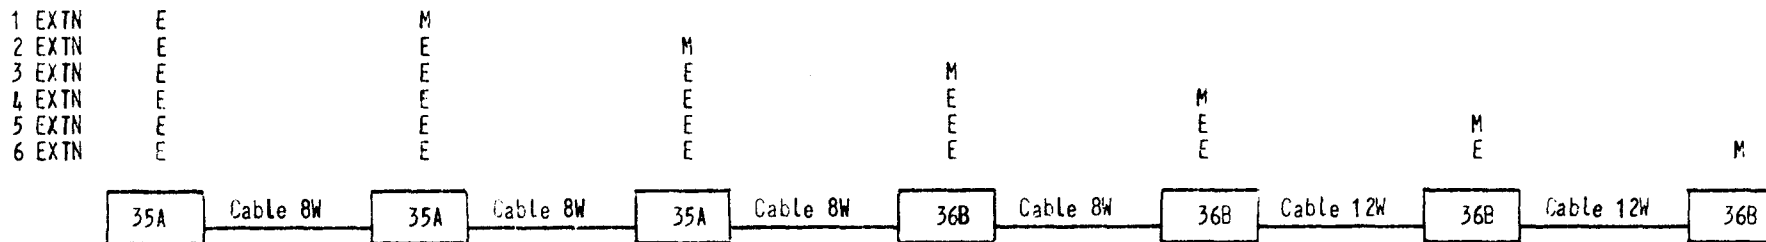

- A branching run in two directions from the Main may be adopted, also the A B & Earth Wires may be connected to the block terminal at an Extension if this is nearer the lead in than the Main.
- Set control plate of Key No. 304A as shown on Dgm. N4301 Fig. 1.
- When using Telephone No. 321... or Telephone No. 327... the block terminal may be omitted if desired.
- When an extension bell is required connect in place of strap between BT1 & BT2 at Main.
- When only one Extension is required wire as for Last Extension and connect BT5 at Main to BT4 at Extension.
- The Label No. 352 should be engraved.

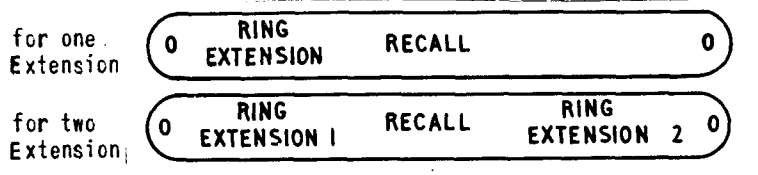

P.O TELECOMMS HQRS COLOUR:-Y DISTN:- CB & AUTO	<b>ISSUE</b>		
	A	NEW FORMAT, MINOR AMENDMENTS <i>TK</i>	26 - 3 - 74
		J H COMBRIDGE	13 - 11 - 1958

APPARATUS SCHEDULE


MAIN		EXTENSIONS
USING TELEPHONE NO. 328...	USING TELEPHONE NO. 321...	USING TELEPHONE NO. 326C.B
<p><b>WITH ONE EXTENSION:-</b>            Telephone No. 328...            Key No. 304A (Note 3)            2 Parts No. 1/SPL/325            Label No. 352 (Dgm. N620) (Note 6)            Cord Inst. No. 6/21B            Block Terminal No. 35A</p> <p><b>WITH TWO EXTENSIONS:-</b>            Telephone No. 328...            Key No. 304A (Note 3)            3 Parts No. 1/SPL/325            Label No. 352 (Dgm. N620)            Cord Inst. No. 7/05B            Block Terminal No. 35A</p> <p><b>WITH THREE TO SIX EXTENSIONS:-</b>            Telephone No. 328...            Key No. 304A (Note 3)            3 Parts No. 1/SPL/325            Label No. 352 (Dgm. N620)            Cord Inst. No. 7/05B            Block Terminal (Note 1)            Press Button 'G' for 3rd and subsequent Extensions</p>	<p><b>WITH ONE EXTENSION:-</b>            Telephone No. 321...            Key No. 304A (Note 3)            2 Parts No. 1/DPL/361            Label No. 352 (Dgm. N620) (Note 6)            Block Terminal No. 35A</p> <p><b>WITH TWO EXTENSIONS:-</b>            Telephone No. 321...            Key No. 304A (Note 3)            3 Parts No. 1/DPL/361            Label No. 352 (Dgm. N620)            Block Terminal No. 35A</p> <p><b>WITH THREE TO SIX EXTENSIONS:-</b>            Telephone No. 321...            Key No. 304A (Note 3)            3 Parts No. 1/DPL/361            Label No. 352 (Dgm. N620)            Press Button 'G' for 3rd and subsequent Extensions</p>	<p>Telephone No. 326 C.B Minus cord            Dial Auto No. 21 FA } For auto systems only            Cord Inst. No. 5/28E }            Cord Inst. No. 5/14B            Key No. 302A-1            Part No. 1/SPL/325            Label No. 252J            Block Terminal (Note 1)</p>
		USING TELEPHONE NO. 327...
		<p>Telephone No. 327            Key No. 302A-1            Part No. 1/DPL/361            Label No. 252J            Block Terminal (Note 1)</p>

WIRING


LAST

INTERMEDIATE

MAIN

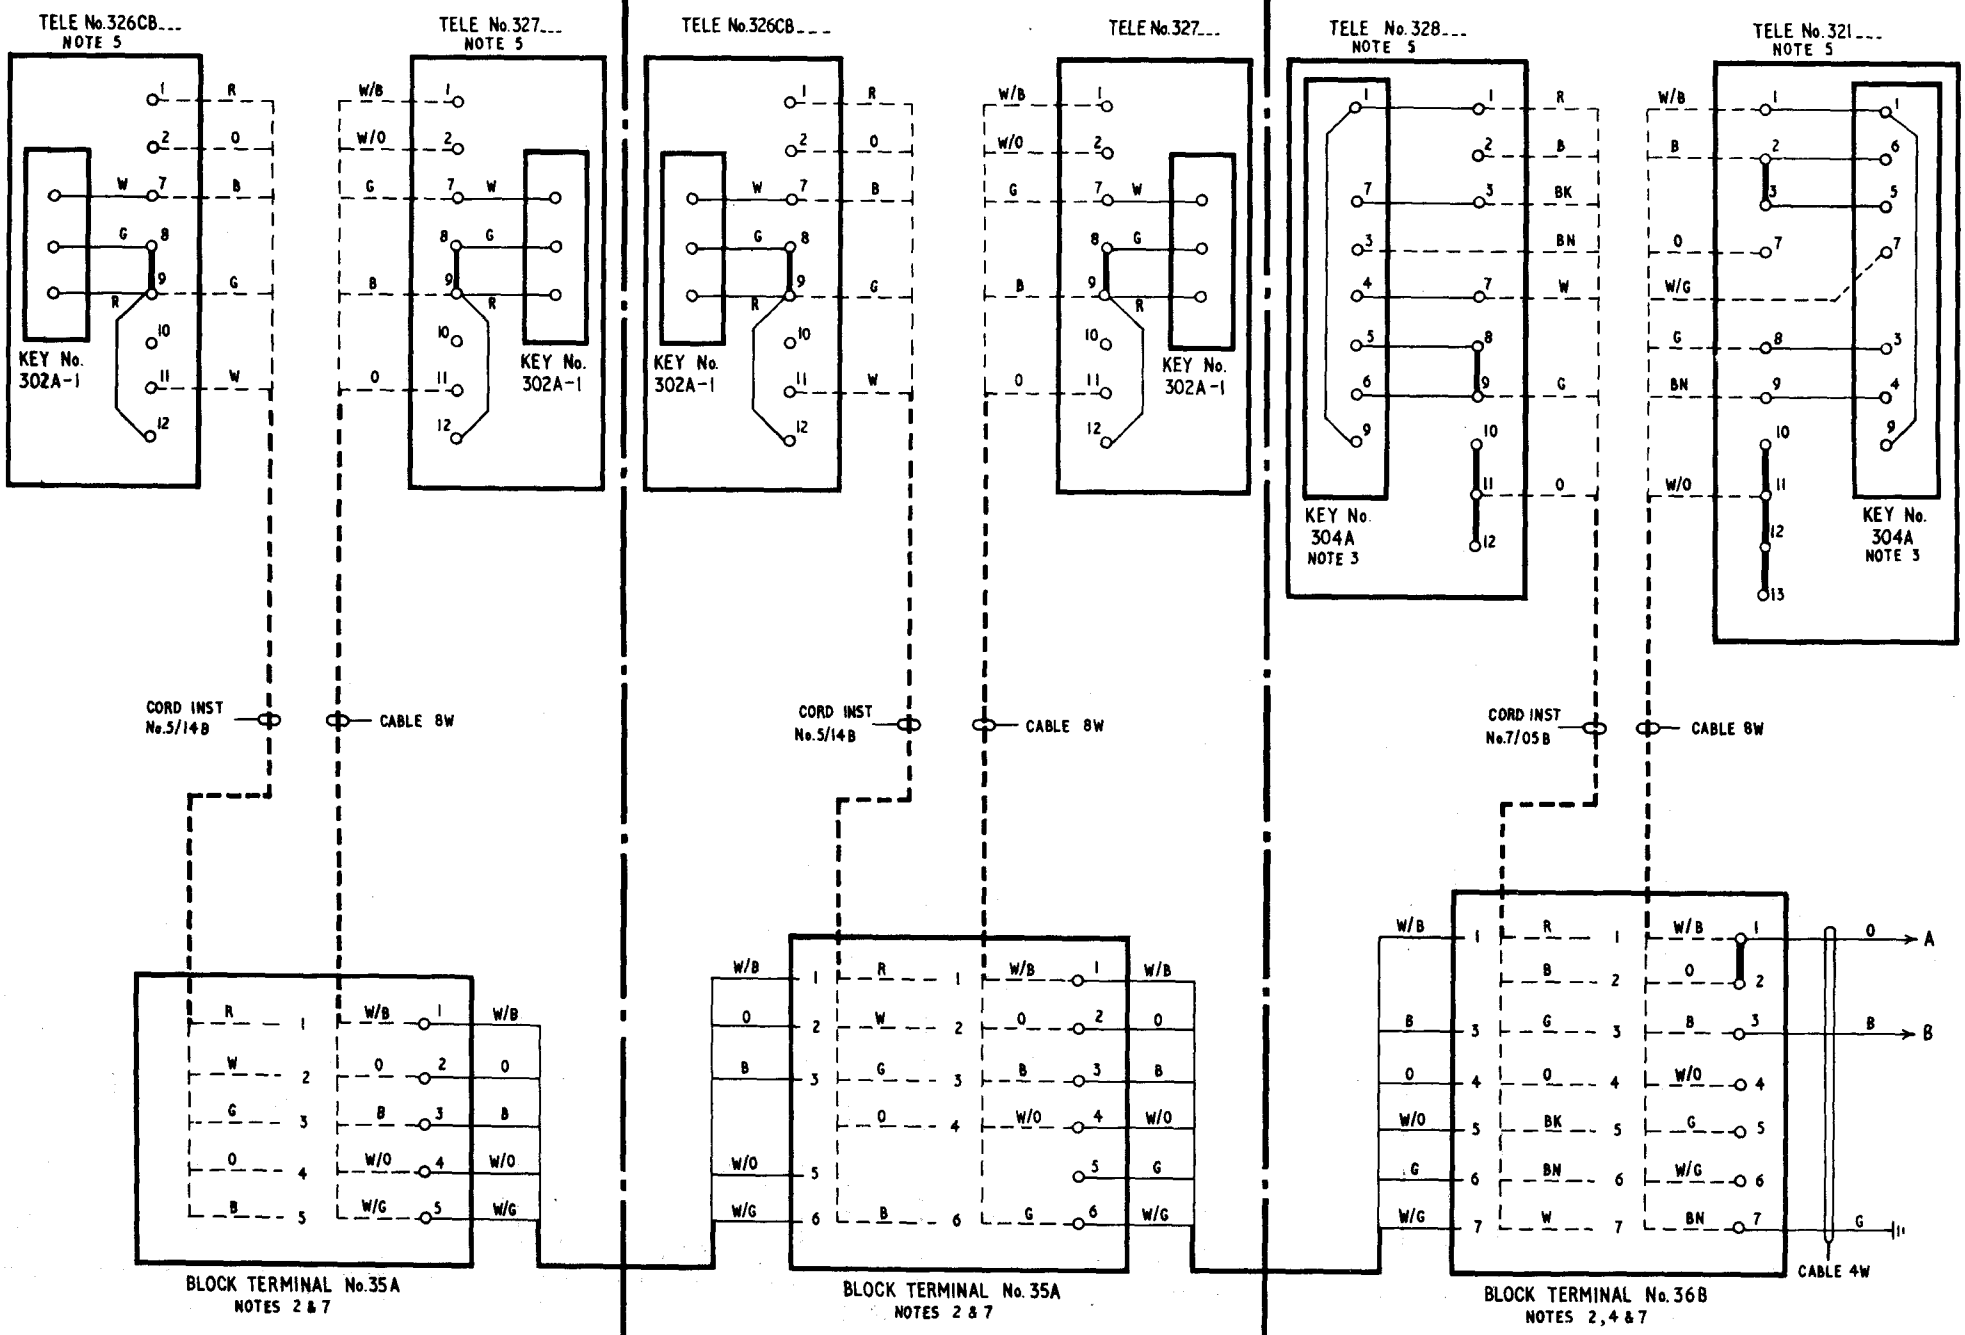

EXPLANATORY  
USING TELES No.327 & No.321

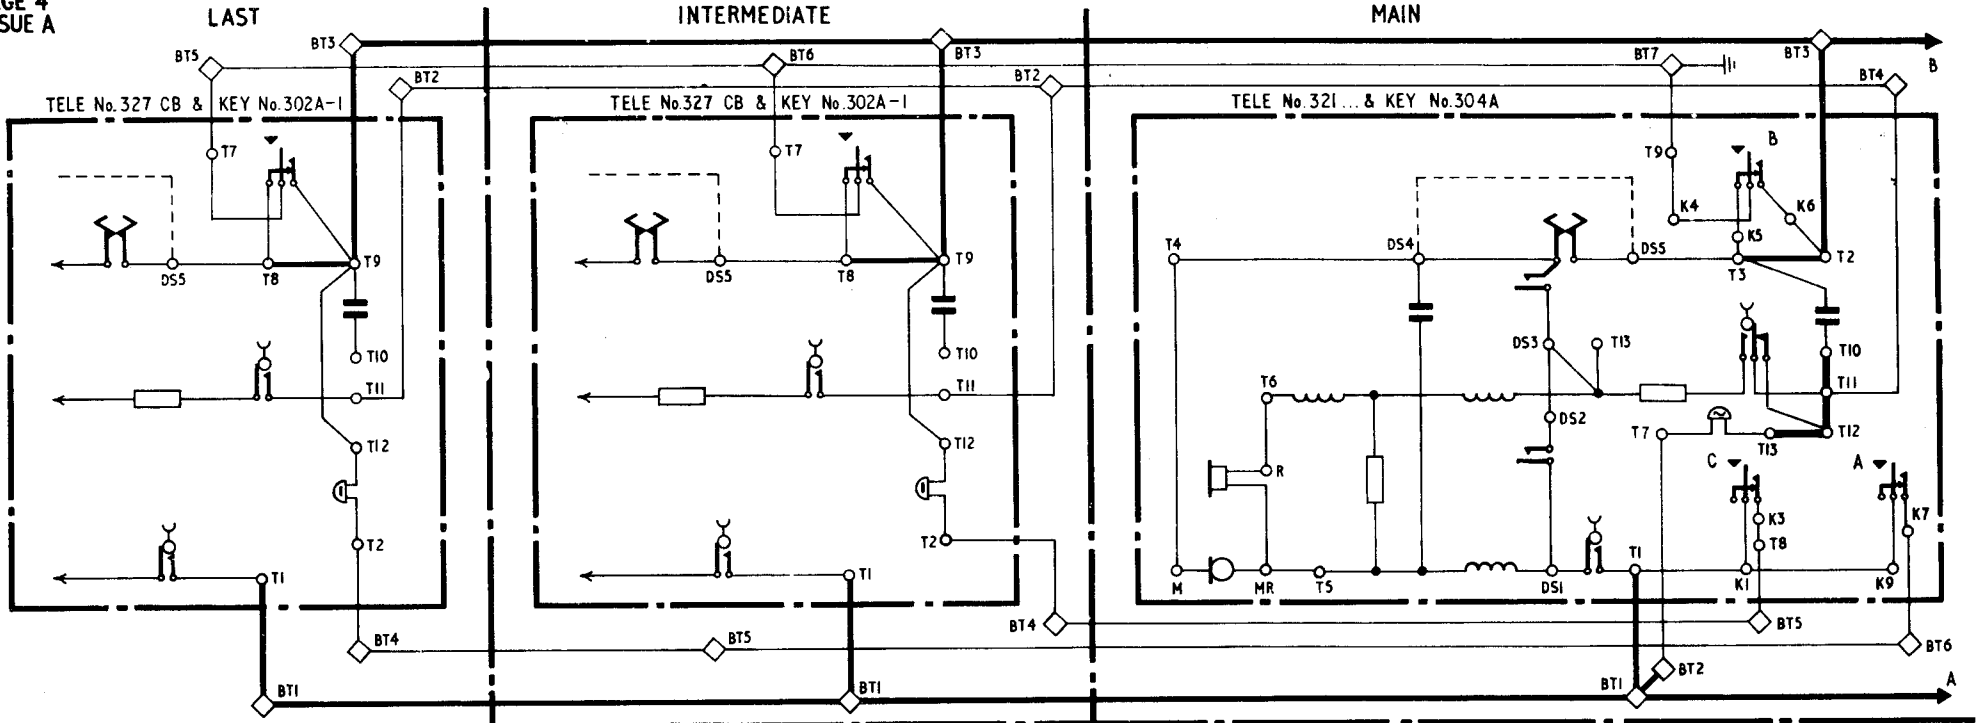

USING TELES No. 326 & No.328

