

CIRCULATION


GENERAL

HOUSE EXCHANGE SYSTEM. UNIT TRANSFER INTERCOM. No.1. UNIT TO PLUG WIRING.

Q(L)142.

2 PANELS — 2.

4 7 39.

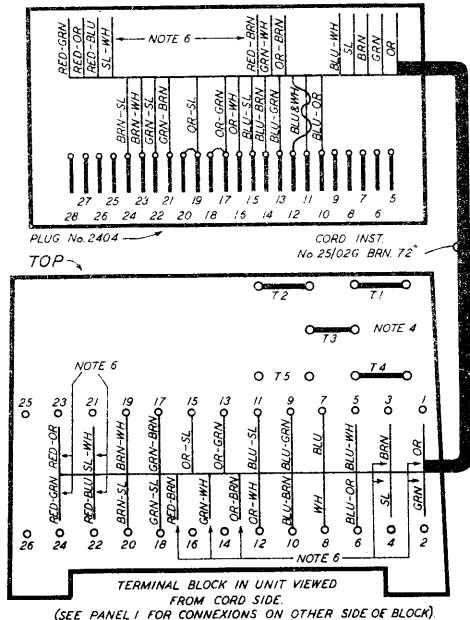

ITEMS	RATE BOOK DESCRIPTION.
B	BELL No. 56E.
Q.A	CONDENSER MC No. 102.
EXCH INDR.	INDICATOR No. 400K.
EXTN. "	" No. 400K (NOT SUPPLIED WITH UNIT, SEE NOTE 5)
KA	KEY No. 68 BLACK.
KB	" No. 73 "
PB	PRESS BUTTON "R"
MRA	RECTIFIER ELEMENT No. 1/64.
G	RELAY No. 4127

NOTES

1. EXPLANATORY DIAGRAM — SEE Q(L)132.
2. FACEPLATE EQUIPMENT — SEE Q(L)153.
3. RELAY ADJUSTMENTS — SEE 'E.I. TELES. AUTO B 5/44.
4. WHEN A 2ND CHOICE MAIN STATION IS FITTED REMOVE STRAPS T1, T2, T3 & T4 AT 1ST CHOICE MAIN STATION UNIT.
5. WHEN UNIT IS USED AS 2ND CHOICE MAIN STATION ON INSTALLATIONS HAVING AN EXTERNAL EXTENSION ADDITIONAL INDICATOR & CONNEXIONS SHOWN THUS ——— TO BE PROVIDED (THE NECESSARY WIRES EXIST IN THE CABLE FORM).
6. SPARE CONDUCTORS.

2 PANELS - 1.

