
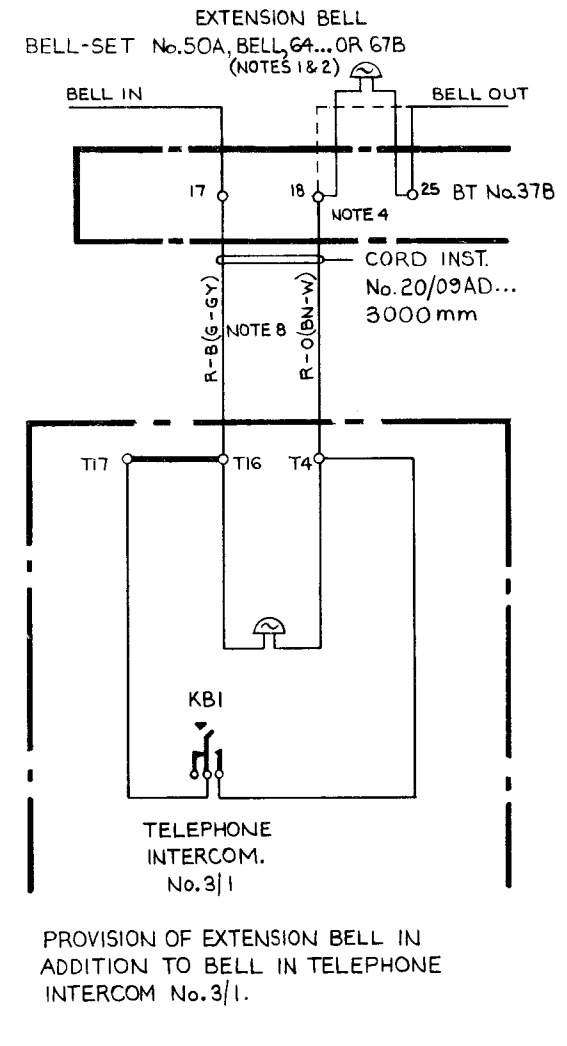


NOTES:-

- 1 NOT MORE THAN FIVE MAGNETO BELLS CAN BE RUNG IN SERIES EXCEPT AT UAX's WITH VIBRATOR RINGING WHEN THE LIMIT IS TWO.
- 2 T1 C3MO060 DESCRIBES EXTENSION BELLS AND BUZZERS AND THEIR APPLICATIONS.
- 3 REMOVE STRAP BETWEEN TERMINALS T16-T17 IN TELEPHONE INTERCOM No.3|1. SHIFT RED-BLUE CORD CONDUCTOR FROM TERMINAL T16 TO T17.
- 4 REMOVE MULTIPLE CABLE CONNEXION SHOWN DOTTED ON TERMINAL 18 AND RECONNECT ON TERMINAL 25.
- 5 FIG. 4 APPLIES AT STATIONS WHERE THE "BAR OR NS" CONDUCTOR IS NOT IN USE.
- 6 MULTIPLE CABLE CONNEXION SHOWN DOTTED ON TERMINAL 19 IN BT 37B IS MOVED TO TERMINAL 24, AND THE RED-BLACK CONDUCTOR ON TERMINAL 25 OF TELEPHONE INTERCOM No. 3|1 IS MOVED TO TERMINAL 33.
- 7 FIG. 5 APPLIES WHEN THE "BAR OR NS" CONDUCTOR IS IN USE. CORD INST.No.20|09AD... IS CHANGED FOR A CORD INST No.25|06AD... 3000mm. CONDUCTORS 1-20 TO BE CONNECTED AS SHOWN ON DGM.Q422 A SPARE CONDUCTOR IS USED TO CONNECT TERMINAL 24 IN THE BT TO TERMINAL 33 IN THE TELEPHONE INTERCOM No.3|1. OTHER SPARE CONDUCTORS TO BE INSULATED AND NEATLY SECURED IN THE BT AND TELEPHONE.
- 8 CORD CONDUCTOR COLOURS SHOWN IN BRACKETS REFER TO CORD INST. No.20|03AJ...


MAGNETO EXTENSION BELL FOR
FIG.1 EXCHANGE LINE CIRCUIT FIG.2 (NOTE 1)

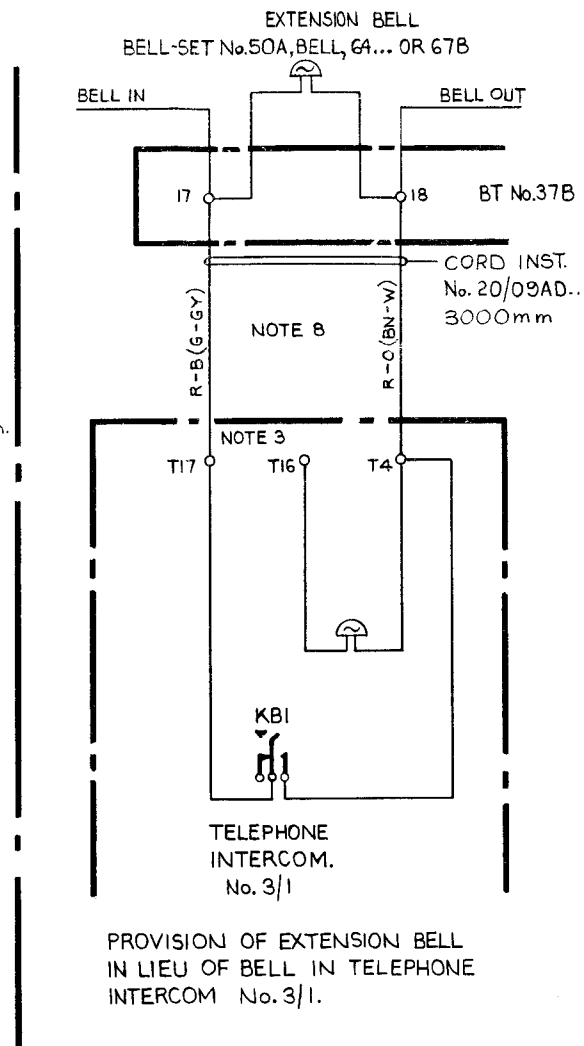

PO TELECOMMS HQRS	ISSUE				
		B	NEW FORMAT, CORD WAS 20 03AJ NOTES RENUMBERED <i>2008</i>	TD 7. 2. 3	29-11-74
		A	NOTE 7 ADDED, MINOR AMENDMENTS		26.2.64

MAGNETO EXTENSION BELL FOR
EXCHANGE LINE CIRCUIT

FIG. 3

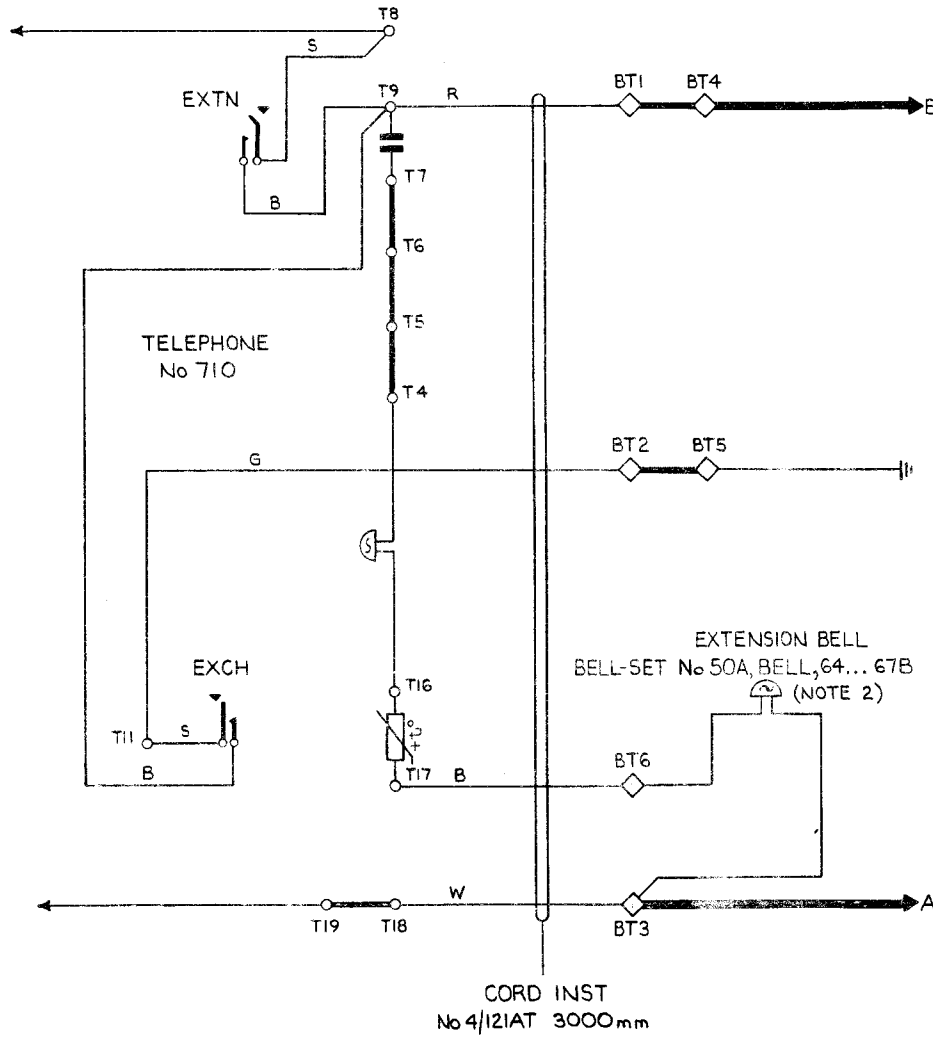

PROVISION OF EXTENSION BELL AT NON-MULTIPLE EXTENSION

EXTENSION BELL OR BUZZER FOR
INTERCOM SIGNALLING CIRCUIT

FIG. 4
(NOTE 5)

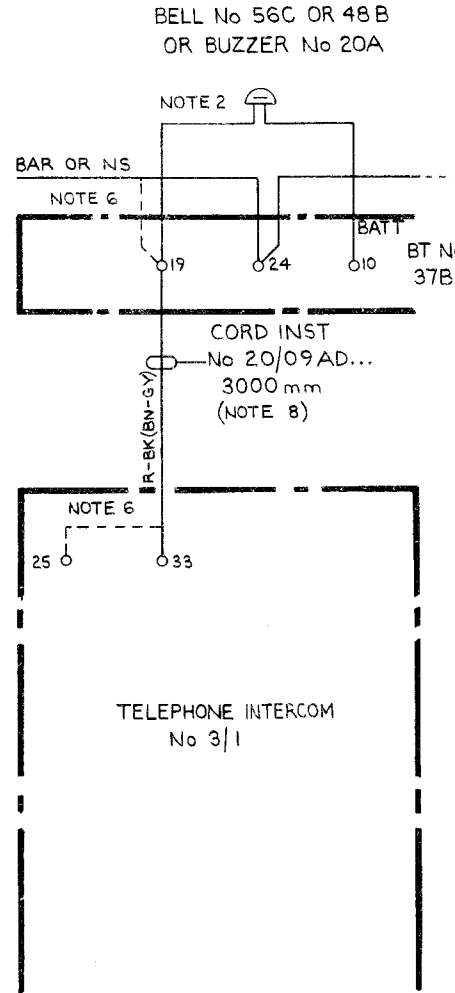


FIG. 5
(NOTE 7)

