

H.E.S.No.4

NON-MULTIPLE EXTENSION
PLAN 4 (INTERNAL ONLY)
USING TELEPHONE No. 710...

POED. S. BCH.	ISSUE		
PAPER :- W CIRCULATION :- GENERAL		<i>[Signature]</i>	5/1/3
			14-2-66



Q (L) 554

PAGE 2-3

ISSUE

NOTES :-

1. FACILITIES OF PLAN 4 ARE SHOWN ON DGM. N1427.
2. APPARATUS REQUIRED
1 BELL SET NO. 26
1 TELEPHONE NO. 710...
2 SWITCHES NO. 5A-4
1 PART 22/DBU/260
1 PART 23/DBU/260
1 PART 1/DPL/378
1 PART 1/DPL/379
1 PLUG NO. 420 GREY WITH CORD INST. 4/97 AD GREY 72 IN.
1 THERMISTOR NO. 1A-1
JACK NO. 95A AT MAIN AND EACH EXTENSION.
3. CONNECT CORD INST. NO. 4/97AD GREY 72 IN. TO TELEPHONE NO. 710... AND REARRANGE STRAPS AS SHOWN.
4. WHEN EXTN. BELL IS REQUIRED CONNECT IN PLACE OF STRAP BETWEEN TERMINALS 2 AND 3 OF BELL SET NO. 26. TOTAL NUMBER OF BELLS INCLUDING BELL IN TELEPHONE NO. 710... MUST NOT EXCEED THREE.
5. ONLY ONE TELEPHONE NO. 710... WITH CORD INST. NO. 4/97AD AND PLUG NO. 420 MAY BE PROVIDED.
6. REMOVE PLUNGERS FROM POSITIONS B AND C, FIT SWITCH 5A-4 WITH PART 1/DPL/379 IN POSITION B, FIT SWITCH 5A-4 WITH PART 1/DPL/378 IN POSITION C AND ADJUST LATCH BRACKET AS SHOWN BELOW. IN TELEPHONE COVER FIT PART 22/DPL/260 IN POSITION B, FIT PART 23/DPL/260 IN POSITION C.

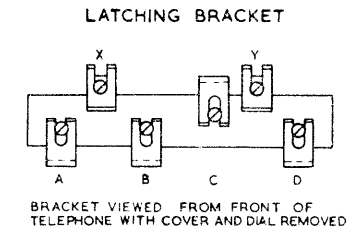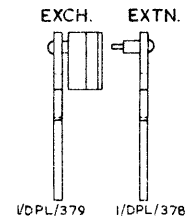

7. EXTENSION SWITCH (LOCKING) OPERATES SINGLY TO RETURN LOOP TO THE MAIN STATION. EXCHANGE SWITCH (NON LOCKING) ALSO OPERATES EXTENSION SWITCH CONTACTS PROVIDING EARTHED LOOP CALLING TO SWITCH RELAY UNIT Q 519.
8. ANY SPARE LEADS SHOULD BE SECURED ON SPARE TERMINALS OR ELECTRICALLY INSULATED.

